

LELO

BILLY™ 2

USER MANUAL

BEDIENUNGSANLEITUNG

MANUEL D'UTILISATION

MANUAL DE USUARIO

MANUALE D'USO

使用指南 - 使用說明書



**Finally, pleasure you can get behind. Use it often,
wisely and with care.**


Congratulations on acquiring BILLY 2. Before getting more closely acquainted with it, please take a moment to look through this user manual.

IMPORTANT: Your pleasure object has been locked for transportation. To unlock, simply connect the charger or see below.

GETTING STARTED

- Before first use, charge your BILLY 2 for 2 hours.
- Unlock by pressing and holding the + and - buttons together for 3 seconds until the light turns on.
- Press + button to turn on; press again to increase the vibration strength.
- Press ▲ and ▼ buttons to switch between the 8 vibration patterns.
- Press – button to reduce vibration strength.
- Press and hold – button to turn off.

GETTING TO KNOW YOUR BILLY 2

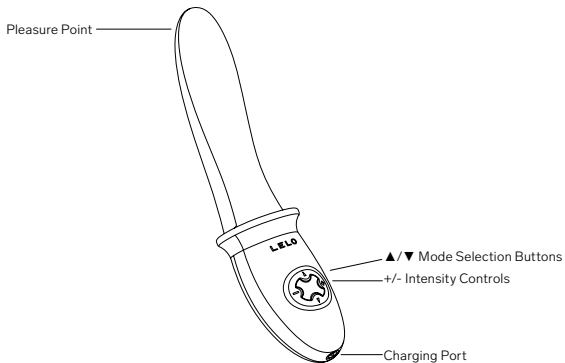

USING BILLY 2

- How to hold




Tip: For an even more pleasurable sensation, apply a liberal amount of LELO Personal Moisturizer to your body and to BILLY 2 before and during use.



CHARGING YOUR BILLY 2

- Insert the DC plug into the DC port at the base of your BILLY 2.
- Insert the mains plug into a wall socket. The LED on the interface of your BILLY 2 will pulse to indicate it is charging. When it is fully charged (after c. 2 hours), the LED will emit a steady glow.
- When the battery is running low, the LED on your BILLY 2 will emit a blinking white light.

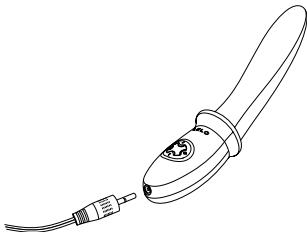

Only use original chargers provided by LELO with your BILLY 2.

CLEANING, STORAGE, AND SAFETY

- Using BILLY 2 with hand creams or silicone-based lubricants may make the silicone permanently tacky.
- BILLY 2 is fully waterproof, making cleaning simple. Rinse and spray with LELO Toy Cleaner, then rinse again and allow to dry.
- Always clean your BILLY 2 thoroughly before and after each use. You can wash the silicone with warm water and antibacterial soap, rinse with clean hot water and pat dry with a lint-free cloth or towel. Never use cleansers containing alcohol, petrol or acetone.
- Avoid leaving your BILLY 2 in direct sunlight and NEVER expose it to extreme heat. Store your BILLY 2 in a dust-free place and keep it away from products of other materials.

TROUBLESHOOTING

The LED on your BILLY 2 does not pulse when the charger is connected:

- The battery is drained and will require several minutes to acknowledge that it is being charged.
- The charger is not properly connected. Check wall and DC sockets.

Your BILLY 2 does not activate when the center button is pressed:

- The battery is empty. Recharge your BILLY 2.
- The interface of your BILLY 2 is locked. Hold down + and – for 5 seconds.

If you experience any other problems with your BILLY 2 or if you have any questions regarding operation, please contact: **customer@lelo.com**

SPECIFICATIONS

| | |
|-----------------------|-------------------|
| MATERIALS | Silicone, PC, ABS |
| INTERFACE | 4-button |
| FREQUENCY | 120Hz |
| BATTERY | Li-Ion 500mA 3.7V |
| CHARGE TIME | Up to 2 hours |
| USER TIME | Up to 4 hour |
| STANDBY TIME | 90 days |
| SIZE | 174 x 35 x 29 mm |
| INSERTABLE LENGTH | 100 mm |
| WEIGHT (ONLY PRODUCT) | 92g |

REGISTER WARRANTY

To activate your 1-Year Limited Warranty, register the number provided on the LELO Authenticity Card at LELO.COM/SUPPORT.

1-YEAR WARRANTY

LELO warrants this pleasure object for a period of ONE (1) YEAR, after the date of original purchase, against defects due to faulty workmanship or materials. The warranty covers working parts that affect the function of the pleasure object. It does NOT cover cosmetic deterioration caused by fair wear and tear or damage caused by accident, misuse or neglect. Any attempt to open or take apart the pleasure object (or its accessories) will void the warranty. If you discover a defect and notify LELO during the warranty period, LELO will, at its discretion, replace the pleasure object free of charge. Claims under warranty must be supported by reasonable evidence of the date of claim is within the warranty period. To validate your warranty, please keep your original purchase receipt together with these warranty conditions for the duration of the warranty period. To claim your warranty, you must log in to your account at LELO.COM then select the option to make a warranty claim. Shipping costs are non-refundable. This undertaking is in addition to consumer's statutory rights and does not affect those rights in any way.

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):

The crossed-out dustbin symbol indicates that this pleasure object should not be treated as household waste, but rather be brought to the appropriate collection point for recycling of electrical and electronic equipment.



Disclaimer: Users of this product do so at their own risk. Neither LELO nor its retailers assume any responsibility or liability for the use of this product. Changes or Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Model may be changed for improvements without notice.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF exposure statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

© 2019 LELOi AB. ALL RIGHTS RESERVED.

DESIGNED AND DEVELOPED BY LELO SWEDEN

MANUFACTURED FOR LELO IN CHINA

WEBSITE: WWW.LELO.COM

SUPPORT: CUSTOMERCARE@LELO.COM

www.lelo.com