


# Fuegobird

Instruction  
Manual

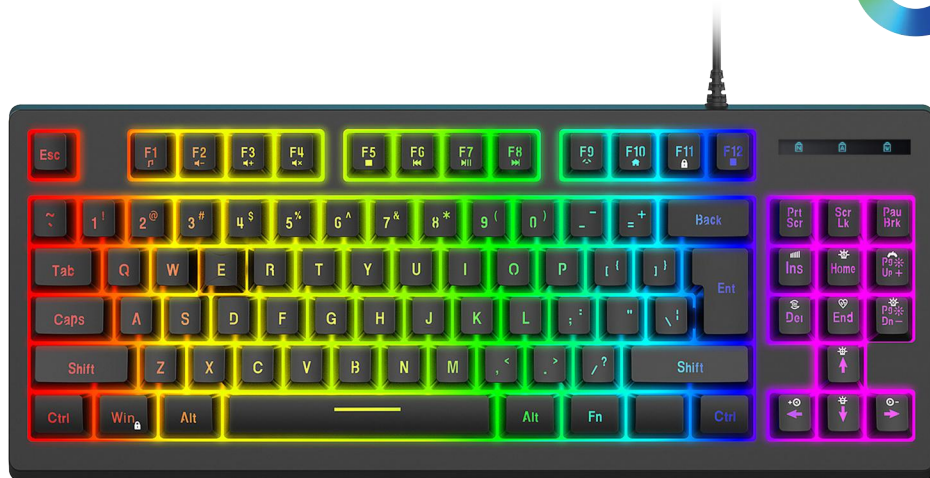

## V100 87-KEY COOL LIGHTING KEYBOARD

**Product function introduction: //////////////////////////////////////**

Keyboard features:

1. 87-key design, stylish office game.
2. Membrane keyboard design, light touch feeling.
3. Full-speed interface USB2.0, support 1000 report rate.
4. Support 25-key conflict-free input.
5. Support 6 kinds of stunning backlight effects.
6. Support lock WIN function and full lock keyboard.
7. The service life of the switch is more than 10 million times.
9. The total stroke of the button is 3.6MM, and the maximum bounce time is 5ms.
8. Supported operating systems: WinXP/Win7/Win8/Win10/Android/Mac OS, etc.

## **Backlight Adjustment Instructions://////////**

1. **FN + DEL** Wave / Colorful Horse Racing: Colorful color gradient flowing water, the default wave mode. Press again to enter the colorful cycle horse racing mode.
2. **FN + INS**ert Spectrum: Spectral colors cycle automatically.
3. **FN + Home** Monochrome: Seven-color monochrome + 1 mixed color, a total of 8 colors can be switched cyclically.
4. **FN + Page Up** custom: Press FN + Page Up to enter custom mode, press again to start custom, the indicator LED flashes, press FN + 1~6 to cycle through 6 partitions with seven colors, and then press FN + Page Up Save and exit. Restore default settings after power off, default backlight OFF.
5. **FN + End** breathing mode: the default seven-color color cyclic breathing, press again to enter the current color single-color breathing.
6. Support **FN + ↑** or **FN + ↓** to adjust the backlight brightness, 5 levels can be adjusted, only the brightness can be adjusted in monochrome mode.
7. Support **FN + ←** or **FN + →** to adjust the backlight playback speed, support spectrum/wave/horse/breathing. 5-level adjustable.
8. **FN + WIN-L** locks the WIN&APP function. Press FN + WIN-L to lock the WIN and APP keys at the same time, and press again to unlock.
9. **FN+Page Down**: Backlight off/on.

## **Multimedia key function://////////**

FN+F1= Media Sel  
FN+F2= Volume-  
FN+F3= Volume+  
FN+F4= Mute  
FN+F5= CD Stop  
FN+F6= Prev Track

FN+F7= Play/Pause  
FN+F8= Next Track  
FN+F9= Email  
FN+F10= Web/Home  
FN+F11= lock keyboard  
FN+F12=Calculator

