

teesa[®]

Pizza maker

TSA3231

SUPREME



Návod k obsluze

CS

Bedienungsanleitung

DE

Owner's manual

EN

Manuel d'utilisation

FR

Εγχειρίδιο χρήσης

GR

Használati utasítás

HU

Gebruiksaanwijzing

NL

Instrukcja obsługi

PL

Manual de utilizare

RO

Návod na použitie

SK

OTHER APPLICATIONS

NOTE! Always make sure that the ready light is on before placing food to be prepared on the stone. If the light has gone out, open the upper cover for about 4 minutes until the light goes on again.

- **FROZEN PIZZA**

Recommended temperature setting: 240°-320°

Tip: Allow deep-frozen pizza to melt in room temperature for 10-15 minutes before cooking. Follow the instructions given in the above section to prepare pizza. Refer to the package to set proper baking time. Regularly check the results. Continue the cooking until desired result is reached.

- **VACUUM-PACKED BAGUETTES**

Recommended temperature setting: 240°-320°

Place the baguettes (2-3 pieces) on the stone, keeping a distance between them. Refer to the package to set proper baking time. Regularly check the browning result. When the desired browning result is reached, cover the baguettes with aluminum foil and bake some time more.

REPLACING THE STONE

The stone is available to be bought from the online store www.teesa.pl or www.rebelelectro.com

1. Open the lid.
2. Take out the old stone with handles.
3. Put in the new stone and put the handles down.

CLEANING AND MAINTENANCE

- Always unplug the appliance from wall socket after use and before cleaning. Never clean the appliance while still connected to power mains.
- Allow the appliance to cool down completely before cleaning.
- Never immerse the appliance or its cord into water or other liquid.
- Clean the stone after each use.
- Do not let the stone get in contact with water or other liquids while still warm since the stone may crack.
- Scrape out any leftovers with a spatula or similar tool.
- Wipe off the stone with a moist cloth when the stone is completely cold.
- When the housing is completely cold, wipe it off with a damp cloth. Do not use any corrosive cleaning agents.

SPECIFICATION

Main features

Two heating elements
 Temperature and time adjustment
 Ready light
 Heatproof handles
 Overheating protection
 Window in lid

Technical data

Cooking surface: stone
 Temperature: 80°C / 160°C / 240°C / 320°C / 400°C
 Timer: up to 15 min.
 Stone diameter: 32 cm
 Maximum power: 1200 W
 Power supply: 220 ~ 240 V; 50/60 Hz
 In set: two steel peels

Physical parameters

Weight: 5 kg
 Dimensions: 350 x 370 x 165 mm
 Cord length: 90 cm



English
Correct Disposal of This Product
(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems) This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

teesa®

www.teesa.pl