

# AREBOS

## Dutch Oven

AR-HE-DO



Please follow all security measures in this user's manual to ensure a secure use.



Thank you for your trust in AREBOS.

# Table of contents


<b>1 SAFETY INSTRUCTIONS</b> .....	<b>3</b>
1.1 Symbol explanation.....	3
1.2. General safety instructions.....	5
Danger to children and pets.....	5
<b>2. Scope of delivery</b> .....	<b>6</b>
<b>3. Installation and first use</b> .....	<b>6</b>
<b>4. Storage and cleaning</b> .....	<b>7</b>
<b>5. Quality information</b> .....	<b>7</b>
<b>6. Environmentally friendly disposal</b> .....	<b>8</b>
6.1 Disposal and packaging.....	8
6.2 Disposal of waste equipment.....	8
<b>EU Declaration of Conformity</b> .....	<b>9</b>


Thank you for purchasing our product. Please read the user manual carefully before using the product for the first time. Protect yourself and others by observing all safety information, warnings and cautions. Keep the instruction manual for later reference. The drawings in this guide may not match the physical objects. Failure to comply with instructions could result in personal injury and/or damage to product or property. Please refer to the physical objects.

## 1 SAFETY INSTRUCTIONS

- This instruction manual is intended to familiarize you with the installation, use and maintenance of the product. To install the device safely and correctly, please read the user manual **before** you begin.

### 1.1 Symbol explanation

 **WARNING!** This signal symbol/word refers to a hazard with a medium degree of risk which, if not avoided, could result in death or serious injury.

 **CAUTION!** This signal symbol/word refers to a hazard with a low level of risk which, if not avoided, may result in minor or moderate injury.


**Hint!** This signal symbol/word warns of possible property damage.



 **WARNING!** Read the safety regulations and instructions carefully.

Failure to comply with safety instructions and instructions may cause electric shock, fire and/or serious injury. **Keep all safety instructions and instructions for the future.**



 **WARNING!** in front of a hot surface!

The Dutch Oven gets very hot on all components during use. Only lift the lid with heat-resistant gloves or a special lid lifter. Never touch or carry the pot during use without heat protection.

Do not quench or drop with cold water.



 **WARNING!**

This device can pose dangers if it is used improperly or improperly by untrained persons! Note that the device is not a toy and does not belong in children's hands. Personnel qualifications!

**Suffocation!** Do not leave the packaging material carelessly. It could become a dangerous toy for children.

There is a risk of fire if set up improperly. Do not place the device on a combustible surface.

Do not place the device on deep-pile carpets.

The device must not be covered to avoid overheating and fire hazard!



**⚠ WARNING!** The heater must not be covered to avoid overheating and fire hazard!

The symbol on the device indicates that it is not allowed to hang objects (e.g. towels, clothing, etc.) above or directly in front of the device.



Follow the instructions.

Hints with this symbol indicate that.

that the operating instructions must be observed.



This product must not be disposed of with household waste!



## 1.2. General safety instructions

- **Read this instruction manual carefully before using the Dutch Oven and keep it for later reference.**
- **Failure to observe these hazards, warnings and precautions may result in serious bodily injury, including fatal bodily injury, fire or explosion with serious damage to property.**
- The consumption of alcohol and/or prescription or non-prescription medications may affect the user's ability to properly assemble and operate the grill safely.
- This device is not intended to be used by persons (including children) with limited physical, sensory or mental abilities or lack of experience and/or knowledge, unless they are supervised by a person responsible for their safety or have received instructions from them on how to use the device.
- The pot may only be used for the preparation of grill able food. All requirements of these instructions must be complied with.
- The pot must be placed on a safe, horizontal, and heat-resistant surface before use. Remove the device from the packaging!
- The pot must be used far away from flammable or delicate materials.
- Do not make any changes to the product.
- Damaged parts or accessories may no longer be used.
- The manufacturer cannot be held liable for damage caused by improper, reckless, or improper use.
- The manufacturer assumes no responsibility for damage that occurs during the use of the device or for complaints by third parties.
- Never transport pot during operation.
- Wear heat-resistant gloves when preparing.
- Keep electrical cables away from hot surfaces of the pot.
- For private use only!

### Risk of burns

- **Caution!** This pot gets very hot and must NOT be moved during operation.
- Only use outdoors in a well-ventilated place! When used indoors, harmful gases develop, which can be potentially fatal. Never use the Dutch Oven under combustible roofs, shelters, etc.
- Wait until the pot has cooled before transporting or cleaning it.

### Danger to children and pets

- **Caution!** Keep children and pets away from the pot!
- Stay alert.
- Never leave the hot pot unattended.

## 2. Scope of delivery

### Scope of delivery

1 x Dutch Oven pot with lid / 1x sauce pot with lid / 1 x frying pan / 1 x grill pan / 1 x lid lifter / 1 x bracket / 1 x wooden storage box / 1 x sturdy lid lifter / 2 x protective gloves / 1 x stainless steel cleaning brush



### Information about the device


The Dutch Oven has its origins in the "Wild West" and was used as a universal cooking utensil. Due to its very flexible application possibilities, it is still considered one of the most popular barbecue tools among outdoor fans and barbecue enthusiasts.

The thick-walled pot made of high-quality cast iron has excellent thermal conductivity, as well as heat storage and is therefore ideal for cooking, baking, and stewing. Best results with stews, goulash, soups, roasts or even breads and cakes are guaranteed!

## 3. Installation and first use

1. Remove the product and all accessories from the packaging. Check that the product shows no signs of damage.
2. Completely remove the packaging from the device.
3. Clean the pot with hot water, please do not use detergent or other cleaners, as this may damage the protective layer and the pot will rust.
4. Dry the cast-iron pot completely.
5. We recommend a burn-in process before the first use in order to create a thicker protective layer as a basis for permanent use.

### **Burn-in process**

- To protect your cast iron pot from rust, you need to burn it in. You can do this before the first use or between uses if the patina (protective layer) is damaged or rust has formed.
- If the pot has rust stains, these should first be removed with a wire brush. Subsequently, the pot must be thoroughly cleaned with warm water and dried well.
- After you have thoroughly cleaned your pot, you can either rub it with a special care paste inside and outside or with neutral oil or vegetable fat. To do this, use sunflower oil, coconut oil or other high-temperature resistant fats.
- After that, the pot is placed in the oven for two hours at about 180 degrees Celsius or burned on the grill.
-  Attention! When burning this product, there may be increased smoke development. We recommend that you burn in the open air!
- Let the Dutch Oven cool slowly and grease all parts again. The Dutch Oven is now ready for use.


## **4. Storage and cleaning**

- A Dutch Oven is made of cast iron, which is susceptible to rust. Therefore, it must be thoroughly cleaned and maintained after each use to ensure a long service life.
- After cooking, let the pot cool and remove all food debris. If necessary, you can use a sponge or brush to remove sticky or burnt-in residues.
- The Dutch Oven is of course not suitable for the dishwasher.
- After cleaning, pot must always be thoroughly dried and rubbed with oil or vegetable fat. It is best to rub with a thin, lint-free cloth.
- The pot should be stored in a dry place and be able to breathe. For better ventilation of the pot, place a cardboard or wooden wedge between the lid and the pot.

## **5. Quality information**

- Minor unevenness in the surface or small irregularities in the wall thickness are normal and not a reason for complaint.
- A slight "tilting" of the lid s cannot be ruled out 100%, here the production-related tolerance range is 2mm. A lid that is not 100% resting does not pose any problems during use and does not affect the function.

## 6. Environmentally friendly disposal

 **Warning! from the risk of suffocation!** Packaging material is dangerous for children. Never let children play with packaging material.

### 6.1 Disposal and packaging

- The packaging of your device is made of materials necessary to guarantee effective protection during transport. These materials are fully recyclable and thus reduce the environmental impact. Dispose of the packaging in a bin for recyclable materials.

### 6.2 Disposal of waste equipment

- Waste equipment must be disposed of in accordance with the guidelines and regulations of local waste disposal. Contact your local administration via the address of the nearest recycling centre and deliver your device there.



The symbol of the crossed-out waste bin on an OLD electrical or electronic equipment states that it must not be disposed of in household waste at the end of its service life. Collection points for WASTE electrical and electronic equipment are available in your area for free returns. You can obtain the addresses from your city or local government. You can inform yourself on our website [www.arebos.de](http://www.arebos.de) about other return options created by us.



The separate collection of WEEE is intended to prevent reuse, recycling or other forms of recovery of WEEE, as well as the negative consequences of disposal on the environment and human health.

**Our customer service number: Tel. +44 (0) 20 8068 5604**

**fax: +49 (0) 931 4523 2799 / e-mail: [info@arebos.de](mailto:info@arebos.de)**

Office address: Canbolat Vertriebs GmbH • Gneisenaustraße 10-11 • 97074 Würzburg

**Return address** can be found in the imprint: <https://www.arebos.de/impressum/>

Sales tax identification number: DE 263752326

Court of commercial registration is Würzburg, HRB 10082

WEEE-Reg. No. DE 61617071



# EU Declaration of Conformity



We, the

**Canbolat Vertriebsgesellschaft mbH**  
Gneisenaustrasse 10-11  
97074 Würzburg, Germany

declare, under sole responsibility, that the following product:

Brand

**AREBOS**

Product

Dutch Oven

Product Model

AR-HE-DO

Article

4252023111324

The subject matter of the declaration described above is in accordance with the relevant harmonisation legislation of the European Union.

Place and date of issue:

Würzburg, 25.01.2022

Signature:

Dipl.-Inform. (Univ.) Korhan Canbolat, Managing Director

If the device is modified without our consent, this declaration of conformity loses its validity.