

# harry

Panduan Pengguna

Diproduksi oleh : PT Sentra Solusi Teknologi  
Tangerang - Indonesia



**Wiko**  
Game changer.



## Inserting your cards

Masukkan kartu SIM

1.



2.



3.



Micro SIM 1

4.



Micro SIM 2



5.



Micro SD 128 GB

## Getting to know your phone

Mengenal Ponsel Anda

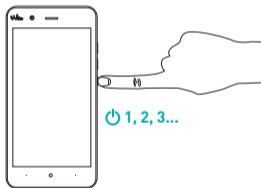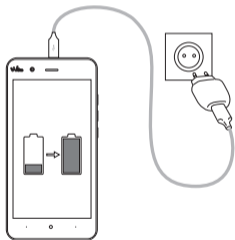





# harry

## User guide

---

*The contents of this manual may differ in certain respects from the description of your phone depending on its software version and your telephone operator.*

---

EN

## CONGRATULATIONS!

You have just purchased your **WIKO HARRY** mobile phone. This guide contains basic information to get you started and quickly familiarise yourself, we hope, with the world of WIKO.






A complete version of the guidelines, safety instructions and your device usage user guide is available on our website **[www.wikomobile.com](http://www.wikomobile.com)**. You can request a printed version via email or printed letter at the address listed at the end of the user guide.

### What's in the Box:

1. WIKO HARRY mobile phone
2. AC adaptor
3. Micro USB cable
4. Hands-free kit
5. User guide
6. Battery



## ~ The buttons on your phone

Button		Function
On/Off		Press and hold the button to turn the phone on or off. Press the button lightly to lock the touch screen.
Home		Returns to the home screen.
Overview <i>(right side)</i>		Opens the list of recent applications.
Return <i>(left side)</i>		Returns to the previous screen. Closes the on-screen keyboard.
Volume		Increases or decreases the call volume, the ringtone, music, games and other audio functions. Switch the ringtone to silent mode when the phone rings. Press and hold on Volume- to enable the meeting profile.

## Basic Operations

### ~ SIM Management

When you turn on your phone for the first time, various items of information about the SIM card(s) are displayed. Follow on-screen instruction to set up SIM management.

### ~ Network Connection

- **Operator Not Available**

If your operator does not appear in the list or the list is empty, ask your operator how to configure the APN manually. To do this, go to Settings → Wireless & networks → More → Mobile networks → SIM1 or SIM2 → Access Point Names, press on the button ⊕ and enter the information provided by your operator. Return to the previous menu, then choose the APN that you have just saved.

- **Data Connection**

To check your data connection settings:

1. Go to Settings → Wireless & networks → More → Mobile networks → SIM 1 or SIM 2 → Access Point Names, then enable the access point according to your operator/package.
2. To activate Mobile data, drag the notification panel downward with two fingers and enable data connection by clicking on ▲.
3. In SIM management, you can select which SIM card is used for data connection.

- **Data Roaming**

Note that for roaming SIM cards, you must enable the data roaming in the Settings → Wireless & networks → More → Mobile networks → SIM 1 or SIM 2 → Activate Data roaming.

## ~ Notifications Panel

Drag the status bar downwards with 2 fingers to see details of all your notifications. Information about new messages received, upcoming calendar events, download status, etc. will then be displayed.

## Safety Information

Please read this safety information carefully so that you can use your phone in complete safety:



1. Prolonged listening to the music player at full power may damage the user's hearing.
2. **Hearing Nuisances:** To avoid possible hearing damage, do not listen to sounds or music at an excessive volume using the earphones (headsets, headphones) for a long period of time.
3. **Emergency call:** Sometimes the emergency numbers are not accessible on all mobile networks, check first with your operator.
4. **Children:** Be very careful. A portable device is not designed for use by children. The phone contains small parts that could be swallowed or cause choking.

**5. Driving safety:** Using your mobile phone while driving is prohibited. It is your responsibility to respect the laws and regulations on the use of mobile phones in the country where you drive.

**6. Electronic implants and pacemakers:** A minimum distance of 15cm between a mobile phone and a pacemaker is advised to avoid potential interference with the pacemaker. Hold the device on the opposite side to their implant as a precaution when making a call.

If you notice that your device is causing interference with a pacemaker, switch it off immediately and contact the doctor for advice on what action to take.

**7. Fire hazard:** Do not leave your device near heat sources. Do not leave your device charging near flammable materials.

**8. Contact with liquid:** Do not expose the device to liquid or touch it with wet hands: any damage caused by water may be irreparable.

**9. Use only WIKO-approved accessories in box.** The use of unauthorised accessories may damage your phone or cause a safety risk.

**10. Batteries** must be used with caution.

Do not attempt to disassemble the battery yourself. Do not destroy the **batteries** and **chargers**. Never use a battery or charger that has been damaged. Keep batteries away from electronic objects.

You should not expose the batteries to very low or very high temperatures (below 0°C or above 45°C). It is recommended to recharge the battery at a room temperature of 5 to 25 °C. To increase battery life, only use the WIKO battery and charger supplied in the box. Incorrect use of the battery or if battery is replaced by an incorrect type may cause fire, explosion or other risk. Dispose of used batteries according to the instructions.

**11. Electric shock:** Do not try to dismantle your device as there is a very real risk of electric shock.

**12. Recharge** your phone in a well ventilated area.

**13.** Do not use the mobile phone in an environment at too high or too low temperature, never expose the mobile phone under strong sunshine or too wet environment. The suitable temperature for the phone is -10°C to +45°C, the maximum charging temperature declared by the manufacturer is +40°C.

**14.** Due to the used enclosure material, the GSM mobile phone should only be connected to a USB Interface of version 2.0 or higher. The connection to so called power USB is prohibited.

**15.** The socket-outlet should be near the equipment and easily accessible.

**16.** This charger is for indoor use only, the charger type is:

AREA	COUNTRIES	CHARGER TYPE
Area 1	France, Germany, Greece, Italy, Portugal, Spain, Belgium, Netherland, Switzerland, Luxembourg, Poland, Algeria, Croatia, Slovenia, Serbia, Greece, Cyprus	TN-050100E4A, output voltage current is 5V/1.0A
Area 2	UAE, Saudi Arabia, Nigeria, Kenya	TN-050100B4A, output voltage current is 5V/1.0A
Area 3	Asia	TN-050100E4A, output voltage current is 5V/1.0A

## ~ Specific Absorption Rate "SAR" Exposure to radiofrequency

Your device has been designed and produced to comply with international norms (ICNIRP) for exposure to radiofrequencies. The safety instructions related to exposure to radiofrequencies use a measuring unit called SAR (Specific Absorption Rate). The SAR limit adopted by the European Directive 2014/53/EU is 2.0 W / kg.

The highest reported SAR value for your device when tested for use at the head is 0.552 W/kg, and 1.105 W/kg when it is kept 0.5 cm from your body.

WWAN		
Frequency Band	Maximum output power	
GSM B2/B3	28-32dBm	
GSM B5/B8	31-35dBm	
UMTS B1/B2/B5/B8	21-25dBm	
FDD LTE B1/B3/B7/B8/B20	20.3-25.7dBm (QPSK, partial RB)	
WLAN		
Standard	Frequency	Avg.Power(dBm)
802.11b	2.4-2.4835GHz	16.07
802.11g	2.4-2.4835GHz	13.56
802.11n	2.4-2.4835GHz	13.79
BLUETOOTH		
Bluetooth Version	Frequency Range	Avg.Power(dBm)
BT 2.1+EDR	2.4-2.48GHz	5.67
BT 4.0	2.4-2.48GHz	-1.34

## ~ Recycling



This product is subject to European Directive (WEEE Directive 2012/19/EU) and batteries (Directive 2006/66/EC).

Electrical, electronic equipment, batteries, storage batteries and their accessories must always undergo selective waste management. Therefore, these elements must be reported to an authorized collection point for appropriate reprocessing or recycling.

## ~ Dangerous substances

This device complies with the requirements resulting from the REACH regulation [Regulation (EC) N°1907/2006] and those of the revised RoHS Directive [Directive 2011/65/EU].

## ~ Responsibility

Within the limits set by the legislation in force in your country, in case of negligence on your part or on the part of a third party in the use of your device or third party services accessible through it, WIKO will not be responsible for any damages whatsoever, arising from the said negligence. You remain solely responsible for the use of the device in accordance with all regulations applicable to and in effect in your country. These recommendations, safety instructions and use of your device can vary depending on the country in which you reside. To find out more regarding the recommendations, additional safety instructions and usage tips specific to your country, please visit [www.wikomobile.com](http://www.wikomobile.com)

## STATEMENT OF COMPLIANCE



We, WIKO SAS – 1, rue Capitaine Dessemond – 13007 Marseille – FRANCE, here by declares that the radio equipment type **HARRY** is in compliance with Directive 2014/53/EU.

Software version: Harry-V01

The procedure for the Statement of Compliance, set out of Directive 2014/53/EU, was conducted under the supervision of the following organisation:

TELEFICATION B.V.

Edisonstraat 12A 6902 PK Zevenaar-The Netherlands

Phone: +31 (0)316 583 180/ Fax: +31 (0)316 583 189

E-mail: [certification@telefication.com](mailto:certification@telefication.com)

[www.telefication.com](http://www.telefication.com)



The full text of the device's Statement of Compliance is available on written request to the following address or [www.wikomobile.com](http://www.wikomobile.com): WIKO SAS - 1, rue Capitaine Dessemond - 13007 Marseille - FRANCE

08/03/2017



Michel ASSADOURIAN / CEO





# harry

## Panduan Pengguna

---

*Dalam aspek tertentu, isi dari panduan ini mungkin berbeda dari deskripsi ponsel anda tergantung pada versi perangkat lunak dan operator anda.*

---

## SELAMAT!






Anda baru saja membeli ponsel **WIKO HARRY**. Panduan ini berisi informasi dasar untuk menggunakan ponsel ini, harapan kami, Anda dapat dengan mudah membiasakan diri dengan dunia WIKO.

Panduan, petunjuk keselamatan dan panduan penggunaan versi terbaru tersedia di website kami **[www.wikomobile.com](http://www.wikomobile.com)**. Anda dapat meminta versi cetak melalui email.

### Apa yang di dalam kotak:

1. Ponsel WIKO HARRY
2. Adaptor charger
3. Kabel mikro USB
4. Hands-free
5. Panduan Pengguna
6. Baterai

## ~ Tombol pada ponsel anda

Tombol	Fungsi
On/Off 	Tekan dan tahan tombol untuk menghidupkan atau matikan ponsel. Tekan sebentar tombol untuk mengunci layar sentuh.
Home 	Kembali ke layar awal.
Pratinjau (sisi kanan) 	Buka daftar pada aplikasi terakhir.
Kembali (sisi kiri) 	Kembali ke layar sebelumnya. Tutup keyboard pada layar.
Volume 	Memperbesar atau menurunkan volume panggilan, nada dering, musik, permainan, dan fungsi suara lainnya. Alihkan nada dering ke mode diam ketika telepon berdering. Tekan dan tahan pada Volume- untuk mengaktifkan profil meeting.

## Operasi Dasar

### ~ Pengelolaan SIM

Ketika Anda menghidupkan telepon untuk pertama kalinya, berbagai item informasi tentang kartu SIM akan ditampilkan. Ikuti instruksi di layar untuk mengatur manajemen SIM.

### ~ Sambungan Jaringan

- **Operator Tidak Tersedia**

Jika operator anda tidak muncul di daftar atau daftar kosong, tanya operator anda bagaimana mengkonfigurasi APN secara manual. Untuk melakukannya, pergi ke Pengaturan → Nirkabel & jaringan → Lainnya → Jaringan Seluler → SIM1 atau SIM2 → Access Point Names, tekan pada tombol ⊕ dan masukkan informasi yang disediakan oleh operator. Kembali ke menu sebelumnya, kemudian pilih APN yang baru anda simpan.

- **Sambungan Data**

Untuk memeriksa pengaturan sambungan data:

1. Pergi ke Pengaturan → Nirkabel & jaringan → Lainnya → Jaringan seluler → SIM 1 atau SIM 2 → Access Point Names, kemudian aktifkan akses poin sesuai operator/paket.
2. Untuk mengaktifkan data seluler, geser panel notifikasi ke bawah dengan dua jari dan aktifkan sambungan data dengan mengklik .
3. Pada pengelolaan SIM, anda dapat memilih kartu SIM yang mana yang digunakan untuk sambungan data.

- **Data Roaming**

Catatan untuk kartu SIM roaming, anda harus mengaktifkan data roaming pada pengaturan → Nirkabel & Jaringan → Lainnya → Jaringan Selular → SIM 1 atau SIM 2 → Aktifkan data roaming.

## ~ Panel Notifikasi

Geser kolom status ke bawah dengan 2 jari untuk melihat rincian semua pemberitahuan anda. Informasi mengenai pesan yang baru diterima, kegiatan kalender mendatang, status unduhan, dll. Akan ditampilkan.

## Informasi Keselamatan

Harap baca informasi keselamatan ini dengan seksama agar anda dapat menggunakan ponsel ini dengan aman:



1. Mendengarkan pemutar musik pada kekuatan penuh dapat merusak pendengaran anda.
2. **Gangguan pendengaran:** Untuk menghindari kemungkinan kerusakan pendengaran, jangan mendengarkan suara atau musik pada volume yang berlebihan menggunakan earphone (headsets, headphones) untuk jangka waktu yang panjang.
3. **Panggilan darurat:** Terkadang nomor darurat tidak dapat diakses pada semua jaringan seluler, periksa dahulu dengan operator anda.
4. **Anak-anak:** Hati-hati terhadap anak-anak dan ponsel anda. Ponsel terdiri dari bagian kecil yang dapat tertelan atau menyebabkan tersedak.

**5. Keselamatan mengemudi:** Menggunakan ponsel di saat mengemudi itu dilarang. Merupakan tanggung jawab anda untuk menghormati hukum dan peraturan tentang penggunaan ponsel di negara anda

**6. Implan elektronik dan alat pacu jantung:** Jarak minimum 15cm antara ponsel dan alat pacu jantung disarankan untuk menghindari gangguan pada alat pacu jantung. Pegang ponsel di sisi berlawanan dengan implan sebagai tindakan pencegahan ketika membuat panggilan.

Jika anda merasa ponsel menyebabkan gangguan dengan alat pacu jantung segera matikan dan hubungi produsen alat pacu jantung untuk panduan tentang tindakan apa yang harus diambil.

**7. Bahaya kebakaran:** Jangan meninggalkan ponsel anda di dekat sumber panas seperti radiator atau pemanas.

**8. Kontak dengan cairan:** Jangan paparkan ponsel dengan cairan atau menyentuh dengan tangan basah:

segala kerusakan yang disebabkan oleh air mungkin tidak dapat diperbaiki.

**9. Hanya gunakan aksesoris original WIKO.** Penggunaan aksesoris yang tidak resmi dapat merusak ponsel atau menyebabkan resiko keselamatan.

**10. Baterai** harus digunakan dengan hati-hati. Jangan mencoba membongkar baterai sendiri. Jangan menghancurkan **baterai dan charger**. Jangan pernah gunakan baterai atau charger yang telah rusak. Jauhkan baterai dari benda-benda elektronik.

Anda dilarang memaparkan baterai di suhu yang terlalu tinggi atau terlalu rendah (dibawah 0°C atau diatas 45°C). Disarankan untuk mengisi baterai pada suhu ruang 5 °C sampai 25 °C. Untuk meningkatkan daya tahan baterai, hanya gunakan baterai dan charger WIKO yang disediakan di kotak. Penggunaan baterai yang tidak benar dapat menyebabkan kebakaran, ledakan atau resiko lainnya. Buang baterai bekas sesuai dengan instruksi.

**11. Sengatan listrik:** Jangan membongkar ponsel karena terdapat resiko berbahaya tersengat listrik.

**12.** Lakukan pengisian **baterai** di area berventilasi.

**13.** Jangan menggunakan ponsel di lingkungan bersuhu tinggi atau terlalu rendah, jangan memaparkan ponsel di bawah sinar matahari atau lingkungan lembab. Suhu yang cocok untuk ponsel adalah  $-10^{\circ}\text{C}$  sampai  $+45^{\circ}\text{C}$ , suhu pengisian maksimum yang disarankan adalah  $+40^{\circ}\text{C}$ .

**14.** Dikarenakan bahan yang digunakan ponsel GSM hanya terhubung ke antarmuka USB pada versi 2.0 atau di atasnya. Dilarang menghubungkan ke power USB yang tidak disebutkan.

**15.** Stop kontak harus dekat dan mudah diakses.

**16.** Charger ini hanya untuk digunakan di dalam ruangan, tipe charger adalah:

AREA	NEGARA	JENIS CHARGER
Area 1	France, Germany, Greece, Italy, Portugal, Spain, Belgium, Netherland, Switzerland, Luxembourg, Poland, Algeria, Croatia, Slovenia, Serbia, Greece, Cyprus	TN-050100E4A, output voltage current is 5V/1.0A
Area 2	UAE, Saudi Arabia, Nigeria, Kenya	TN-050100B4A, output voltage current is 5V/1.0A
Area 3	Asia	TN-050100E4A, output voltage current is 5V/1.0A

## ~ Paparan Frekuensi Radio "SAR"

Perangkat Anda telah dirancang dan diproduksi untuk mematuhi norma-norma internasional (ICNIRP) untuk paparan radiofrequencies. Instruksi keselamatan yang berhubungan dengan paparan frekuensi radio menggunakan unit pengukuran yang disebut SAR (Specific Absorption Rate).

Batas SAR diadopsi dari Petunjuk Europa 2014/53/EU is 2.0 W / kg.

Nilai SAR tertinggi yang dilaporkan untuk perangkat anda saat diuji untuk penggunaan di telinga adalah 0.552 W/kg, dan 1.105 W/kg bila didekatkan jarak 0.5 cm dari tubuh anda.

WWAN		
Frequency Band	Maximum output power	
GSM B2/B3	28-32dBm	
GSM B5/B8	31-35dBm	
UMTS B1/B2/B5/B8	21-25dBm	
FDD LTE B1/B3/B7/B8/B20	20.3-25.7dBm (QPSK, partial RB)	
WLAN		
Standard	Frequency	Avg.Power(dBm)
802.11b	2.4-2.4835GHz	16.07
802.11g	2.4-2.4835GHz	13.56
802.11n	2.4-2.4835GHz	13.79
BLUETOOTH		
Bluetooth Version	Frequency Range	Avg.Power(dBm)
BT 2.1+EDR	2.4-2.48GHz	5.67
BT 4.0	2.4-2.48GHz	-1.34



## ~ Daur Ulang



Produk ini tunduk pada instruksi European (WEEE Directive 2012/19/EU) dan baterai (Directive 2006/66/EC). Peralatan listrik, elektronik, baterai, penyimpanan baterai dan aksesoris harus menjalani pengelolaan limbah pilihan. Oleh karena itu, elemen ini harus dilaporkan ke tempat pengumpulan resmi atau daur ulang yang tepat.

## ~ Zat Berbahaya

Perangkat ini sesuai dengan persyaratan yang dihasilkan dari peraturan REACH (Regulation (EC) N°1907/200) dan itu di revisi oleh RoHS Directive (Directive 2011/65/EU).

## ~ Tanggung Jawab

Dalam batasan yang ditetapkan oleh undang-undang yang berlaku di negara anda, dalam kasus kelalaian atau pada bagian pihak ketiga dalam penggunaan perangkat atau layanan pihak ketiga yang diakses melalui itu, WIKO tidak akan bertanggung jawab untuk kerugian apapun, yang timbul dari kelalian kalimat. Anda tetap bertanggung jawab untuk penggunaan perangkat sesuai dengan peraturan yang berlaku di negara anda rekomendasi ini, petunjuk keselamatan dan penggunaan pada perangkat anda dapat bervariasi tergantung pada negara dimana anda berada. Untuk mengetahui lebih lanjut mengenai rekomendasi, petunjuk keselamatan tambahan dan tips penggunaan khusus untuk negara anda, silahkan kunjungi [www.wikomobile.com](http://www.wikomobile.com).

## PERNYATAAN KEPATUHAN



Kami, WIKO SAS - 1, rue Capitaine Dessemond - 13007 - Marseille - FRANCE, dengan ini mendeklarasikan bahwa ponsel **HARRY** sesuai dengan standar dan ketentuan petunjuk 2014/53/EU.

Software version: Harry-V01

Prosedur Pernyataan Kepatuhan, diatur dalam dari intruksi 2014/53/EU, dilakukan di bawah pengawasan organisasi berikut:

Telefication B.V. Edisonstraat 12A 6902 PK Zevenaar-The Netherlands

Phone: +31 (0)316 583 180/ Fax: +31 (0)316 583 189

certification@telefication.com

www.telefication.com



Teks lengkap mengenai Pernyataan Kepatuhan dari perangkat tersedia berdasarkan permintaan tertulis ke alamat berikut atau [www.wikomobile.com](http://www.wikomobile.com): WIKO SAS - 1, rue Capitaine Dessemond - 13007 - Marseille - FRANCE

08/03/2017



Michel ASSADOURIAN / CEO



## **WIKO SAS**

1, rue Capitaine Dessemond  
13007 Marseille  
FRANCE  
[www.wikomobile.com](http://www.wikomobile.com)

## **Customer service information**

Informasi Layanan Pelanggan  
Hotline : 0859-59 11 33 22  
[www.wikomobile.com](http://www.wikomobile.com)

Wiko SAS | 1, rue Capitaine Dessemond - 13007 Marseille - France  
Tel +33 4 88 08 95 15 | Fax +33 4 88 08 95 20  
[wikomobile.com](http://wikomobile.com) | SIRET 530 072 206 00028 - APE 4652Z