




nedis

Wireless Keyboard & Mouse Combo Kit

Article number: KBMCW100BKxx

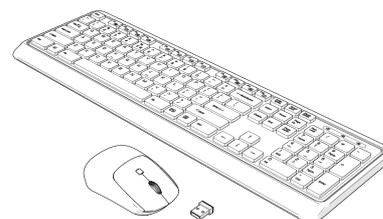

Nedis BV
De Tweeling 28, 5215 MC 's-Hertogenbosch, The Netherlands 02/22

Preface

Thank you for purchasing the Nedis KBMCW100BKxx.

This document is the user manual and contains all the information for correct, efficient and safe use of the product.

- This user manual is addressed to the end user. Read this information carefully before
- installing or using the product.
- Always store this information with the product for use in the future.

Product description

Intended use

This Nedis KBMCW100BKxx is a wireless keyboard and mouse combo kit.

This product is intended to be connected to your pc with the nano USB receiver.

The product is not intended for professional use.

Any modification of the product may have consequences for safety, warranty and proper functioning.

The product is intended for indoor use only.

Specifications



Keyboard

Input power	1.5 V / 10 mA
Frequency bandwidth	2402 - 2480 MHz
Antenna gain	4 dBi / 2.08 dBi
Transmit power	-0.6 dBm / -2.9 dBm
Dimensions (l x w x h)	445 x 149 x 24 mm
Battery type	1 x AAA


- **Mouse**

-
-
-
-
- **Input power**
- **Frequency bandwidth**
- **Antenna gain**
- **Transmit power**
- **Dimensions (l x w x h)**
- **Battery type**

Input power	1.5 V / 15 mA
Frequency bandwidth	2402 - 2480 MHz
Antenna gain	2.3 dBi / 2.08 dBi
Transmit power	-11.1 dBm / -2.9 dBm
Dimensions (l x w x h)	108 x 65 x 39 mm
Battery type	1 x AA

Main parts (image **A**)

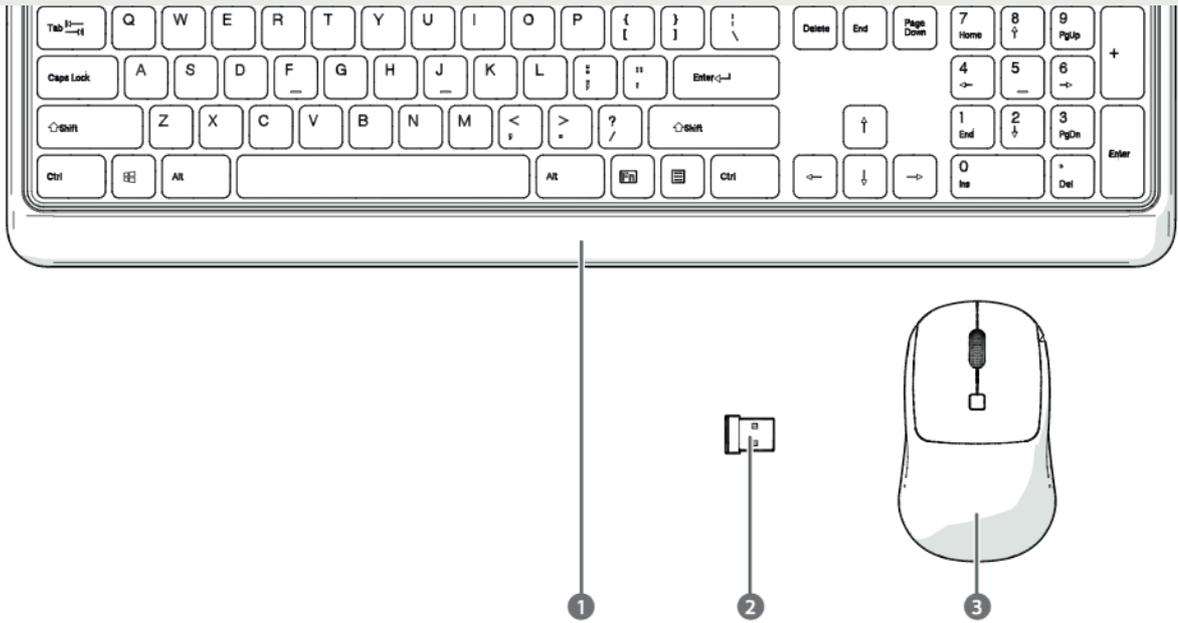

**A**



1 Keyboard

2 Nano USB receiver

3 Mouse

i The keyboard lay-out may vary depending on your country and region.

Backside of the product (image **B**)

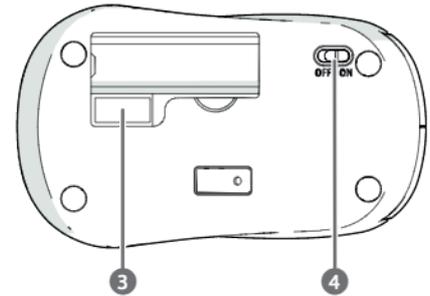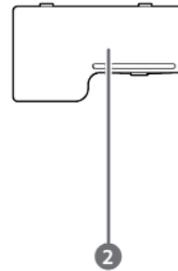**B**

1 Keyboard battery cover

2 Mouse battery cover

3 USB receiver storage

4 Power switch

Safety instructions

WARNING

- Ensure you have fully read and understood the instructions in this document before you install or use the product. Keep the packaging and this document for future reference.
- Only use the product as described in this document.
- Do not use the product if a part is damaged or defective. Replace a damaged or defective product immediately.
- Do not drop the product and avoid bumping.
- This product may only be serviced by a qualified technician for maintenance to reduce the risk of electric shock.
- Do not expose the product to water or moisture.
- Do not place heavy objects on top of the product.



- For battery safety, consult the manual of the batteries.
- Only use the battery type(s) recommended in this document.
- Keep cells and batteries clean and dry.
- When possible, remove the battery from the product when not in use.
- Wipe the cell or battery terminals with a clean dry cloth if they become dirty.
- Battery usage by children should be supervised.
- Observe the plus (+) and minus (-) marks on the cell, battery and equipment and ensure correct use.
- Dispose of the cell or battery properly.
- Seek medical advice immediately if a cell or a battery has been swallowed.

Installation

Check the contents of the package

- Check that all parts are present and that no damage is visible on the parts. If parts are missing or damaged, contact the Nedis B.V. service desk via the website: www.nedis.com.

Installing the batteries

○ For the mouse **A3**:

- 1. Remove the mouse battery cover **B2**.
- 2. Insert one type AA battery (not included).
⚠ Make sure to match the (+) and (-) polarity markings.
- 3. Place back **B2**.

○ For the keyboard **A1**:

- 1. Remove the keyboard battery cover **B1**.
- 2. Insert one type AAA battery (not included).
⚠ Make sure to match the (+) and (-) polarity markings.
- 3. Place back **B1**.

Connecting the nano USB receiver

- 1. Plug the nano USB receiver **A2** into a USB port of your pc.



A1 and **A3** are now connected to **A2**.

Storing the product

1. Open **B2**.
 2. Place **A2** into **B3**.
 3. Place back **B2**.
 4. Slide **B4** to **OFF** to switch off the product.
-

Maintenance

 Do not use aggressive chemical cleaning agents such as ammonia, acid or acetone when cleaning the product.

 Do not immerse the product in water.

Clean the product regularly with a soft, clean, dry cloth. Avoid abrasives that can damage the surface.

Warranty

Any changes and/or modifications to the product will void the warranty. We accept no liability for damage caused by improper use of the product.

This product is designed for private use (normal domestic use) only. Nedis is not responsible for wear, defect and/or damages caused by commercial use of the product.

Disclaimer

Designs and specifications are subject to change without notice. All logos, brands and product names are trademarks or registered trademarks of their respective owners and are hereby recognized as such.

Disposal

This symbol indicates that this product should not be thrown away



sustainable reuse of raw materials. To return your used product, you can use the regular return and collection systems or contact the store where the product was purchased. They can recycle this product for the environment.

Declaration of Conformity

We, NEDIS, as manufacturer, declare that product KBMCW100BKxx from the brand Nedis, produced in China was tested according to all relevant CE standards / regulations and passed all tests.

The complete Declaration of Conformity (+ safety datasheet if applicable) can be found and downloaded via <http://webshop.nedis.com>

For other compliant-related information, please contact customer service desk for support:

- via website: <http://www.nedis.com>
- via e-mail: service@nedis.com
- via telephone: +31 (0)73-5991055 (during office hours)
- NEDIS B.V., De Tweeling 28,
- 5215 MC 's-Hertogenbosch, THE NETHERLANDS
-
-
-