

# MAX PRO



**MANUAL**


NOSE & EAR TRIMMER

## ABOUT

Introducing the Max Pro Nose & Ear Trimmer – your ultimate solution for precise and comfortable grooming. Crafted from high-quality materials, this trimmer is designed to meet all your needs.

Powered by a long-lasting battery, it provides 1 hour of usage after just 3 hours of charging, ensuring uninterrupted grooming sessions. With a minimal trim length of 3 mm, it offers precise trimming for a polished look.

Its ergonomic design ensures a comfortable grip and precise control, allowing you to effortlessly remove unwanted hairs from your nose and ears. Experience the perfect blend of durability, performance, and convenience with the Max Pro Nose & Ear Trimmer in your grooming routine.

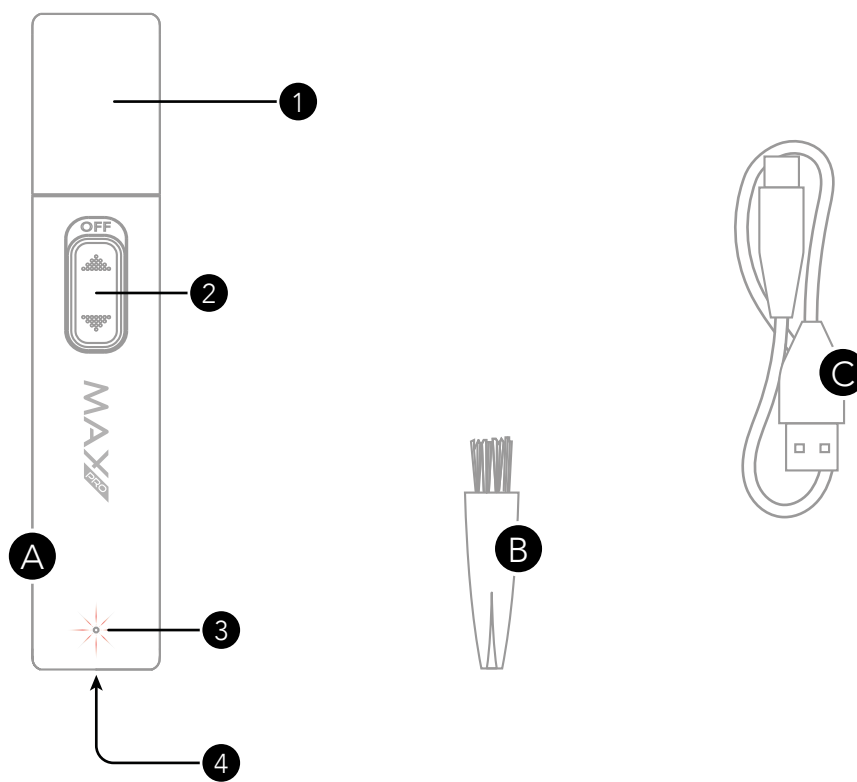

A. Max Pro Nose & Ear Trimmer

B. Cleaning Brush

C. Charging Cable

1. Dustproof Cover

2. On/Off Switch

3. Charging Indicator

4. Charging Port

## **IMPORTANT**

Please read the user manual carefully before use and keep it for future reference:

1. Do not share the device with others for the reason of hygiene.
2. Use the device only for its intended use as described in this manual.
3. The cutter head is waterproof while the main body of the device is not. Do not wash the main body.
4. Recharge the device in time when the battery is running low to avoid pulling hairs.
5. Do not allow the device to contact corrosive liquid or solid.
6. Do not allow children to play with the device to avoid injuries.

## **CHARGING METHODS**

1. The charging indicator flashes red when the battery is running low, reminding you to charge the device.
2. Connect the device with a qualified adapter (not included) via the charging cable. Then plug into the power supply.
3. The charging indicator keeps red during charging and goes out automatically once fully charged. Unplug the adapter then.

## **APPLICATION METHODS**

1. Push the On/Off Switch to turn on the device.
2. Gently insert the cutting head into the nostril or ear and move it slightly back and forth to cut the hair.
3. After use, push the On/Off Switch to turn off the device.
4. Remove the cutter head and clean with running water or the supplied cleaning brush. Then dry the cutter head with a dry towel or wait for air dry.

## **STORE & CARE**

1. After each use, please take off the cutter head and clean out all hair to maintain sanitation.
2. Place the device in dry shadow. Avoid direct sunlight or high temperature.
3. Recharge the device every month if it's not in use for a long period of time.
4. Never attempt to open or repair the device yourself.

## **WARRANTY**

The warranty on this product is valid for two years from the date of purchase.

Please keep your proof of purchase (receipt, order confirmation email) and the original box of your styling tool as proof of purchase. This warranty is only valid for tools purchased from an authorized Max Pro retailer.

If your product fails to function properly due to a manufacturer's defect and the warranty conditions are met, your Max Pro styling tool will be repaired or replaced; this is determined by the manufacturer.

**(!)** This warranty does not apply to problems resulting from misuse, damage or normal wear and tear; the warranty is void if the product is used for commercial purposes. In addition, the warranty does not apply to styling tools that have been modified or repaired by an unauthorized Max Pro retailer or manufacturer.

For warranty questions, please contact our Customer Service or visit us at [www.maxprohair.com](http://www.maxprohair.com). If the product does not function properly, we will require digital photos of the product, as well as a copy of your original proof of purchase. In case of replacement or repair, a payment is required to cover the shipping and handling costs

(depending on where you live). Feel free to contact us if you have any questions or comments.

**We are happy to help you!**