

BBM 615 instructions

English



EN

Specifications

Network:	GSM 900/1800 MHz
Dimensions:	99 mm x 51 mm x 19 mm
Weight:	84 g
Battery:	3.7V/800 mAh Li-ion battery
Operating ambient temperature:	Min: 0°C (32°F) Max: 40°C (104°F)
Charging ambient temperature:	Min: 0°C (32°F) Max: 40°C (104°F)
Storage temperature:	Min: -20°C (-4°F) Max: 60°C (140°F)

Changes and errors excepted.

© IVS GmbH 2015 • All rights reserved
QSG_Swisstone BBM_615_en_A3(A7)_v1.0
English

Version 1.0

CE 1313

IMPORTANT!

Use only compatible memory cards with this device. Compatible card type: microSD, microSDHC. Incompatible cards may damage the card itself, the device and corrupt any data stored on the card. Depending on the market some phones may have a pre-installed memory card.

4. Insert the battery (required) by pushing it into the battery compartment ensuring that the three contacts on the front touch the three spring contacts on the top in the battery compartment.

5. Replace the cover and push it upward using gentle pressure with the thumb until it snaps securely into place again.

Make a call

1. Enter the phone number with the area code. You can delete digits with **Delete**.
2. Press **Call** to dial. Press **Hang up** to cancel dialling.
3. Press **End call** to end the call.

Tip: For international calls, always enter a + symbol before the country code to be able to use the phonebook optimally in any country. Press the *** key** twice to enter the international area code +.

1. Receiver/loudspeaker Make phone calls holding the cell phone to the ear
2. Left soft key Main menu
3. Call key Dial and answer calls; open the call log
4. Arrow keys In idle state **^** to open new SMS. **v** to open alarm function. Scroll up and down in menus and lists
5. M1 Memory key
6. Camera shortcut
7. Voicemail
8. *** key** In idle state: to enter: ****"/ " + " / " P"/" W"**; Input: special characters
9. Space bar Enter space while writing SMS


Install the SIM card and the battery

The SIM card holder is located inside the battery compartment.

CAUTION

Only use batteries, charger and accessories that have been approved for use with this particular model. Connecting other accessories may be dangerous and may invalidate the phone's type approval and guarantee.

1. **Remove the battery cover** slide your fingernail into the small notch on the left bottom side of the phone and pull the cover upward. If the battery is installed, slide your fingernail in the notch at the bottom to lift up the battery.

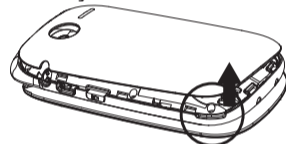

When the battery performance is low, the empty battery symbol flashes to indicate the battery state and an alarm signal will sound. To recharge the battery, connect the mains adapter to the micro USB connector on the right side of the phone.

Alternatively, you can place the telephone into the charging cradle connected to the main adapter via the USB cable.

During charging, the charge status icon moves (visible in the upper right corner of the display).

A complete charging process of the rechargeable battery takes approximately 3 hours. When the battery is fully charged the animation of the charge status icon stops.

Answer a call

1. Press **Answer** or **Answer** to accept the call or press reject to reject the call (busy signal). Alternatively, you can press **End call** to reject the call directly.
2. Press **End call** to end the call.


Create phonebook entry

1. Press **Menu** → **Contacts** → **OK**.
2. Select **Options** → **New**.
3. Select whether you want to save the contact on the SIM card or in the phone.
4. Enter a name for the contact.
5. Press **v**.
6. Enter the phone number including the area code.
7. Press **v**.
8. Then press **Save** → **OK**.

Tip: For international calls, always enter a + symbol before the country code to be able to use the phonebook optimally in any country.

10. **# key** In idle state: long keystroke to toggle between ring tone on, mute and vibration; Input: toggle input modes
11. M2 Memory key
12. End key End calls; return to idle mode; switch the phone on/off
13. Right soft key Phone book
14. SOS key
15. Loudspeaker
16. Torch Camera flash
17. Camera
18. Volume down Adjust ring volume and loudspeaker volume
19. Volume up Press and hold to switch torch on and off
20. Torch shortcut
21. Micro USB For battery charger port

2. **Insert the SIM card (required)** push it carefully in under the metal bracket. Make sure the contacts of the SIM card point downwards and the cut-off corner fits exactly in the recessed shaping of the holder. The contacts of the SIM card must not be scratched or bent. Try not to touch the contacts with your fingers.

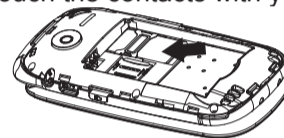

Power on the phone

Press and hold the red key **Power** on the phone to turn it on and off.

If the SIM card is valid but protected with a PIN code (Personal Identification Number), **Input PIN** is displayed.

Enter the SIM PIN code and press **OK** (≡ upper left corner of keypad). Delete with **Clear** (≡ upper right corner of keypad).

Press the *** key** twice to enter the international area code +.

Volume control

You can adjust the volume during a call using the side keys **+/-**. The volume level is shown on the display.

Enter text

Select character

- Press a numerical key repeatedly until the desired character is shown.
- Wait a few seconds before entering the next character.

22. Headset socket For 3.5 mm standard headset

Tip: Some features require extra memory, to expand your phone's storage capacity, install a micro SD card.

3. Micro-SD card (optional)

Lightly press the card holder and push it carefully toward the side of the compartment. The card holder can now be flipped up vertically. Place the memory card in the black plastic bracket. Make sure that the memory card contacts are facing down and that the card is placed in accordance with the marked area (see figure). Do not scratch or bend the card contacts. Push the metal holder back down, press it flat and slide it until it snaps into place.

Set language

The default language of the phone menu, messages and so on is determined by the SIM card used (Automatic). You can always switch between the languages supported by the phone.

1. Press **Menu** → **Settings** → **OK**.
2. Select **Phone settings** → **OK**.
3. Select **Language settings** → **OK**.
4. Select **Display language** → **OK**.

Set time and date

1. Press **Menu** → **Settings** → **OK**.
2. Select **Phone settings** → **OK**.
3. Select **Date & time** → **OK**.
4. Select **Set time/date** → **OK**.
5. Enter the time (HH:MM) → **v**.
6. Enter the date (DD/MM/YYYY) → **OK**.

Special characters/smileys

- Press *** key** to view a list of special characters.
- Select the desired character with **^** or **v** (to move left or right) and press **OK** to enter.

Move the cursor within text

- Use the keys **^** or **v**, to move the cursor within the text.

Upper case, lower case and numerals

- Press **# key** to choose between upper case, lower case and numerals. The symbol at the top left in the display indicates the input mode.

SOS call setting

Activate the emergency call function.

1. Press **Menu** → **SOS** → **OK**.
2. Select **Status** → **OK**.
3. Select **On** or **Off** → **OK**.

Important

If you deactivate the emergency call function the emergency call key on the back of the telephone will not work!

SOS Alarm Tone

Alarm sound on or off.

1. Press **Menu**, select **SOS** and press **OK**.
2. Select **Emergency alert** → **OK**.
3. Select **On** or **Off** → **OK**.

Safety instructions

⚠ WARNING

The unit and the accessories can contain small parts. Keep all of the equipment out of the reach of small children. The mains adapter is the disconnect device between the product and mains power. The mains socket outlet must be close to the equipment and easily accessible.

Network services and costs

Your device is approved for use on the GSM 900/1800 MHz networks. To use the device, you need a subscription with a service provider.

Using network services may result in traffic costs. Some product features require support from the network, and you may need to subscribe to them.

Operating environment

Follow the rules and laws that apply wherever you are, and always turn off the unit whenever its use is prohibited or can cause interference or hazards. Only use the unit in its normal user position.

This unit complies with guidelines for radiation when it is used either in a normal position against your ear, or when it is at least 1.5 cm from your body. If the unit is carried close to

Li-ion battery

This product contains a Li-ion battery. There is a risk of fire and burns if the battery pack is handled improperly.

⚠ WARNING

Danger of explosion if battery is incorrectly replaced. To reduce risk of fire or burns, do not disassemble, crush, puncture, short external contacts, expose to temperature above 60° C (140° F), or dispose of in fire or water. Recycle or dispose of used batteries according to the local regulations or reference guide supplied with your product.

Protect your hearing



WARNING

Excessive exposure to loud sounds can cause hearing damage.

Exposure to loud sounds while driving may distract your attention and cause an accident.

Listen to a headset at a moderate level, and do not hold the device near your ear when the loudspeaker is in use.

Emergency calls

Important!

Mobile phones use radio signals, the mobile phone network, the terrestrial network and user-programmed functions. This means that connection cannot be guaranteed in all circumstances. Therefore, never rely only on a mobile phone for very important calls such as medical emergencies.

Warranty

In case you need support during setup or usage of your mobile phone you will find the relevant contact details on the following website:

www.swisstone.com.

If you detect a defect resulting from manufacturing and/or material faults within 24 months from purchase, please contact your dealer. The warranty does not apply for improper treatment or failure to comply with information contained in this user guide, for interference on device executed by dealer or user (e. g. installations, software downloads,...) and for total loss. Furthermore it does not apply to ingress of liquids, use of force, non-maintenance, improper operation or other circumstances caused by the user. It also does not apply to failure caused by a thunderstorm or any other voltage fluctuations.

Emergency call contacts

The phone numbers to be called when pressing the emergency call key. A maximum of 5 numbers can be saved.

1. Press **Menu** → **SOS** → **OK**.
2. Select **Numbers list** → **OK**.
3. Add at maximum 5 desired phone numbers
Note! Always inform your contacts when adding them.
4. Press **Back**.

SOS-SMS

SMS transmission on or off.

1. Press **Menu** → **SOS** → **OK**.
2. Select **Emergency SMS** → **OK**.
3. Select **Send SMS** → **OK**.
4. Select **On** or **Off** → **OK**.

your body in a case, belt holder or other holder, these holders should not contain any metal, and the product should be placed at the distance from your body specified above. Make sure that the distance instructions above are followed until the transfer is complete.

Parts of the unit are magnetic. The unit can attract metal objects. Do not keep credit cards or other magnetic media near the unit. There is a risk that information stored on them can be erased.

Medical units

The use of equipment that transmits radio signals, for example, mobile phones, can interfere with insufficiently protected medical equipment. Consult a doctor or the manufacturer of the equipment to determine if it has adequate protection against external radio signals, or if you have any questions. If notices have been put up at health care facilities instructing you to turn off the unit while you are there, you should comply. Hospitals and other health care facilities sometimes use equipment that can be sensitive to external radio signals.

Vehicles

Radio signals can affect electronic systems in motor vehicles (for example, electronic fuel injection, ABS brakes, automatic cruise control, air bag systems) that have been incorrectly installed or are inadequately protected. Contact the manufacturer or its representative for more information about your vehicle or any additional equipment.

Do not keep or transport flammable liquids, gases or explosives together with the unit or its accessories.

For vehicles equipped with air bags: Remember that air bags fill with air with considerable force. Do not place objects, including fixed or portable radio equipment in the area above the airbag or the area where it might expand.


Serious injuries may be caused if the mobile phone equipment is incorrectly installed and the airbag fills with air.

It is prohibited to use the unit in flight. Turn off the unit before you board a plane. Using wireless telecom units inside a plane can pose risks to air safety and interfere with telecommunications. It may also be illegal.

The manufacturer reserves the right in this case to charge the customer for replacement or repair. For wear parts such as batteries, keyboard or casing a restricted warranty period of 6 months is valid. Manuals and possibly supplied software are excluded from this warranty. Further or other claims arising from the manufacturer's warranty are excluded. Thus, there is no liability claim for business interruption, loss of profits, loss of data, additionally installed software by user or other information. The receipt with purchase date forms the warranty proof.

FM radio

To listen to the radio, you should connect a compatible headset which acts as an antenna.

1. Press **Menu** → **FM Radio** → **OK**.
2. Set the Volume with the side keys +/-.
3. Select a Frequency using keys **M1** and **M2**.
4. Mute and unmute the radio with .
5. Press **Options** →

Implanted medical devices

To avoid potential interference, manufacturers of implanted medical devices recommend a minimum separation of 15 cm between a wireless device and the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15 cm from the medical device.
- Not carry the wireless device in a breast pocket.
- Hold the wireless device to the ear opposite the medical device.

If you have any reason to suspect that interference is taking place, turn the phone off immediately. If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Care and maintenance

Your unit is a technically advanced product and should be treated with the greatest care. Negligence may void the warranty.

- Protect the unit from moisture. Rain/snowfall, moisture and all types of liquid can contain substances that corrode the electronic circuits. If the unit gets wet, you should remove the battery and allow the unit to dry completely before you replace it.
- Do not use or keep the unit in dusty, dirty environments. The unit's moving parts and electronic components can be damaged.
- Do not keep the unit in warm places. High temperatures can reduce the lifespan for electronic equipment, damage batteries and distort or melt certain plastics.
- Do not keep the unit in cold places. When the unit warms up to normal temperature, condensation can form on the inside which can damage the electronic circuits.
- Do not try to open the unit in any other way than that which is indicated here.

Specific Absorption Rate (SAR)

This device meets applicable international safety requirements for exposure to radio waves. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0,345 W/kg measured over 10 g tissue.

The maximum limit according to ICNIRP is 2.0 W/kg measured over 10 g tissue.

Declaration of Conformity

We hereby declare that Swisstone BBM 615 is conform to the essential requirements and other relevant regulations contained in the Directives 1999/5/EC (R&TTE) and 2011/65/EC (RoHS).

A copy of the Declaration of Conformity is available at www.swisstone.com.

- **Auto. search** – radio station scan and saving of the stations found.
- **Channel list** - list of the saved channels.
- **Manual search** – to select a frequency manually via fine tuning.
- **Loudspeaker** – Choose whether the loudspeaker shall be on or the playback shall take place via the headset only when a headset is connected.
- **Background play** – If you select **On** the radio will still be on after exiting the menu. To deactivate it, stop the background playback in the menu FM radio.

Areas with explosion risk

Always turn off the unit when you are in an area where there is a risk of explosion. Follow all signs and instructions. There is a risk of explosion in places that include areas where you are normally requested to turn off your car engine. In these areas, sparks can cause explosion or fire which can lead to personal injury or even death.

Turn off the unit at filling stations, and any other place that has fuel pumps and auto repair facilities.

Follow the restrictions that apply to the use of radio equipment near places where fuel is stored and sold, chemical factories and places where blasting is in progress. Areas with risk for explosion are often

– but not always – clearly marked. This also applies to below decks on ships; the transport or storage of chemicals; vehicles that use liquid fuel (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powder.

- Do not drop the unit. Do not knock or shake it either. If it is treated roughly the circuits and precision mechanics can be broken.
- Do not use strong chemicals to clean the unit.

The advice above applies to the unit, battery, mains adapter and other accessories. If the phone is not working as it should, please contact the place of purchase for service. Don't forget the receipt or a copy of the invoice.