 
 


PRESTIGE II

P0 , P1, P1.1, P2, P3, P4, P5, P6, P7, P8
S1, S2, S3, S4, S5, S6, S7, S8, S9
S10, S11, S12, S13, S14, S15, S16, S17
PS12, PS13, PS14, PS32, PS33, PS34, PS35,
PS36, PS37, PS38 PS41

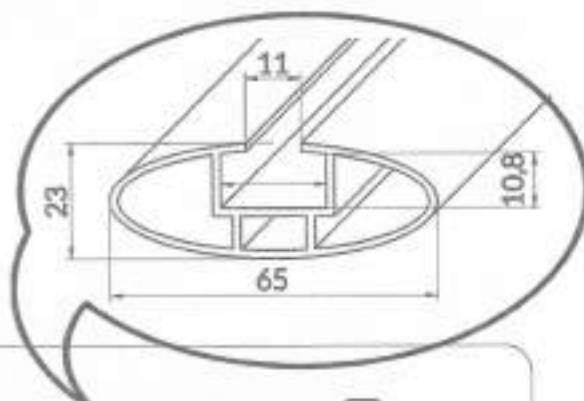

x2



x2



x2

 
 
 
 
 
 
 


 
 
 
 
 
 
x1



GB Fitting instructions
PL Instrukcja montażu
D Montageanleitung
F Instructions de montage
E Instrucciones de montaje
NL Montage-instructies
PT Instruções de Montagem
S Monteringsanvisning
FIN Asennusohje
EST Paigaldusjuhend
LAT Stiprināšanas instrukcija
LIT Pritvirtinimo instrukcijos
RU Инструкции по установке

CZ Návod na montáž
SK Návod na montáž
SLO Navodila za pritrjevanje
HR Uputa za sastavljanje
HU A felszerelés módja
GR Οδηγίες συναρμολόγησης
RO Instrucțiuni de montare
TK Uydurma talimat
DK Montering instruktion
N Monteringsveiledning
I Istruzioni per il montaggio
UA Інструкція з монтажу
BY Інструкцыя па мантажы

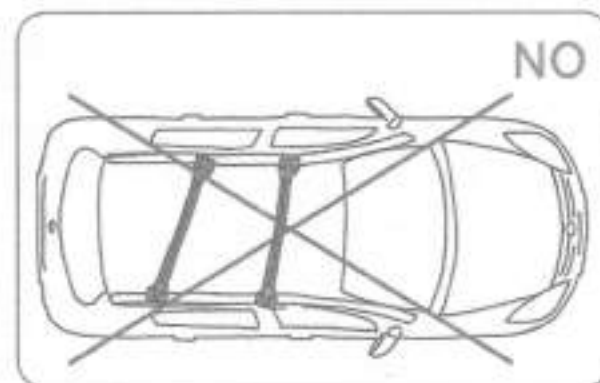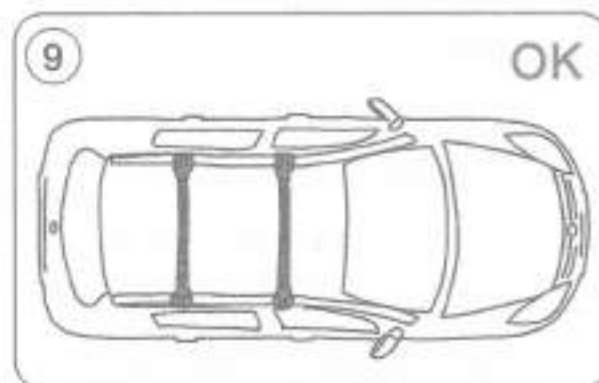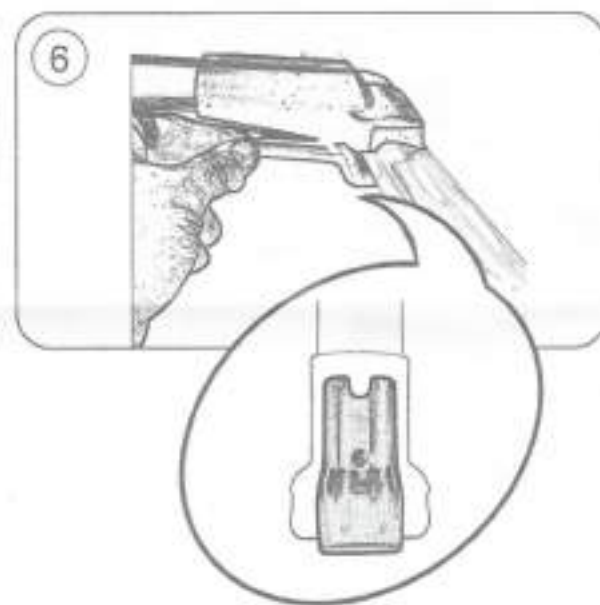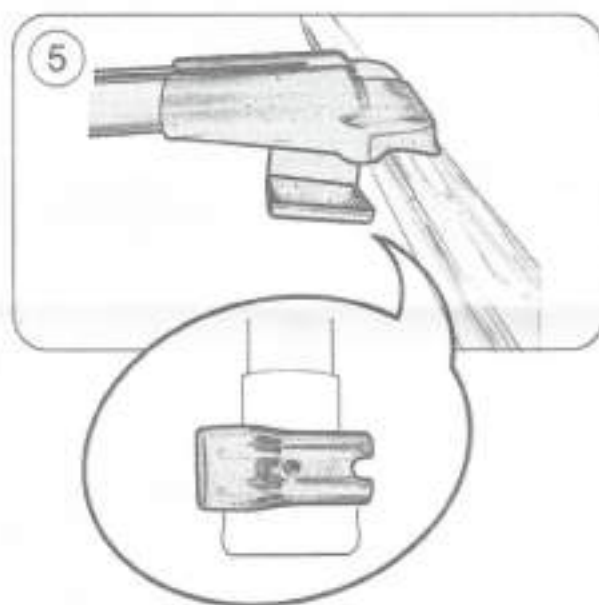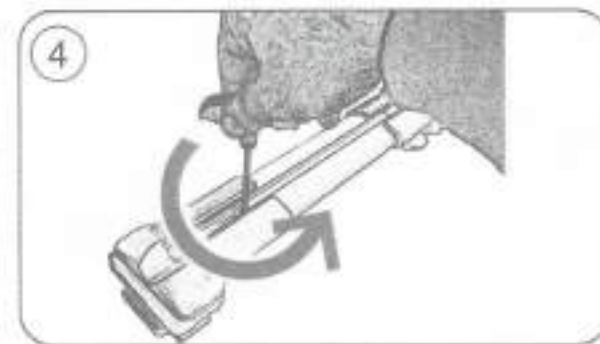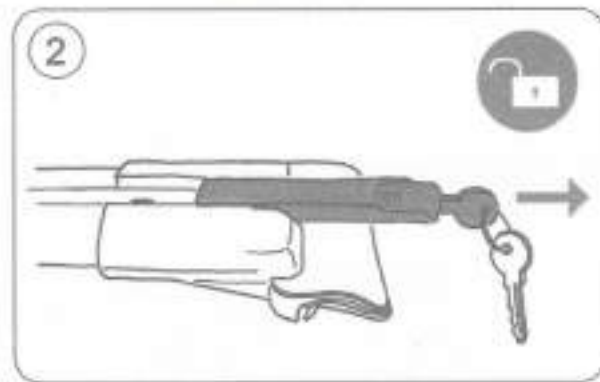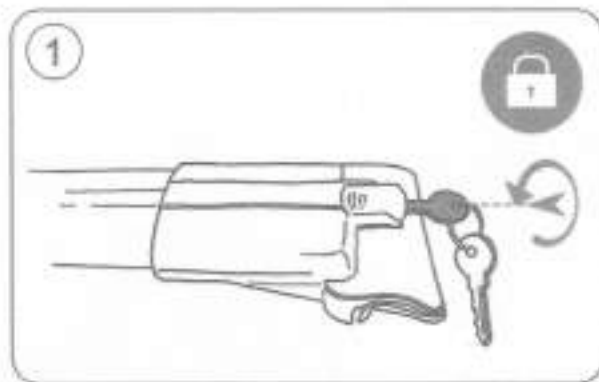

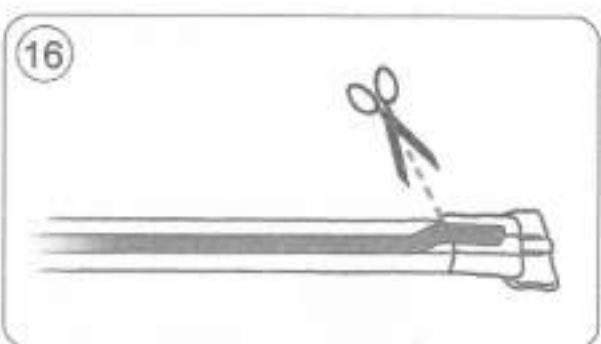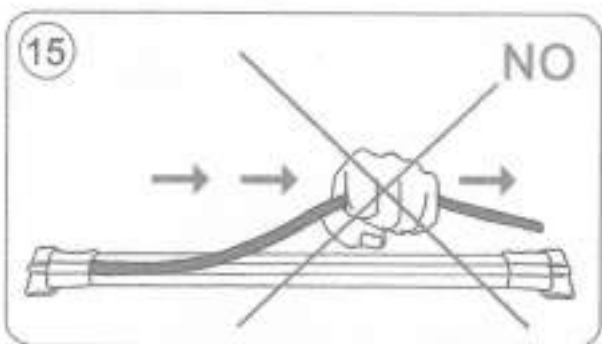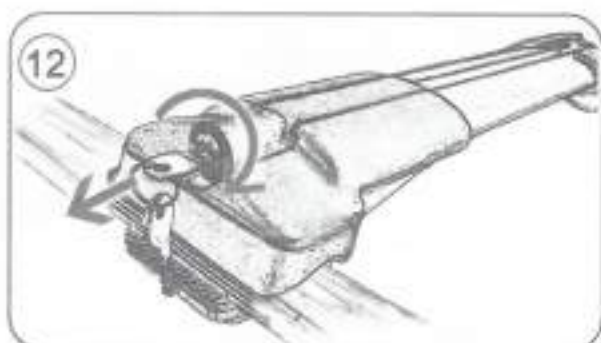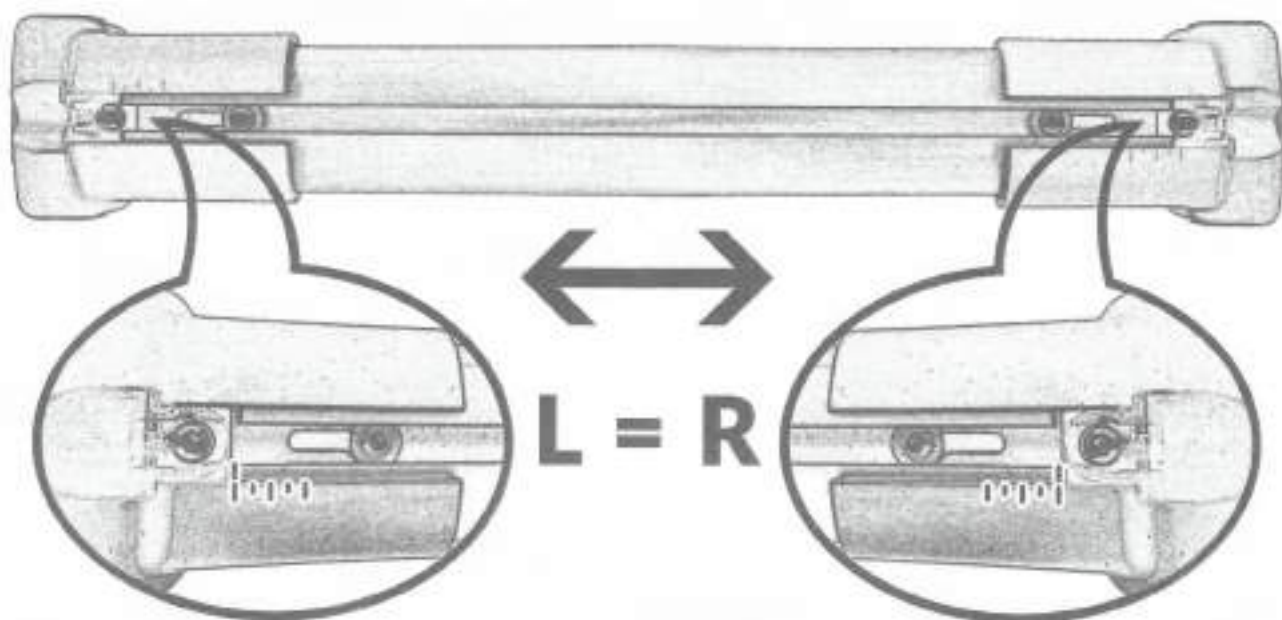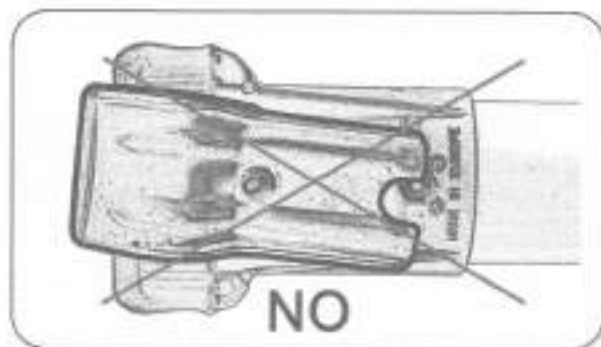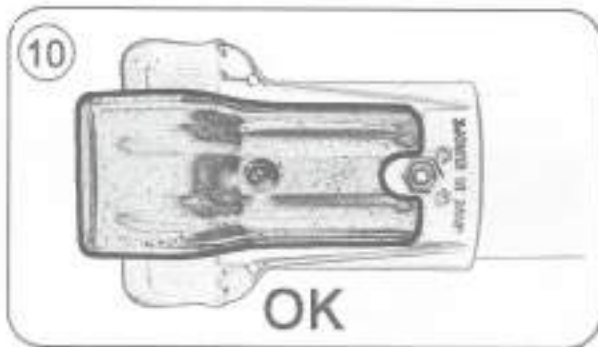



AGURI

www.aguri.pl

