

# Audrax Sport Handleiding

## 1. FIRST TIME TO USE

For first time use after unpacking, charge the case and earbuds using the USB Type-C for at least 10 minutes. Do not take the earbuds out during this time.

If the earbuds are at low battery, 20 minutes in the charging case equals up to 1 hour of playtime.

## 2. PAIRING EARBUDS TO MUSIC PLAYER

Remove earbuds from the charging case. The Audrax Sport earbuds indicator flash blue and white, a “pairing” sound is heard, and Audrax Sport earbuds is ready for pairing.

Audrax Sport earbuds is ready for Bluetooth pairing when unpack from box. Turn on Bluetooth on your device and select Audrax Sport. When “connected” sound prompt is heard, pairing process is done. Once you paired, Audrax Sport earbuds is now ready for you to enjoy your music whenever you want music. Audrax Sport remembers previously connected devices. When earbuds remove from the charging case, Audrax Sport attempts to reconnect to previously connected devices.

## 3. LOW BATTERY & RE-CHARGING (EARBUDS)

When Audrax Sport earbuds’ battery power is low, a sound “battery level is low” is heard. Please put back earbuds into charging case correctly, the charging case and earbuds’ indicators turn solid blue when earbuds’ batteries are being charged.

Earbuds can be fully charged up within 1 hour from low battery level.

## 4. LOW BATTERY & RE-CHARGING (CHARGING CASE)

If charging case’s indicator does not light up when earbuds are placed into case, the charging case is in low battery level and need to be recharged.

Charge the case using the USB Type-C cable connected to a computer or wall charger. The indicator of the charging case flashes white when charging and turns solid white when fully charged. Charging time is approximately 100 minutes from low battery level.

## 5. PLAYING MUSIC

Tap once on either one of earbuds to pause or resume playback.

Tap twice on the left earbud to play forward for next song.

Tap twice on the right earbud to play reverse for previous song.

## 6. CALL

For incoming calls, tap either one of the earbuds to accept call. To end a call, tap either one of the earbuds once.