

# **World Travel Adapter** With 3USB&Type-C

### PRODUCT OVERVIEW



**SPECIFICATIONS** 

② US/AU/UK/EU Plugs

3 LED Indicator LED solid: normal operation LED does not light Possible overload,Unpi and check status Indica USB-A1/A2/A3 Ports

USB-C Port



2 Adapter can plug into Type A,B,C,D,E,F,G,H,I,J,K,L,M,N and O outlet



**APPLICABLE OUTLETS** 

1 Adapter can accept Type A, B, C, E, F, G, I, J, L, N plugs.

### 2-POLE UNEARTHED DEVICES

The product is suitable for use with most electronic devices up to 2500W at 250V and 1000W at 100V.lt can be used with a multitude of appliances such as:Laptops,Small travel hair dryers,Travel irons,Electric fan,Table lamp,

Please check the safety data sheet or data plate on the device to find this nformation before plugging it in.





## USB DEVICES

Camera.Smartphone.Tablet.Portable Game Console. Bluetooth spe Power bank,etc.





Attentions:

HOW TO USE THE ADAPTER

Built-in multi-nation plugs can be selected to fit all outlets in differer Safety function switch ensure only one plug energized.

Please make sure that the button is reset when the button is pushed out and retracted to the bottom, and if the button is not reset, it means that the pug has not been pushed in place and will affect the normal use.

 Only one plug-type can be used at one time by sliding the knob selection, other plug-pins are locked automatically.

Recover the plug: press and hold the "USA" button to release a continue to pull up, until the plug completely pull the top and then

Use USA Plug release the button, then the button will reset and lock the plug.

Slightly press the button and slide to the down for USA plug

completely as shown.make sure the contact blades are turned

Use UK Plug

Use EU Plug

Slightly press the button and slide to the down for AUS plug completely as shown .make sure the contact blades are turn to the parallel position Recover the plug: press and hold the "AUS" button to release

and continue to pull up, until the plug completely pull the top Use AUS Plug the plug.

> Slightly press the button and slide to the down for UK plug completely as shown .Pull out the insulated ground pin from Recover the plug: press and hold the "UK" button to release

and continue to pull up, until the plug completely pull the top and then release the button, then the button will reset and lock the plug.

Slightly press the button and slide to the down for EU plug completely as shown .make sure the contact blades are turned to the parallel position. Recover the plug: press and hold the "EU" button to release

and continue to pull up, until the plug completely pull the top and then release the button, then the button will reset and lock the plug.

6



REPLACEMENT OF THE FUSE

- 1. Take out 1 2. Take out ②, and put ② into the original position of 1, the adapter could work again.
- 8. You also could change new fuse. standard: 250Vac 10A,

6.3\*25.4mm

- 1. You should remove all the device before you change the
- 2.Please confirm whether there are water flowed out from the access equipment in the power rating.
- 3.Please confirm whether the product is wet and there is water flowed out.

## CAUTION

- Always disconnect Adapter from the outlet when not in use.
   Before use please read this instruction carefully! This product does not convert voltage(AC-AC), in order to avoid possible damage to your device or other safety hazards please make sure the power outlet you intend to use has the proper voltage to run your device before using this adapter.

- Indoor use only.
  Indoo not be used permanently.
- not be used permanently.

  \*Against inserting an adaptor into another adaptor shall be provided by the manufacturer.

  \*No grounding. This product is for use with unearthed or double insulated appliances only.

**COMPATIBLE COUNTRIES** EU PLUG:

Myanmar
Nepal
Nepal
Nepal
Nepal
Nepal
Nepar
Nepar
Nepar
Nepar
Nepar
Paraguay
Peru
Philipiona
Romania
Russia
Russia
Sanegal
Somala
Sudan
Sudan
Sudan
Suiriame
Sweden
Sweden
Switze Pali AUS PLUG: A American Samo Argentina Australia China USA PLUG: A American Sar
Anguilla
Antillies
Aruba
B Bahamas
Bangladesh
Barbados
Bermuda
Bolivia
Brazil
C Cambodia
Canada
Cayman Islar
China
Colombia
Costa Rica
Cuba
E Ecuador

UK PLUG: Bahrain
Bangladesh
Beilize
Botswana
Brunei
Cameroon
Channel Isls
Cyprus
Dominica
El Salvador
Gambia
Ghana
Gibraltar
Grenada
Guatemala
Guyana
Hong Kong
Iraq
Iraq
Iraland
Isle of Man

Waste electrical products should not be disposed of with household waste.
Please recycle where facilities exist. Check with your Local Authority for recycling advice.











8 10 11 12