

## IMPORTANT SAFEGUARDS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

**READ ALL INSTRUCTIONS BEFORE USING.  
KEEP AWAY FROM WATER.**

**DANGER:** As with most electrical appliances, electrical parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. Always "unplug it" immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. If an appliance falls into water, "unplug it" immediately. Do not reach into the water.

**WARNING:** To reduce the risk of burns, electrocution, fire, or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by us.
4. Never operate this appliance if it has a damaged cord or plug. If it is not working properly, or if it has been dropped, damaged, or dropped into water return the appliance for examination and repair.
5. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
6. Never use while sleeping.
7. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
8. Do not use an extension cord with this appliance.
9. This comb is hot when in use. Do not let eyes and bare skin touch heated surfaces.

10. Do not place the heated comb directly on any surface while it is hot or plugged in.
11. Before plugging in, read the information about dual voltage contained in the instruction section of this manual.

## SAVE THESE INSTRUCTIONS THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE.

### OPERATING INSTRUCTIONS

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, the plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

This comb has automatic dual voltage. It can be used at voltages ranging from 120-240 volts AC. As an added safety feature, this iron will automatically shut off after 1 hour.

### USER-MAINTENANCE INSTRUCTIONS

This appliance does not require special maintenance or lubrication. If comb does not get hot, return for servicing.

**CAUTION:** Extreme care should be used when using this appliance on damaged, relaxed or color treated hair.

### TEMPERATURE SETTINGS

**STYLING TEMPERATURE** – depends on hair texture and condition.

**Generally for:**

Fine, bleached or hair in poor condition

**LOWER SETTINGS**

 
Normal hair

**MEDIUM SETTINGS**

Very coarse hair

**HIGH SETTINGS**

Once your comb reaches the temperature you select, it maintains it all through styling.

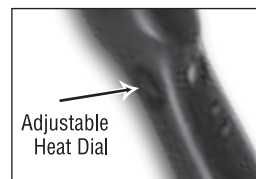


### TO USE YOUR PRESSING COMB

1. Shampoo, rinse, condition and towel dry hair.
2. Blow dry hair until completely dry.
3. Part hair into sections. Sections should equal one half the length of the comb and one half the depth of the comb.
4. Rest comb on its stand on a smooth, flat surface. To pre-heat your comb, plug into an electrical outlet. (Please refer to the Operating Instructions section of this manual for more detail).
5. Press the "ON" button and select operating temperature. The red power indicator light will begin to blink as the comb heats up. When the comb reaches the selected temperature, the red power indicator light will stop blinking and remain on.

6. Grasp a section of hair and hold away from the scalp. Insert the pressing comb into the hair section close to the scalp. The back of the comb straightens the hair, so hold the section of hair firmly against the back of the comb.

**Caution:** Do not let the pressing comb touch your bare skin or scalp. Burns may result. Do not use comb with aerosol or other flammable hair products.

 7. Slowly turn the comb away from you and move it through the entire hair strand until the hair ends pass through the teeth.
8. Repeat procedure throughout all sections of hair until entire head is complete.
9. Press the "OFF" button and allow comb to cool.

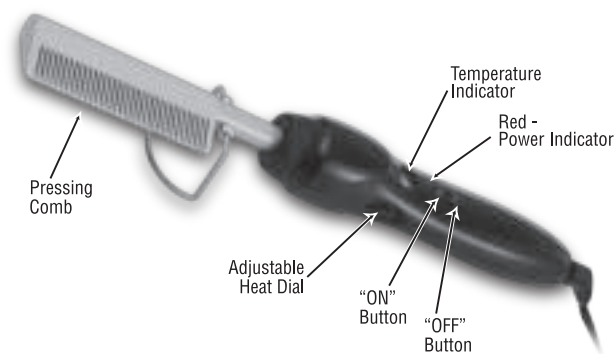

### TO CLEAN

Unplug comb and allow to cool completely. Wipe the comb with a soft, slightly damp cloth.

### TO STORE

Untwist cord before use. After use, re-wrap cord and store in a safe place. Do not wrap cord tightly around appliance. Do not hang the unit by the power cord.

## IMPORTANT SAFEGUARDS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

**READ ALL INSTRUCTIONS BEFORE USING.  
KEEP AWAY FROM WATER.**

**DANGER:** As with most electrical appliances, electrical parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. Always "unplug it" immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. If an appliance falls into water, "unplug it" immediately. Do not reach into the water.

**WARNING:** To reduce the risk of burns, electrocution, fire, or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by us.
4. Never operate this appliance if it has a damaged cord or plug. If it is not working properly, or if it has been dropped, damaged, or dropped into water return the appliance for examination and repair.
5. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
6. Never use while sleeping.
7. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
8. Do not use an extension cord with this appliance.
9. This comb is hot when in use. Do not let eyes and bare skin touch heated surfaces.

10. Do not place the heated comb directly on any surface while it is hot or plugged in.
11. Before plugging in, read the information about dual voltage contained in the instruction section of this manual.

## SAVE THESE INSTRUCTIONS THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE.

### OPERATING INSTRUCTIONS

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, the plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

This comb has automatic dual voltage. It can be used at voltages ranging from 120-240 volts AC. As an added safety feature, this iron will automatically shut off after 1 hour.

### USER-MAINTENANCE INSTRUCTIONS

This appliance does not require special maintenance or lubrication. If comb does not get hot, return for servicing.

**CAUTION:** Extreme care should be used when using this appliance on damaged, relaxed or color treated hair.

### TEMPERATURE SETTINGS

**STYLING TEMPERATURE** – depends on hair texture and condition.

**Generally for:**

Fine, bleached or hair in poor condition

**LOWER SETTINGS**

 
Normal hair

**MEDIUM SETTINGS**

Very coarse hair

**HIGH SETTINGS**

Once your comb reaches the temperature you select, it maintains it all through styling.

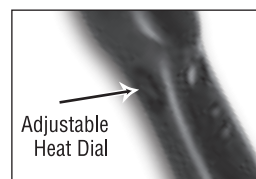


### TO USE YOUR PRESSING COMB

1. Shampoo, rinse, condition and towel dry hair.
2. Blow dry hair until completely dry.
3. Part hair into sections. Sections should equal one half the length of the comb and one half the depth of the comb.
4. Rest comb on its stand on a smooth, flat surface. To pre-heat your comb, plug into an electrical outlet. (Please refer to the Operating Instructions section of this manual for more detail).
5. Press the "ON" button and select operating temperature. The red power indicator light will begin to blink as the comb heats up. When the comb reaches the selected temperature, the red power indicator light will stop blinking and remain on.

6. Grasp a section of hair and hold away from the scalp. Insert the pressing comb into the hair section close to the scalp. The back of the comb straightens the hair, so hold the section of hair firmly against the back of the comb.

**Caution:** Do not let the pressing comb touch your bare skin or scalp. Burns may result. Do not use comb with aerosol or other flammable hair products.

 7. Slowly turn the comb away from you and move it through the entire hair strand until the hair ends pass through the teeth.
8. Repeat procedure throughout all sections of hair until entire head is complete.
9. Press the "OFF" button and allow comb to cool.

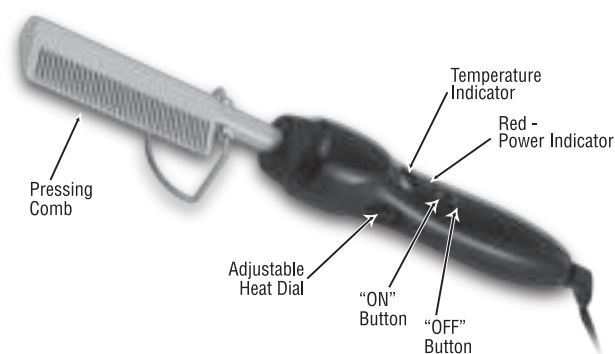

### TO CLEAN

Unplug comb and allow to cool completely. Wipe the comb with a soft, slightly damp cloth.

### TO STORE

Untwist cord before use. After use, re-wrap cord and store in a safe place. Do not wrap cord tightly around appliance. Do not hang the unit by the power cord.