

Cutter Cleaning and Maintenance

Taper Blade Cleaning



Clear up the blade with cleaning brush.

Taper Blade Maintenance



Before or after use, maintain the blade by dropping some oil on the red point places like the left picture.

Note



- 1 Please do not disassemble the product.
- 2 Water must not be used to wash the clipper, keep away from the dampness while operating.



- 3 Only use a little wet cloth or neutral liquid soap to clean the product.
- 4 Never charge the product above 40°C wet source or below 0°C environment.

• Slight heating during the operating or charging is normal case.
 • After the battery life expires, take off and throw the battery in safe manner into the designated recycling site. Never dump it randomly.

Warranty Card

 
Product Name	Rechargeable Clipper for the Professional	Warranty Period
Product Model		Performance time after the performance time
Purchase Date	From (MM/YY) To (MM/YY)	

Customer	ADD	Name	
	ADD	No.	
Reseller	Name	Name	
	No.	No.	

Product Assurance

1. This product has been manufactured through the precise quality management and inspecting process.
2. In case of any failure during the normal operating, customer may send to the retailer or maintenance center for free-of-charge maintenance.
3. Battery and blade are quick-wear parts excluding from the warranty, which shall only be provided upon the payment.
3. Free service shall not be provided in either case below:
 - A. Any damage caused by the negligence and transformation that is not recognized by the manufacturer.
 - B. Any damage caused by misuse, inadvertent use or accident.
 - C. Any damage caused by natural disaster and abnormal voltage.
 - D. Any damage caused by non-compliance with the rules as stated in this operating manual.
4. This Warranty Card shall be the only proof of warranty, while the product maintenance against voice shall not be achieved.

Components



Components



Parameters

Model	Standard Voltage: 3.7V, 30
Production Year (China)	Battery Type: Lithium
Production Year (China)	Charge time: 2h
Production Year (China)	Operating time: 2h
Production Year (China)	USB (connected with adapter) time: 2.5h
Production Year (China)	Power: 10W

Use the Rechargeable Mode




- 1 Insert the charger into the top of clipper, connect to the power to start charging.
- 2 The red crystal indicator lights up, indicating that it starts charging.

Note: when the power is switched on after charging, the indicator light up to indicate that the charging time is finished or almost to be replaced automatically.
 The battery will auto-power off if power is not used 30 minutes.

Fixed-length Function

- A. Fixed-length 1.5, 3, 6, 9mm, 4 lengths adjustment to control hair length.

- 1 To determine the length of haircut.
- 2 To select the appropriate limit comb.

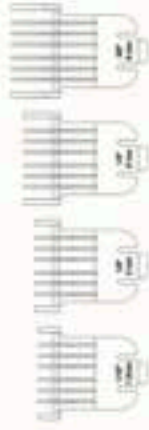

- Mount the limit comb:
- 1 Align the limit comb with the blade edge.
 - 2 Slightly forward push to mount it. Disassemble the limit comb. Just pull hard the limit comb.



Blade Removal & Installation

Blade Removal



- Such as a screwdriver with the rotary cutter head under part, turn it with another hand to hold it.

Blade Installation



- The blade spring is aligned with the spring A on the blade head B. Then, just adjust the screws, and hold them.



- Tighten the screw with a screwdriver to ensure the head of the blade is not set off.

Warm tip: do not disassemble the blade head without any skill.

Operating Manual

Professional Clipper

DESIGNED FOR THE PROFESSIONAL

1971

