

6. THERE ARE 4 AREAS CORRESPONDING TO THE MEMORY CARD, EACH AREA CAN SAVE 2043 BLOCKS. PRESS THE SWITCH BUTTON TO CHANGE AREAS.

ATTENTION

- ! DON'T KEEP "THE MEMORY CARD" IN HOT, DARK OR SUNSHINE PLACE.**
- ! DON'T THROW, DROP OR APPLY STRONG FORCE TO THE MEMORY CARD FOR WII CONNECTION.**
- ! DON'T PUT ANY HEAVY OBJECTS ON THE MEMORY CARD.**
- ! DON'T CLEAN "THE MEMORY CARD" WITH ANY LIQUID SUBSTANCE.**

2043 BLOCKS × 4



Please Recycle

