

fantastic

Foldable Playhouse



Art No.75951

EN ASSEMBLY INSTRUCTIONS

GR ΟΔΗΓΙΕΣ ΣΥΝΑΡΜΟΛΟΓΗΣΗΣ

EN ИНСТРУКЦИЯ ПО СБОРКЕ

DE MONTAGEANLEITUNG

IT ISTRUZIONI DI MONTAGGIO

EN INSTRUCTIONS DE MONTAGE

NL MONTAGE INSTRUCTIES

PT INSTRUCOES DE MONTAGEM

AR تعليمات التركيب

CZ POKYNY K MONTÁŽI

ES INSTRUCCIONES DE MONTAJE

SK NÁVOD NA MONTÁŽ

PL INSTRUKCJE MONTAŻU




WARNING:

Adult assembly required

Contains potentially hazardous sharp points.

EN-71 AS/NZS CCPSA ASTM F963

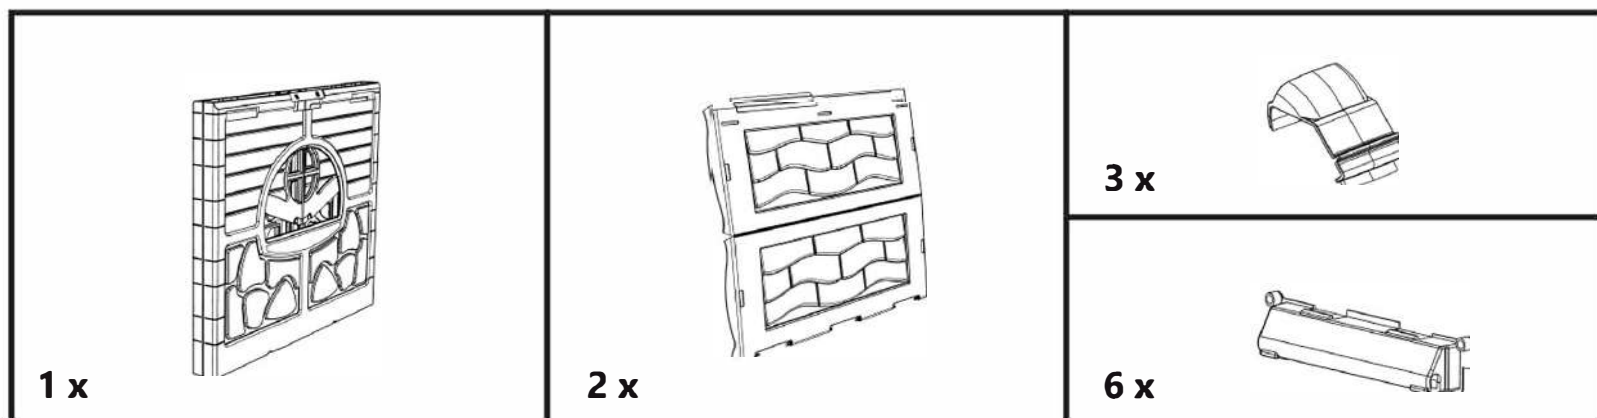

EN



INSTRUCTIONS AND RECOMMENDATIONS FOR USE

Please follow the instruction and keep for future reference.

WARNINGS!

- For indoor/outdoor use.
- Only for domestic use.
- Supervise children playing at all times.
- Maximum weight limit: up to 55lbs / 25Kg.
- The toy must be assembled by adult.
- THIS PRODUCT IS INTENDED FOR USE BY CHILDREN FOR AGES OVER 2 YEARS.

FOR SAFETY PURPOSES:

- Do not climb onto this toy.
- Place the toy on a level surface at least 2 meters from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Do not place on concrete, asphalt or any other hard surface.
- Do not place near slopes, steps, water other hazards.
- Do not let children play near access to roofs or other dangerous areas not considered adequate for this kind of toy.
- The product could only be folded or unfolded by adult.
- Please remove all packaging materials before giving the product to a child.

MAINTENANCE:

- Check the condition of the product before giving to children. Dispose the product immediately when it is broke, missing parts and sharp edges. Replace as needed.
- **At the beginning of each play season and regularly:** Check all parts for wear or other deterioration. Replace as needed.
- Do not modify the product.
- Clean using soapy water, rinse with clean water and dry with a soft cloth.
- When not in use (i.e. during winter or bad weather) disassemble and store the product indoors.