 
 


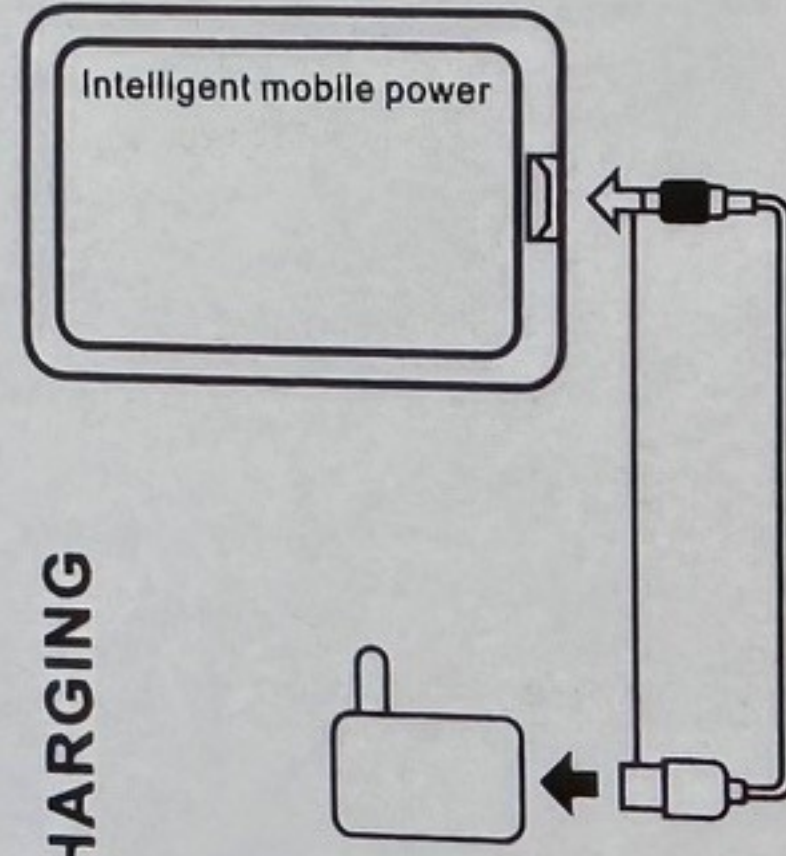

CHARGING

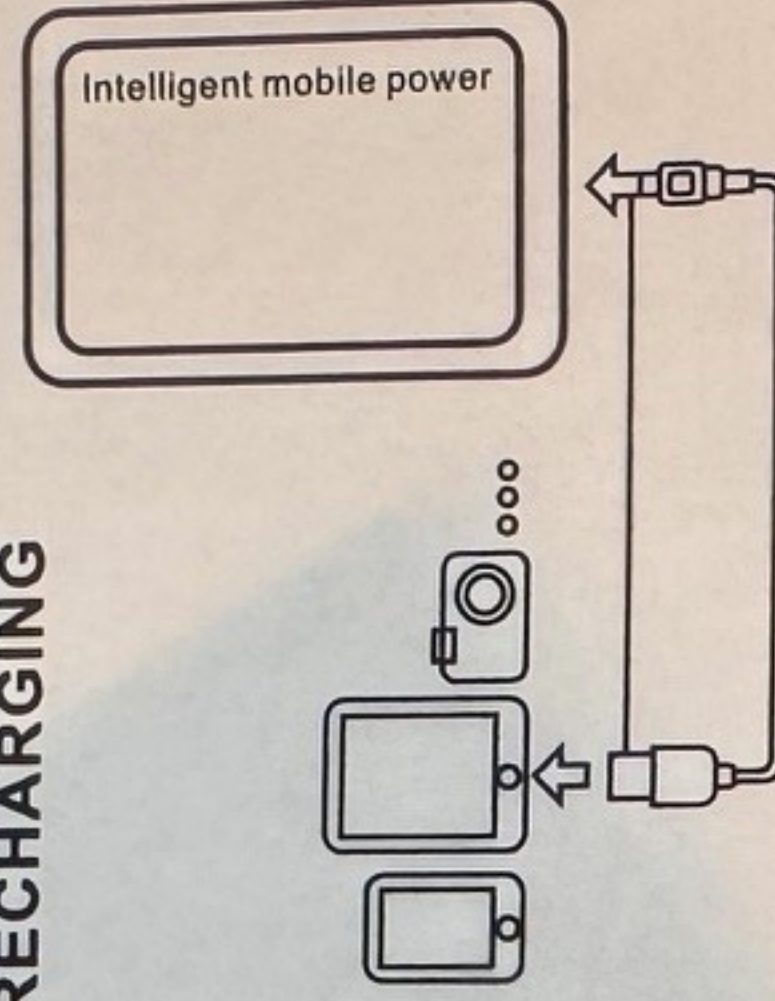

RECHARGING

 


 
 
 
Supports:

Smartphones, Tablet PCs, PSP, MP4, Bluetooth devices, Camcorders, Cameras, Other digital products

Caution

1. It is normal that the casing gets warm during charging and the Power Bank will gradually cool down to room temperature after use or fully recharged.
2. Do not use the Power Bank at any application environment which is enclosed, extremely humid or hot, or close to an oven and open flame, or under direct sunlight to prevent to overheating. Any warranty or return for any damage to the battery or the internal components are not accepted.
3. This appliance is no intended for use by young children or confirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance.
4. Do not wet, burn, modify disassemble, open, drop, crush, puncture or ruin the Power Bank casing and the internal battery.

 Do not dispose of electrical appliance as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

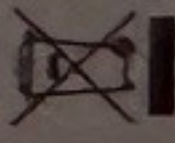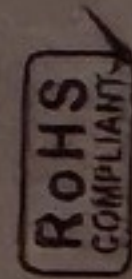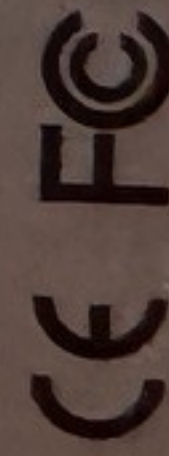

Made In China