

Wireless Portable Electric Garlic Masher

SR01 Operating Instructions



Please read these instructions carefully before use.

Product Features

- This product features a unique appearance, all body waterproof, and wireless portable design.
- With the double electronic induction safety switch, users can control the grinding degree of food or oil by pressing the switch.
- With the food grade PC blender jar and food grade SUS304 stainless steel blades, the product is easy to clean and can be sterilized at high temperature, which is healthy and clean.
- Detachable parts can be washed by water directly.

Product Structure



Package Contents

NO.	Name	Quantity	Unit	NO.	Name	Quantity	Unit
1	Main engine	1	N/A	4	USB charging cable	1	N/A
2	Blade	1	N/A	5	Instructions	1	N/A
3	Blender jar	1	N/A	6	Warranty Card	1	N/A

Product Specifications

Product name	Wireless Portable Electric Garlic Masher
Product model	SR01
Rated capacity	100ml
Battery/Voltage	3.7V
Rated operational current	1.2A
Rated power	30W
Running time	<30S
Rated input voltage	5V
Rated input current	1A
Executive standard	GB4706.1-2005 GB4706.30-2008

Instructions

- For the first use, please fully charge the main engine. After the main engine is fully charged, the blue indicator light is always being on. Then clean the main engine, blades and blender jar.



- Insert the blades into the shaft of the blender jar, and then fill the blender jar with washed ingredients up to the maximum food limit.



- After the food is put into the blender jar, install the main engine along the two slots of the jar. When the main engine is installed, the blue indicator light flashes 5 times. Then press the inching switch to process the food. Do not overload the jar; otherwise the blades may not rotate when it is started. Please take out some food properly and continue the processing.

Electrical Schematic Diagram



Attention

- This product is a portable food processor. Please charge it before the first use.
- Before adding ingredients, make sure the blades are in place and running smoothly.
- Do not use sharp objects to scratch the machine.
- Do not overload the food processor.
- Do not place the blender in microwave oven or refrigerator for freezing, so as to avoid breaking or damaging the blender. The maximum temperature resistance of the blender jar is 100 °C, and therefore the jar can be sterilized with boiling water.
- Do not use the product to process very hard ingredients such as coffee beans, soybeans, Donkey hide glue, rice, ice cubes or other frozen food.
- Do not touch any detachable accessories such as the blades or the motor with your fingers while the blender is running, to avoid personal injury or damaging the product.
- Never use the blender for more than 30 seconds without interruption at a time. Let the blender rest for 2 minutes between processing cycles. After working for 3 processing cycles, let it cool down before next use, so as to guarantee longer service life.
- Do not touch the blades, for they are very sharp. Hold the cutter bar on the blades while removing or installing.
- Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the product. The product can be cleaned directly with water.
- Never clean any part of the product in the dishwasher.
- This product should be stored in a place not easily accessible to children. This product is not

intended for use or play by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.

13. This product is for household use only, not for commercial use.
14. Note: Be careful with the blades when removing them, and emptying and cleaning the jar.

Fault Analysis

Fault symptom	Indicator light	Cause analysis	Troubleshooting
After the main engine is installed, the machine does not work after pressing the switch.	The red and blue lights flash alternately	The main engine and the blender jar are not connected perfectly.	Reconnect the main engine and the blender jar.
After pressing the switch, the machine does not work.	A red light is always being on	Battery is low	Change the main engine.
After pressing the switch, the machine does not work.	A blue light is always being on	The motor is damaged or stuck	Turn the motor shaft, if it still does not work, please send to nearest maintenance center for inspection.
The main engine cannot be charged.	The light isn't working	Check the charging cable is loose	Replace with a new charging cable.
After using the product for the first few times, the motor gives off an unpleasant smell.		It is a normal phenomenon for the new motor to initially used.	Replace with a new charging cable.
The blades get stuck.		The blades are entangled or stuck by ingredients.	Remove the main engine, take out the ingredients, and cut the ingredients into small pieces to put less ingredients.

Note: The above are common fault analysis and troubleshooting methods. For other faults, please contact the dealer, or directly go to the maintenance center designated by the company for maintenance and inspection. Do not disassemble and repair yourself.

Cleaning

- Please clean the main engine, blades and blender jar immediately after using the product.

Environmental Protection List

The product used in this table

Wireless Portable Electric Garlic Masher

Statement of Hazardous Substances

According to Making Requirements for Restricted use of Hazardous Substances in Electronic and Electrical Products GB/T 26572-2011 (also known as China RoHS 2.0), the names and contents of hazardous substances that may be contained in this product are listed in the following part.

The form is compiled according to SJ/T1364

O : indicating that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirements specified in GB/T 26572(IEC62321).

X : indicating that the content of the hazardous substance in at least one homogeneous material of the part exceeds the limit requirements specified in GB/T 26572, but for the part marked with "X" in the above table, the content of hazardous substance exceeds the limit requirements, for there is no mature alternative technology in the industry.

Environmental Protection Use Period

The mark on the product body indicates that the environmental protection use period is 30 years. The environmental protection period of electronic and electrical products refers to the period when the toxic and hazardous substances / elements contained in the electronic and electrical products will not leak or mutate, and the users of the electronic and electrical products will not cause serious pollution to the environment or serious damage to human body and property when using the electronic and electrical products.

Please use the product according to the instructions during the environmental protection use period.

Suggestive Notes to Regulations on the Management of Recycling and Treatment of Waste Electrical and Electronic Products

In order to better care for and protect the earth, when users no longer need this product or the product service life has ended, please comply with the national laws and regulations on recycling of waste electrical and electronic products, and hand it over to the local manufacturers with national recognized recycling qualification for recycling.

Environmental Protection List

In accordance with the provisions of the law of the People's Republic of China on the Administration of the Use of Hazardous Substances in Electronic Products, the names and contents of hazardous substances / elements that may be contained in electronic and electrical products are listed in the following table.



Toxic and Hazardous Substances or Elements

Parts	Toxic and Hazardous Substances or Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Chromium hexavalent (Cr VI)	Polybrominated biphenyl (PBB)	Polychlorinated dibenzodioxin (PCDD)
Shaft	0	0	0	0	0	0
Main engine-outer	0	0	0	0	0	0
Measuring scale	0	0	0	0	0	0
Leads	0	0	0	0	0	0
PCB board	0	0	0	0	0	0
Battery	0	0	0	0	0	0
Motor	0	0	0	0	0	0
Blades	0	0	0	0	0	0
Charging cable - white plastic coating of the connector	X	0	0	0	0	0
Charging cable - white coating	X	0	0	0	0	0
Charging cable - opening of the white insulation	X	0	0	0	0	0
Charging cable - coating of the plug	X	0	0	0	0	0
Charging cable - soldering tin	X	0	0	0	0	0
Motor - soldering tin	X	0	0	0	0	0
PCB board - soldering tin	X	0	0	0	0	0
PCB board - chip resistor	X	0	0	0	0	0
PCB board - soldering tin of metal PCB board	X	0	0	0	0	0

Product Warranty

Product Warranty Card

User Information

Name _____	Telephone _____
Email _____	Postcode _____
Detailed address _____	_____

Product Information

Product name _____	Purchase date _____
Warranty reason _____	_____

- Before warranty, please refer to the **Warranty** chapter in the instructions and confirm whether you meet the conditions of free warranty.
- For free/paid warranty customers, it is required to contact with the dealers from whom the product was purchased.
- For customers who purchased the product from offline stores, invoices on the date of purchase are required for maintenance. For online customers such as from Taobao, Jingdong, etc., please confirm relevant warranty matters with the dealers.