 


# USER'S GUIDE

## STEAM MOP

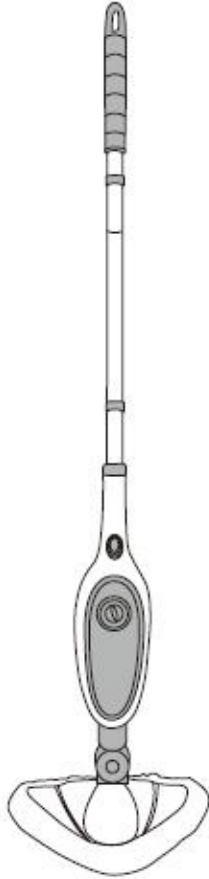

### IMPORTANT SAFETY INFORMATION

Model: ALE-006

---

**READ ALL INSTRUCTIONS BEFORE USING STEAM CLEANER. USE  
ONLY AS DIRECTED.**

# **IMPORTANT SAFEGUARDS**

## **PLEASE READ CAREFULLY**

When using an electric appliance, basic precautions should always be followed, including the following:

**READ ALL INSTRUCTIONS BEFORE USING THIS STEAM CLEANER**

**WARNING – DANGER OF SCALDING**

**CAUTION - To reduce the risk of fire, electric shock, or injury:**

1. To provide continued protection against risk of electric shock, connect to properly grounded outlets only.
2. Check that the main voltage corresponds to the voltage indicated on the rating label, see specifications is :  
220-240V, 50/60Hz, 1200W or 110-120V, 60Hz, 1200W
3. This product is designed for domestic use only.
4. Do not use outdoors.
5. To disconnect the unit, turn the power switch(O/I) to the “OFF” position, then remove plug from wall outlet.
6. Do not allow to be used as a toy. Young children should be supervised to ensure that they do not play with the appliance. Close attention is necessary when used near children, pets or plants.
7. Never direct steam towards people, animals or plants.
8. The liquid or steam should not be directed towards equipment containing electrical components, such as the interior of ovens.

9. Do not expose to rain.
10. Do not immerse the Steam Mop into water or other liquids.
11. Use of attachments not provide or sold by the manufacturer or authorized by sellers may cause fire, electric shock or injury.
12. Stop using the steam mop if you observe water leakage, and contact a qualified technician.
13. Do not use the steam mop in enclosed spaces that are filled with flammable, explosive or toxic vapor such as paint thinner or oil-based paint.
14. Do not use on leather, wax polished furniture or floors, unsealed hardwood or parquet floors, synthetic fabrics, velvet or other delicate steam-sensitive materials.
15. Do not use space heating purposes.
16. Do not touch hot surfaces.
17. Do not place on or near a hot gas or electric burner, or in a heated oven.
18. Do not use with damaged cord or plug. If the steam mop is not working as it should, has been dropped, damaged, left outdoors, or immersed into water, return it to the distributor before continuing use. If the supply

cord is damaged, it must be replaced by the manufacturer or a similarly qualified person to avoid a hazard.

19. Do not pull or carry by cord, use cord as a handle, close a door on the cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
20. Never force the plug into an outlet.
21. Do not use extension cords or outlets with inadequate current carrying capacity.
22. Do not handle plug or steam Mop with wet hands or operate without shoes.
23. Do not insert any objects into openings. Do not use with any opening blocked.
24. Do not use without floor cloth in place. Do not use without water in the water tank.
25. Do not use appliance for other than its intended use.
26. Care should be taken when using appliance due to emission of steam.
27. To avoid circuit overload, do not operate another appliance on the same socket(circuit) as the steam cleaner.
28. Unplug the appliance after use and before carrying out

user maintenance on the appliance.

29. When using on stairs use extra caution.
30. Store your Steam Mop indoors in a cool, dry area.
31. Keep your work area well lighted.
32. Never put hot water or any other liquids such as aromatic, alcohol-based, or detergents products into the steam mop water tank. This will make the operation unsafe and damage the unit.
33. Never block the steam openings of the product or place it on a soft surface, where the steam openings may be blocked. Keep the steam openings free of lint, hair, and other potential obstructions.
34. Use only as described in this manual. Use only manufacturer's recommended accessories.
35. This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
36. Children shall not play with this appliance.
37. Do not leave the steam mop unattended while plugged

 
 
in. Unplug after each use, to safety unplug, grasp the plug and gently pull, do not unplug by pulling on the cord.

- 38. The appliance is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- 39. Keep the appliance out of reach of children when it is energized or cooling down.
- 40. The filling aperture shall not be opened during use.

**SAVE THESE INSTRUCTIONS**

# KEY FEATURES OF THE STEAM MOP

- A) Handle
- B) Power Switch(O/I) with ON/OFF Light
- C) Main Body
- D) Water Tank
- E) Water Tank Cover
- F) Power Cord
- G) Upper Cord Wrap
- H) Lower Cord Wrap
- I) Mop Head
- J) Lock Button(On swivel joint)
- K) Handle Lock Button
- L) Microfiber Cloth Pad
- M) Carpet Glider
- N) Measuring Cup

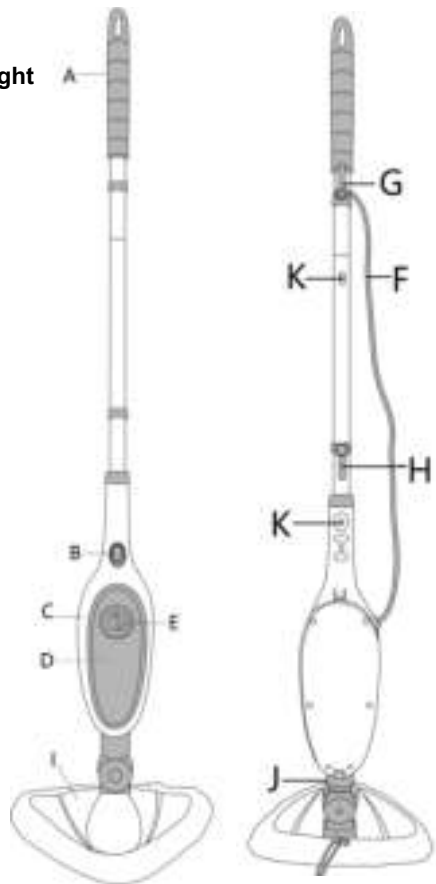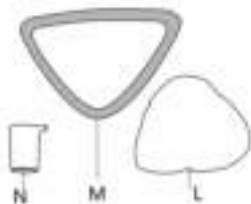

The following information is provided for service by a qualified electrician only:

Rated voltage:

220-240V, 50/60Hz, 1200W or 110-120V, 60Hz, 1200W

**This appliance must be grounded. Use only the proper type outlet when plugging in the appliance, do not attempt to override the ground wire feature.**

Thank you and congratulations for choosing the Steam Mop. The Steam Mop is a new way of cleaning that is effective and far more hygienic than conventional methods. The Steam Mop achieves a high degree of hygienic and increasing cleansing power by converting water into steam using a microfiber floor cloth enhancing absorbency. When contact is made with floor surfaces, dirt and grime can be eliminated in a matter of seconds. Since the Steam Mop uses the active power of steam without the use of detergents or soap, it is environmentally friendly.

When used correctly the Steam Mop can kill dust mites and some types of bacteria. To disinfect a specific area, position the steamer over the area for a minimum of eight seconds. The steam temperature will reach to approximately 90-100°C (194-212°F). Use this procedure to disinfect floors in bathrooms, showers, around kitchen counters, pet sleeping quarters, etc.

## **INSTRUCTIONS FOR USE**

The Steam Mop is designed to thoroughly clean floor surfaces, such as marble, ceramic, stone, linoleum and parquet.

 
**WARNING:** On surfaces that have been treated with wax, the wax may be removed by the heat and steam action. Do not use on unsealed wood floors or let unit stand on any wood floor for an extended period of time. This could cause the wood grain to rise. When using on vinyl, linoleum or any other heat sensitive floors, use extra caution. Too much heat can melt down glue in the flooring. It is therefore recommended that a sample cleansing be carried out on an isolated area of the floor. It is also recommended that you check the use and care instructions of the surface from the floor manufacturer to ensure suitability to steam cleaning.

Steam Mop uses tap water. Residents in areas with hard water, should use distilled water for better performance.




## HOW TO ASSEMBLE AND USE

- 1) Attach the Mop head to the Main Body as follows: Press the lock button (on the swivel joint) and insert the Swivel Joint into designated hole in the Main Body until it locks in place with the Lock Button on the swivel joint.

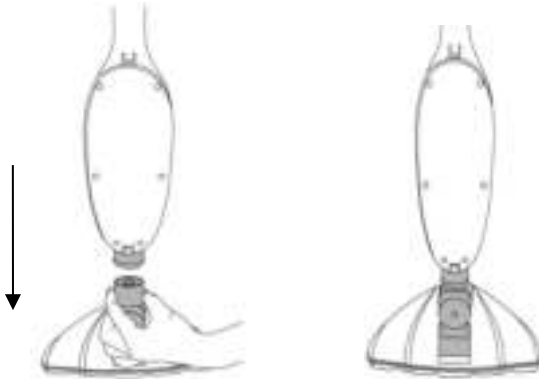


 - 2) Assemble the handle and insert it down into the body until it locks in place with the Lock Button on the Main Body (you will hear a clicking sound).

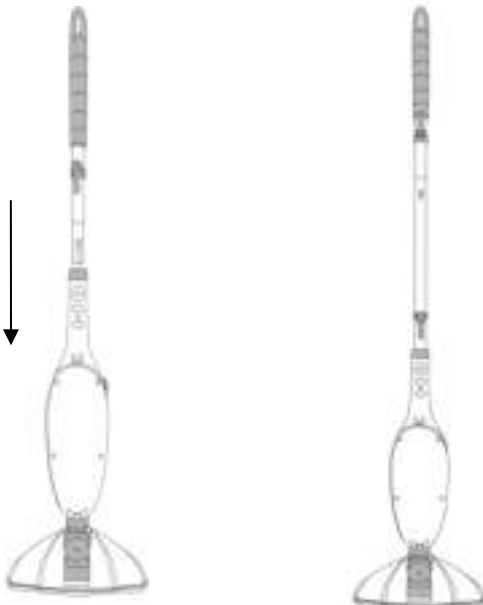


3) Place the Microfiber Cloth Pad onto the mop head.

 4) Fasten the Microfiber Cloth Pad by pulling the cord while pressing on Toggle.

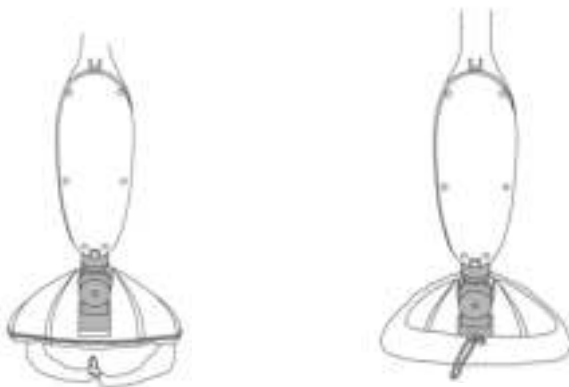


 5) When using Steam Mop on carpets, place the mop head (with microfiber cloth) over the Carpet Glider.

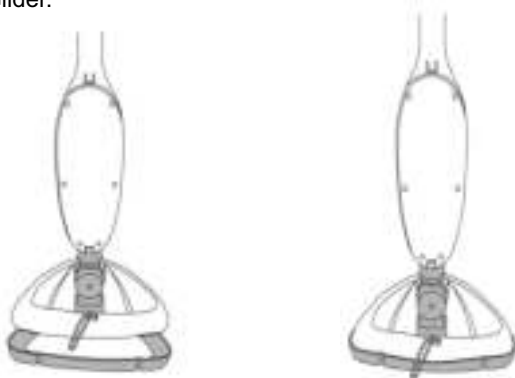

NOTE: Do not operate without either Microfiber Cloth in place.

 6) Hold the Mop at a 45° angle, open the water tank cover and add the water in the tank

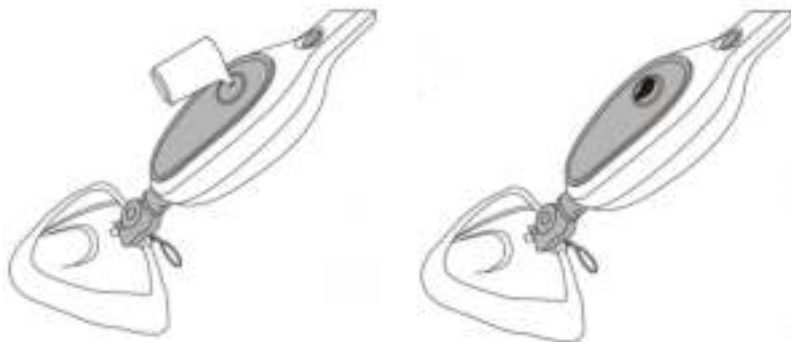

7) Once the unit have been fully assembly and filled with the water,plug in the Power Cord to a grounded electrical outlet. Power Switch(O/I) is in the OFF(O) position,turns The Power Switch(O/I) to the ON(I) position. Approximately 20 seconds, the Mop will Start emitting steam . To stop emitting steam, turns the Power Switch(O/I) to the OFF(O) Position.

**It is normal that a little water maybe ejected from nozzle before steam starts**

8) Slowly pass over surface to be cleaned. It is recommended to sweep or vacuum floor prior using the Steam Mop.

NOTE: It is recommended that another high wattage appliance is not operated on the same circuit to avoid a circuit overload.

CAUTION: To sanitize an area of your floor, leave the Steam Mop over area for a minimum of 8 seconds, but no longer than 15 seconds. Leaving the Steam Mop in a stationary position for a longer period than recommended may cause the build up of a pale residue. This residue can be removed by using a decalcifying product or with a few drops of vinegar. (See troubleshooting guide)

WARNING: NEVER run the Steam Mop without water. NEVER direct steam at any person or animal. Use the Steam Mop on sealed hard floor only.

9) When you finish your cleaning, unplug Power cord from outlet, empty the Water tank, carefully remove the cloth Pad from the head, wind Power Cord around the Cord Wrap and store it upright in a dry area or hang by the storage hook.

**CAUTION:** The Cloth Pad may be very hot.

Not for space heating purpose.

**WARNING:**

- 1) Don't use the steam mop without Microfiber Cloth Pad on the mop head
- 2) Only attach the Carpet Glider to the Mop head when you clean the Carpet.  
Carpet Glider is not used for the floors except Carpet.
- 3) When clean any sealed wooden floors,especially sealed lacquered floor, use extra caution, pls clean small areas as an experiment in order to avoid scratching and damage of floors.

# CLEANING AND MAINTENANCE



## **BE SURE THAT THE UNIT DISCONNECTED FROM THE POWER OUTLET WHEN PERFORMING CLEANING**

Drain the remaining water in the tank and clean the tank after every use.

### ***How to decalcify the Water Tank interior:***

To clean calcium deposits that build up inside the Water Tank, add one or two tablespoons of white vinegar to a full Water Tank, close the Water Tank cap and shake the contents. **DO NOT TURN THE STEAMER ON.**

Let the unit sit for a few hours. Then, empty the Water Tank and refill with clean water and empty until it rinses clear.

## **DO NOT IMMERSE THE STEAM MOP IN WATER.**



### ***Cleaning procedure to remove lime scale***

If your STEAM MOP begins to produce steam more slowly than usual or stops producing steam, you may need to remove lime scale. Lime scale can develop over time on the metal parts and greatly affect mop performance.

It is necessary to remove lime scale on a regular basis every 25-50 times you use a full tank of water or at least once a month, especially in areas with hard water.

The frequency of lime scale removal depends upon the hardness of your tap water and how often you use the steam mop.

**The STEAM MOP uses tap water. However, in areas with hard water, Distilled water should be used for better performance.**

 
To remove lime scale from the STEAM MOP ,please follow these procedure:

***By using cleaning solution***

- 1) Prepare a solution of 1/3 white vinegar and 2/3 tap water and add to the water tank.
- 2) Secure and position the unit to ensure steam released is aimed away from the floor or surrounding objects and surfaces.Plug the unit in,turn the unit ON by pressing the Power Switch (O/I)and allow the unit to produce steam until the vinegar/water solution is used up.
- 3) Repeat the above procedures as many times as necessary until a normal steam flow rate is achieved.
- 4) Fill the Water Tank with fresh water and rinse out.
- 5) Fill the Water Tank with fresh water, release steam through the system until the Water Tank is empty.



**Do not leave the steamer unattended during the lime scale removal process and /or while in use.**



Perform a test cleaning on a suitable isolated area after each lime scale removal to ensure that there is no debris in the system.



**DANGER OF SCALDING**

***Microfiber cloth care:***

Machine wash at 60°C (140°F)

Do not bleach

Do not use fabric softener

# TROUBLESHOOTING GUIDE

TO REDUCE THE RISK OF FIRE,ELECTRIC SHOCK OR INJURY ,UNPLUG APPLIANCE FROM OUTLET BEFORE SERVICING.

Problem	Possible Cause	Solution
THE UNIT DOES NOT POWER ON	The unit is not plugged in or turn ON	Make sure the unit is plugged into a proper outlet and the switch is ON(I)
REDUCED STEAM OR NO STEAM	Water Tank empty	Fill Water Tank
	Blocked Steam Nozzle	Remove Mop Head and Clean the Nozzle.
	Lime scale deposit	Follow Cleaning procedure In this User's Guide to remove lime scale.
Pale residue left on the floor.	Leaving the Steam Mop in a stationary position for a longer period	Can be removed with household white vinegar or a decalcifying product. Alternatively reheat the area for one minute and residue should be removed. <b>CAUTION:</b> Do not overheat area.
THE CLEANING CLOTH BECOMES WET	The cloth gets saturated with water	Remove wet cloth and replace with a new cleaning cloth or allow cloth to cool, then wring out and reattach.

**WARNING: Danger of Scalding!**



Recognized mark of the steam release



**USER'S GUIDE**