

LIVOO
Feel good moments
User manual

Electric retro kettle



Reference : DOD180
Version : 1.4
Language : English



User manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

Safety Advices

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE AND SAVE IT FOR ANY FURTHER NEED.

Incorrect operation or usage is likely to cause damage to the appliance and injure the user. Make sure that you follow all safety instructions. Only use this appliance for the purpose for which has been designed; we decline all responsibility in the event of damage due to incorrect use or bad handling.

1. Before use check that the voltage of your wall outlet corresponds to the rated voltage manner.
2. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
3. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
4. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
5. Children shall not play with the appliance.
6. Keep the appliance and its cord out of reach of children aged

less than 8 years.

7. The appliance must not to be immersed. Never place it into the dishwasher.
8. Never let the machine operate while unattended.
9. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard (*).
10. Never use the appliance outdoors and always place it in a dry environment.
11. Always remove the plug from the socket in case of any malfunction, before filling or after use, or before cleaning.
12. Do not allow the appliance or its supply cord to touch hot surfaces or to come into contact with any heat sources.
13. To reduce the risk of electric shock, never operate this product with wet hands.
14. Never touch the hot surface of product. Use the handle only or the button.
15. Never unplug or move the appliance by pulling the cord. Do not wind the cord around the appliance or twist it
16. Stand the appliance on a stable, flat surface.
17. Never let the cord of the kettle from table pending.
18. Never use your kettle without water in it. Only use fresh and cold water.
19. Never fill the water tank beyond the Max. Level. Do not use your kettle in case of overflowing.
20. If the kettle is overfilled, boiling water may be ejected.
21. Never put the jug in an oven (including microwave oven) to warm up water.

22. Do not forget that the temperature of water prepared is high, handle with care the jug to avoid scalding.
23. The kettle is only to be used with the stand provided.
24. Always set any control to “off” before unplugging from the socket.
25. Make sure the ambient temperature is above 0°C, otherwise the appliance does not function properly.
26. Always descale the appliance regularly to ensure optimum performance and prevent malfunction.
27. Make sure that the appliance completely cooled down before cleaning.
28. This kind of appliance cannot work continuously, it is not a professional type of appliance. It is necessary to make temporary stops.
29. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
30. Regarding the instruction for cleaning surfaces in contact with food thanks to refer to the below paragraph “cleaning” in manual.
31. Make sure the appliance is unplugged before inserting, removing or cleaning.
32. The appliance is not intended to be operated by means of external timer or separate remote control system.
33. Never used the appliance :
 - If the power cord is damaged
 - In case of bad operation
 - It has been damaged in any manner
 - It has been submerged in water

- If you dropped it
34. Unwind the cord of its flat to avoid the superheating of the appliance.
35. The guarantee can only cover the manufacturing defect and household use. All deterioration resulting of failure to respect the safety instruction are not cover by the guarantee.
36. Never try to open the casing yourself.
37. This appliance is intended to be used in household and similar applications such as:
- staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments
38. There is potential injury from misuse.
39. The heating element surface is subject to residual heat after use.

(*) Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.

This instruction manual is available too on our website www.livoo.fr

SPECIAL MEASURES

Warning:

- DO NOT remove the lid while the water is boiling.
- Position the lid so that steam is directed away from the handle
- If the kettle is overfilled, boiling water may be ejected.
- Always ensure that the lid is tightly closed.
- Use only cold water when filling the appliance.
- The water level must be between the MAX. and MIN. marks.
- Ensure that the appliance is switched off before removing it from its stand.
- Avoid any spillage on the connector.
- Heating element surface is subject to residual heat after use.

SPECIFICATIONS

Voltage: 220-240V~ 50-60Hz

Power: 1850-2200W

Before first use

Clean the inside with soap and water, rinse and dry thoroughly. Clean the outside of the appliance with a damp cloth and wipe dry.

1. Fill half of the tank of fresh water. (without addendum of any product).
2. Put the switch on " ON "position The light goes on, showing that water begins heating up.
3. When boiling, the apparatus goes out automatically.
4. Remove the kettle of its base and empty water in a sink and be careful not to splash (risk of burning).
5. The appliance is ready to be used.

USE

1. Unroll the power cord completely.
2. Connect the appliance in a correct socket-outlet
3. Fill the kettle with fresh water (Do not overfill ! Use the water MAX level indicator.)
4. Place the kettle on the base.

User manual

5. Switch the machine to position “ON”. The control lamp on the kettle shows that the water is heating.
6. When boiling the machine switches off automatically.
7. Take the kettle and pour gently the water in a sink. Take care to avoid any burn.

CLEANING AND MAINTENANCE

1. Make sure the appliance is unplugged from the supply socket and fully cooled down before cleaning.
2. To clean the exterior surfaces, slightly wipe over with a soft damp cloth and dry thoroughly.
3. To clean the inner walls of the kettle, use a soft damp cloth or a soft brush to remove the residues
Note: Never use abrasive product
4. Never immerse the jug kettle or its base in water.
5. Dish washer forbidden.
6. The appliance has to be descaled regularly to ensure optimum performance. The frequency depends on the water hardness and the boiling frequency.
 - If you begin to notice the increase of the noise during boiling, or the kettle switches off before boiled, this indicates that descaling is necessary.
Generally, the descaling should be done in the following periodicity:
With soft water, at least once every 6 months.
With hard water, at least once every 3 months.
 - Read carefully the instructions of descaling agent then operate the descaling process step by step.
 - After the descaling, rinse the inner of the kettle thoroughly with clean water.

Note: In case of doubt concerning the water hardness, ask your local tap water company.

STORAGE

1. Ensure the unit is completely cool and dry.
2. Keep the appliance in a cool, dry place and out of reach from children.

LIVOO
Feel good moments
User manual



**Correct disposal of the unit
(Electrical and Electronic Equipment)**

(Applicable in the European Union and the rest of Europe that have adopted separate collection systems countries)

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal household waste stream.

Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The symbol of the crossed out dustbin is marked on all products to remind the obligations of separate collection.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their product.



Pour en savoir plus :

www.quefairedemesdechets.fr

LIVOO
BP 61071
67452 Mundolsheim - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice