

Operating instructions and assembly instructions

Read this manual carefully and follow the safety instructions. Take enough time and use a flat surface with sufficient space.

First steps

1. Compare with reference to the item list the completeness of the delivery. Remove the packaging material. Loosen the clamps **1**, that secure the grill **1** and the charcoal container **3**. Remove the grill and take out the charcoal container.
2. Insert the grease collection bowl **5** in the outer case **6**.
3. Fill the charcoal container **3** with about 250g of beech wood charcoal, and put the lid **2** on the charcoal container.
4. Apply a thin layer of the ignition gel on the ignition tray **4** on place them appropriately, centered over the vent pipe.
5. Slide the charged fan motor into the engine slot **6** and set the controller to full power so that the flame receives sufficient air supply. Caution Risk of burns from open flame!
6. Light the gel best with a stick lighter. Make sure that the flame is burning properly.
7. When the gel burns cleanly, place the filled charcoal container **3** with the lid **2** carefully on the ignition tray **4** and secure the charcoal container by placing the grill on top **1** and closing to the brackets **1**. Within a few minutes the charcoal is fully ignited and ready for grilling.
8. When placing the individual components, make sure that all are nicely centered fit properly on top of each other.
9. To regulate the grilling temperature set the knob on a lower or higher level. To keep the food warm on the grill you can completely turn of the fan motor.
10. Do not cook before the fuel has formed a coating of ash.

CAUTION!



The charcoal container can have some small oil residues, which can produce a light smoke on the first use.

Safety instructions

Rechargeable batteries

The rechargeable batteries must always be fully charged prior to first use.

Charge the battery with the appropriate charger. In the case of the fan motors that have a USB charging slot, the battery must be charged in the device itself with the appropriate USB cable. The charging process should never be performed in the fast-charging mode. In case of a significant heat development of the battery the charging process is to be stopped immediately.

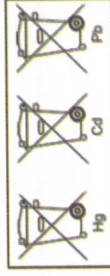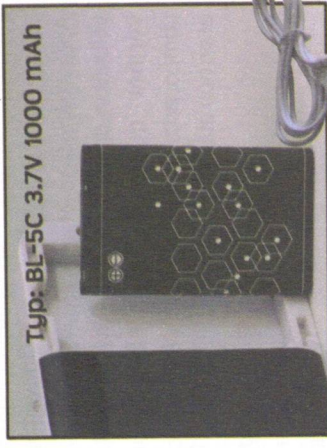

Do not overcharge the batteries. For security reasons, we always recommend that you monitor the charging process! Rechargeable batteries are consumer items and are not subject to warranty.

Dispose of used batteries as required by law. Disposal in the household garbage is prohibited. You can leave them for free at a municipal collection center.

Cleaning

The grill must be completely cool before cleaning. Do not use water to cool the hot grill, as this may result in burns and scalds. Clean the grill, the inner bowl and other dirty pieces after each use. Grill and inner bowl can be cleaned in the dishwasher. When cleaning, never use acid, mineral spirits or other combustible materials.

Warranty

Your Style'n Cook grill has a two-year warranty against manufacturing defects. The sales receipt is your proof of warranty. Possible wear of, corrosion, deformation and discoloration of the parts (especially the stainless steel parts) that are directly exposed to the fire, are normal and are not considered a reason for complaint. No warranty to used charcoal container. The motor fan and battery are not covered with warranty.