

## FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.  
CAN ICES-3 (B)/NMB-3(B).

## SAFE BATTERY USAGE

- Use alkaline batteries for best performance and longer life.
- Use only the battery type recommended for the unit.
- Batteries should be replaced only by an adult.
- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not short-circuit batteries.
- When not used for an extended time, remove batteries to prevent possible leakage and damage to the unit.
- Do not mix rechargeable and non-rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before charging.
- Rechargeable batteries are to be recharged only under adult supervision.
- Do not recharge non-rechargeable batteries.
- Exhausted batteries are to be removed from the toy.
- Do not dispose of batteries in fire as they may leak or explode.

## ⚠️ WARNING:

This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

### IMPORTANT NOTES ABOUT BUTTON BATTERIES

#### - WARNING - KEEP BATTERIES OUT OF REACH OF CHILDREN

- Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the esophagus.
- If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poisons Information Centre on 13 1126 (Australia)/ your local emergency services for fast, expert advice.
- Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not secure.
- Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.
- Adults shall tell potential users about the risk of button batteries and keep their children away from button cell. Adult supervision is required.



'Let's care for the environment!'

The wheellie bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

Please keep this manual as it contains important information.



0620-0-E/INT  
Printed in China

MGA Entertainment, Inc.  
9220 Winnetka Ave. Chatsworth, CA 91311 U.S.A.  
(800) 222-4685

MGA Entertainment UK Ltd.  
50 Presley Way, Crownhill, Milton Keynes,  
MK8 0ES, Bucks, UK  
+ 0800 521 558

www.LOLsurprise.com  
©2020 MGA Entertainment, Inc.  
L.O.L. SURPRISE!™ and L.O.L. SURPRISE! O.M.G. OUTRAGEOUS  
MILLENNIAL GIRLS REMIX™ are trademarks of MGA in the U.S. and  
other countries. All logos, names, characters, likenesses, images,  
slogans, and packaging appearance are the property of MGA.

The preferred method of contact for  
Customer Service is through our e-mail  
contact form at [www.mgae.com](http://www.mgae.com)

MGA Entertainment (Netherlands) B.V.  
Baronie 68-70, 2404XG Alphen a/d Rijn, The Netherlands  
Tel: +31 (0) 172 758038  
E-mail: [klantenservice@mgae.com](mailto:klantenservice@mgae.com)

Imported by MGA Entertainment Australia Pty Ltd  
Suite 2.02, 32 Delhi Road  
Macquarie Park NSW 2113  
1300 059 676



# SUPER SURPRISE™

**⚠️ WARNING:**  
CHOKING HAZARD—Small parts.  
Not for children under 3 years.

 
AGES 3+

SKU:567172

ADULT BATTERY INSTALLATION REQUIRED

## UNBOX

Follow the included guide to open  
and reveal all of your surprises.

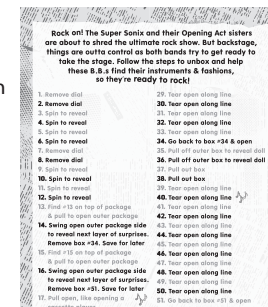





## TOTS' FEATURES



## DOLLS' STANDS





NOTES:

    - One stand will have a bigger C-Clip (C) to fit around the doll's corset.
- Carefully place the doll with corset into the C-Clip to avoid damaging the corset.
- The bigger C-Clip is packed out with Metal Chick.

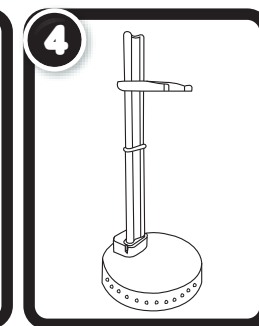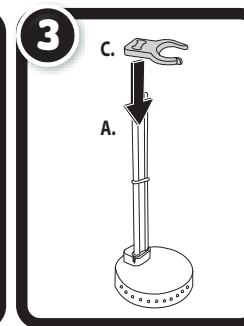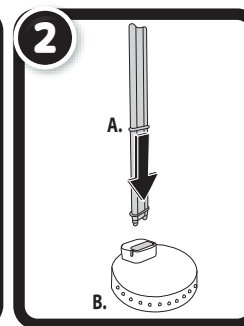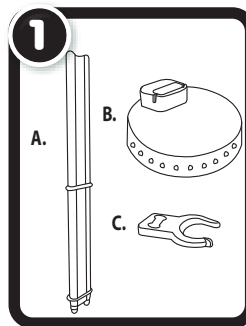

# PREPARING THE BAND

    1. For instruments with straps, place the strap over the doll.
2. After dressing the drummer, place the harness over the doll's shoulders and waist. (Fig. 1)
3. Insert the drum set into the bottom portion of the harness. (Fig. 2)
4. Remove the doll's rings from the top of her hand and insert the drumsticks' pegs into the palm of her hands. (Fig. 3)
5. When removing the drum set, press in the tab on the bottom of the drums and pull it off from the harness.

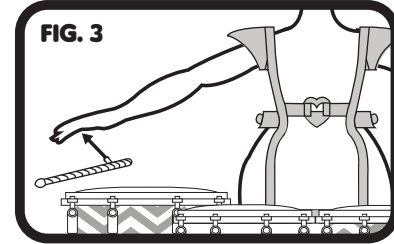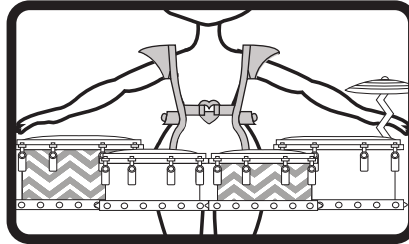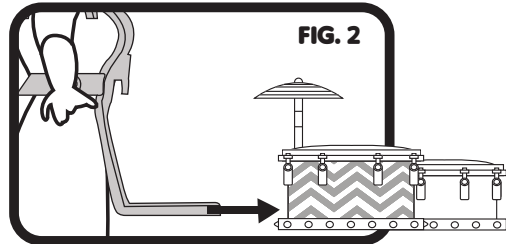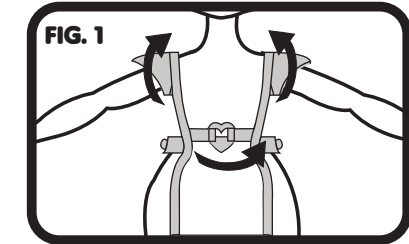

# PLAYING THE INSTRUMENTS

## CHOREOGRAPHED MUSIC

The buttons on the instruments are numbered between 1-6. Press the same button on each instrument to listen to the band's jam session.  
 Note: When pressing 1, begin with the drummer. She will give a countdown.  
 After the drummer says "four," press number 1 on the other instruments.

 
 
 
Before beginning, turn on the instruments by moving the switches on the back or bottom from OFF (O) to the ON position (I).

## MIX IT UP!

Create your own sound by pressing the buttons in a random order.

# WARDROBE TIPS


- When adding the corset, bodysuit or neck piece, always handle with care and avoid bending it too many times.
  - When adding the corset or bodysuit, place the halves in front and back of the doll. Then, snap the pieces together. (Fig. 4)
  - To add the neck piece, place the necklace portion around the doll's neck and then push down the shoulder pads. (Fig. 5)
- When removing, lift up the shoulder pads and then remove the necklace portion.
- When removing the hands to dress doll, pinch the wrists' joints and gently pull. **DO NOT PULL FROM THE FINGERS.** (Fig. 6)
  - Legwarmers can also be placed on the arms.

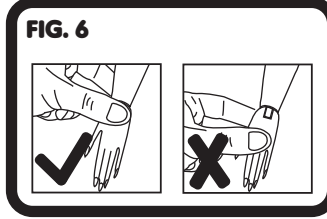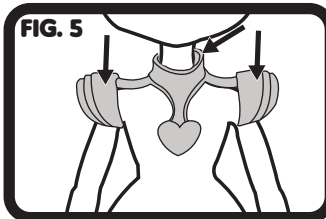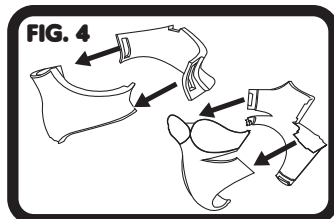

# BATTERY REPLACEMENT

An adult must install fresh alkaline batteries in the instruments should the batteries need replacing. Here's how:

 1. Using a Phillips screwdriver (not included) remove the screws and battery compartment covers on the back or bottom of the instruments.
2. Install three (3) 1.5V AG13 (LR44) alkaline batteries (not included) into each instrument, making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
3. Replace the compartment covers and tighten the screws.

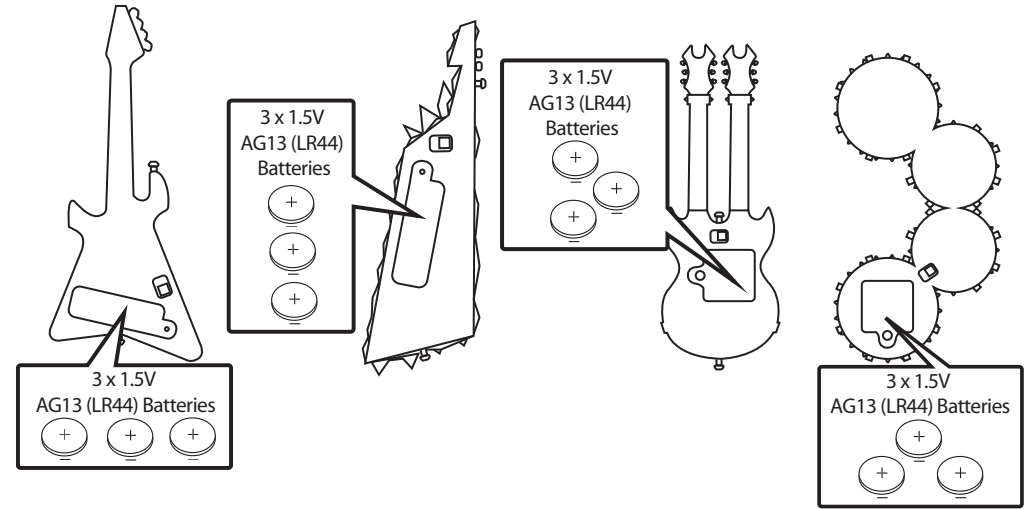

# IMPORTANT INFORMATION

- Illustrations are for reference only. Styles may vary from actual contents.
- Please keep this manual as it contains important information.
- Before beginning, cover the play area to protect from possible water damage.
- All tots will spit.
- For best results, fill the bottle and feed the doll two times.
- Do not place the doll in extremely hot water (over 109.4°F/43°C).
- Do not feed the doll extremely hot water.
- An adult must be present when children are playing with water.
- Do not store the dolls in direct sunlight for extended periods of time.
- Squeeze out all water from the bottle and the doll after each use.
- Thoroughly drain the doll on a dry towel in a well-ventilated area after use and before storing.
- Air dry the doll only. Do not place in the dryer or subject to excessive heat.
- Turn off the instruments after use to conserve battery power.
- Keep moisture away from the instruments' battery compartments.