

CITATION OASIS DAB



OWNER'S MANUAL

/ IMPORTANT SAFETY INSTRUCTIONS

Verify Line Voltage Before Use

The CITATION OASIS DAB has been designed for use with 100-240 volt, 50/60 Hz AC current. Connection to a line voltage other than that for which your product is intended can create a safety and fire hazard and may damage the unit. If you have any questions about the voltage requirements for your specific model or about the line voltage in your area, contact your selling dealer before plugging the unit in to a wall outlet.

Do Not Use Extension Cords

To avoid safety hazards, use only the power cord supplied with your unit. We do not recommend that extension cords be used with this product. As with all electrical devices, do not run power cords under rugs or carpets, or place heavy objects on them. Damaged power cords should be replaced immediately by an authorized service center with a cord that meets factory specifications.

Handle the AC Power Cord Gently

When disconnecting the power cord from an AC outlet, always pull the plug; never pull the cord.

If you do not intend to use your speaker for any considerable length of time, disconnect the plug from the AC outlet.

Do Not Open the Cabinet

There are no user-serviceable components inside this product. Opening the cabinet may present a shock hazard, and any modification to the product will void your warranty. If water accidentally falls inside the unit, disconnect it from the AC power source immediately, and consult an authorized service center.



TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS.....	2
INTRODUCTION.....	4
APP.....	5
PRODUCT TOUR.....	6
SETUP.....	11
PLAY.....	13
SPECIFICATIONS.....	21
TRADEMARKS.....	22

/ INTRODUCTION

This manual includes information of the CITATION OASIS DAB. We encourage you to take a few minutes to read this manual, which describes the products and includes step-by-step instructions to help you set up and get started. Read and understand all the safety instructions before using your product.

Design and specifications are subject to change without notice.

If you have any questions about these products, their installation or their operation, please contact your Harman Kardon retailer or customer service, or visit us at www.harmankardon.com

/ APP

The Google Assistant setup



 
Google Home

Download the Google Home app and set up your Citation OASIS DAB.

 


All product features will be set up.

/ PRODUCT TOUR

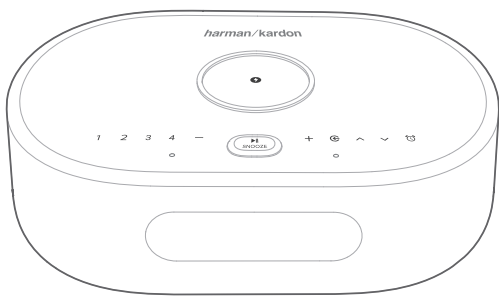

1

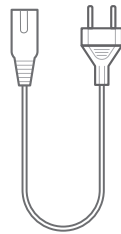

 
2



3

1. Citation OASIS DAB x1
2. Regional power cord (varies depending on country) x1
3. DAB antenna x1

Front

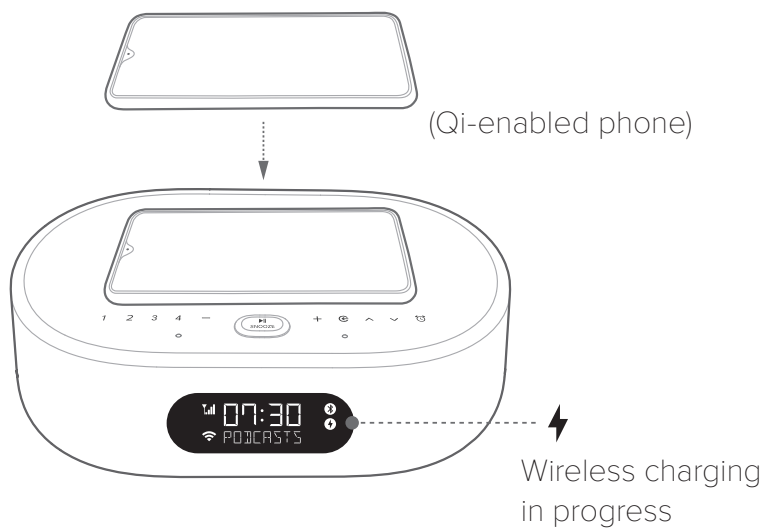 







	Source selector
	Select a DAB station
	Check alarm time
1, 2, 3, 4	DAB presets
- / +	Volume down/up
 SNOOZE	Press briefly: Snooze alarm for 10 minutes; pause or resume playback Press and hold (> 5s): Start DAB station scanning
	Wireless charging pad

NOTES:

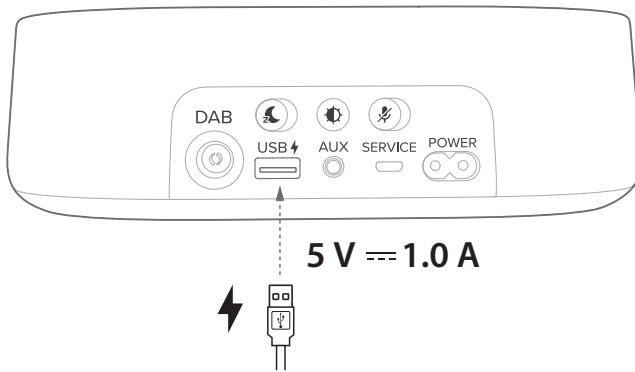 
- The wireless charging may be interrupted by obstacles between the Qi-enabled device and the wireless charging pad, such as a metallic casing that covers the device.
- Phone cases may impact charging speed and performance. If your phone is not charging properly, remove the case during charging.

Back

 






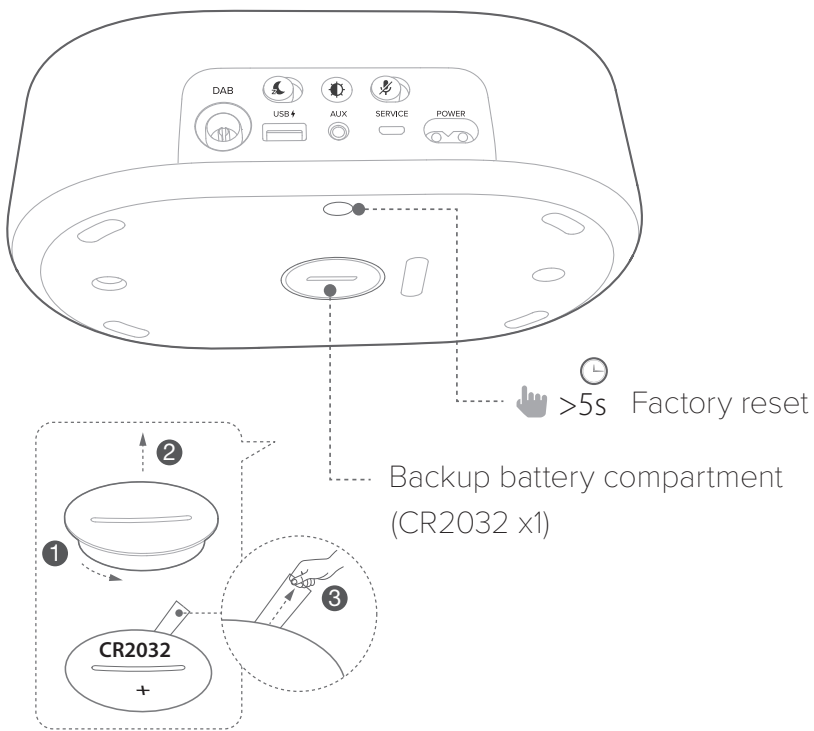

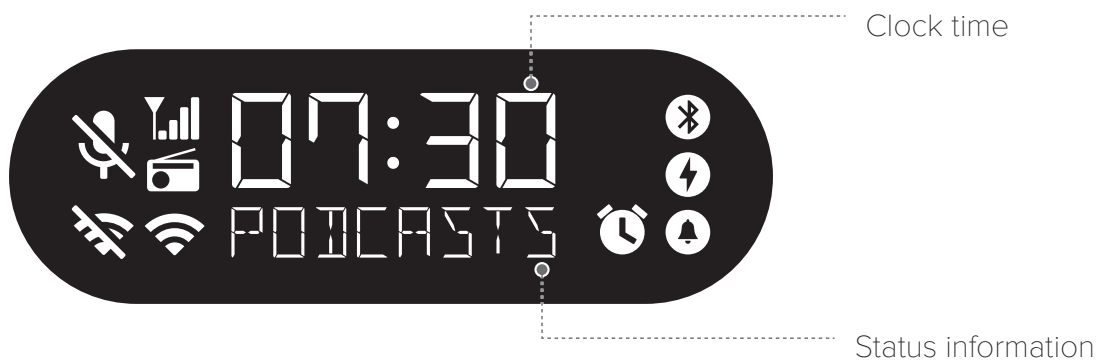


POWER	Power cable connector
SERVICE	Service only
AUX	3.5 mm audio input connector for external devices
DAB	DAB antenna connector
	<p>Night Wi-Fi</p> <p> : Wi-Fi on (00:00 - 24:00)</p> <p> : Wi-Fi is switched off automatically from 00:00 to 06:00.</p> <p>To change the time duration, go to the Night mode settings in Google Home app.</p>
	Display brightness selector
	Microphone Mute / Unmute
USB ⚡	Type A USB connector for charging

Bottom

 


Display information

 


	Bluetooth status indicator
	Wireless charging in progress
	Alarm set
	Alarm time displayed
	Wi-Fi signal strength
	Night Wi-Fi activated, Wi-Fi disconnected
	DAB signal strength
	DAB source selected
	Microphone mute

/ SETUP

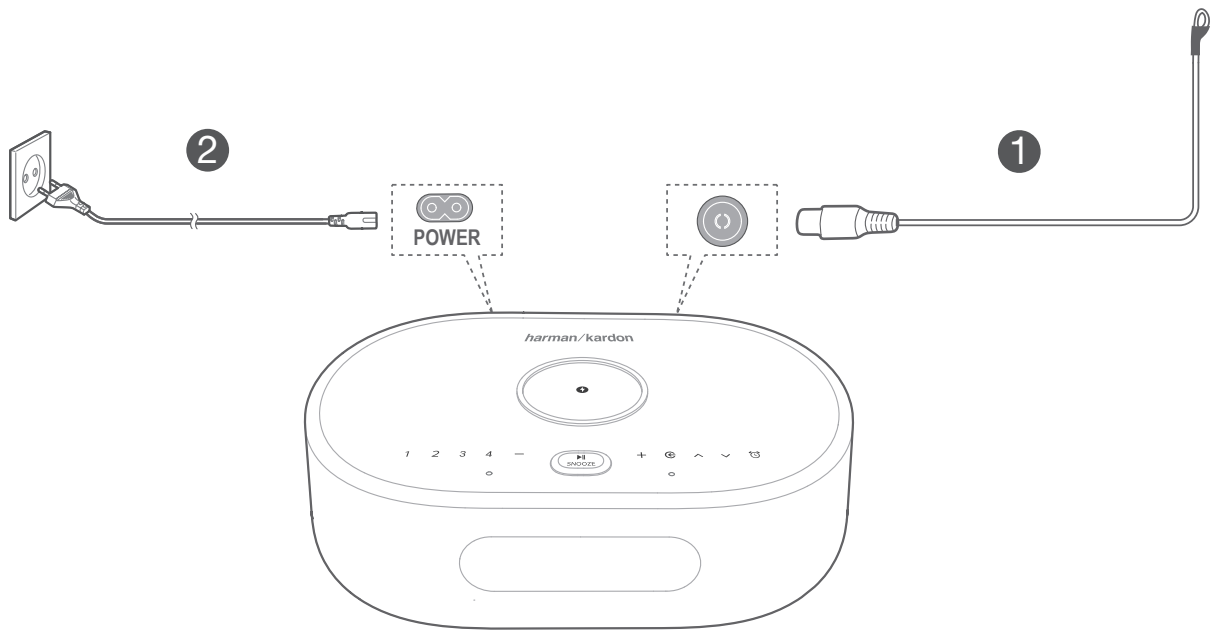

Wi-Fi and DAB setup

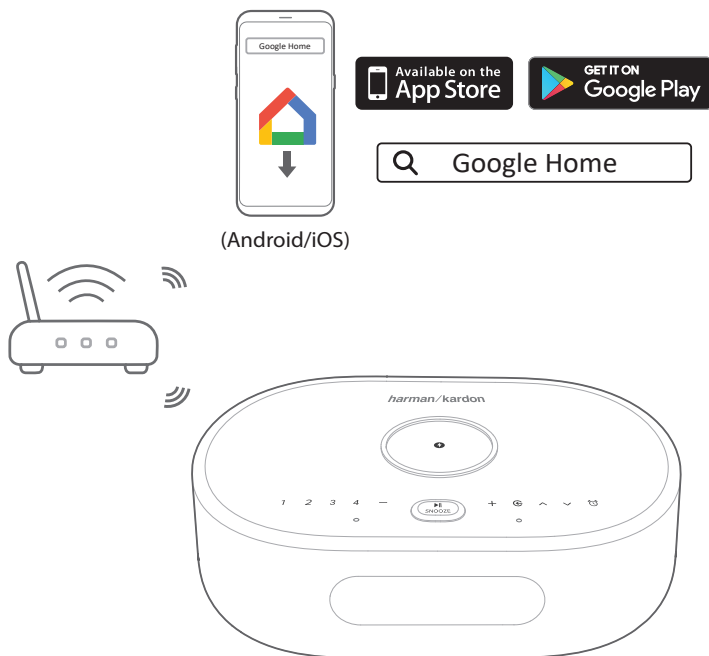

 
On your smartphone or tablet, download the Google Home app and follow the app instructions to have the CITATION OASIS DAB join your home Wi-Fi network. Sign in with your Google account. If you do not have one, create a new one. After Wi-Fi setup, the CITATION OASIS DAB starts to sync clock time and scan DAB stations automatically.




NOTE:

- On your Android device, enable Bluetooth and the location service; on your iOS device, enable Bluetooth.
- The Night Wi-Fi function is disabled before Wi-Fi setup.

 
/ PLAY

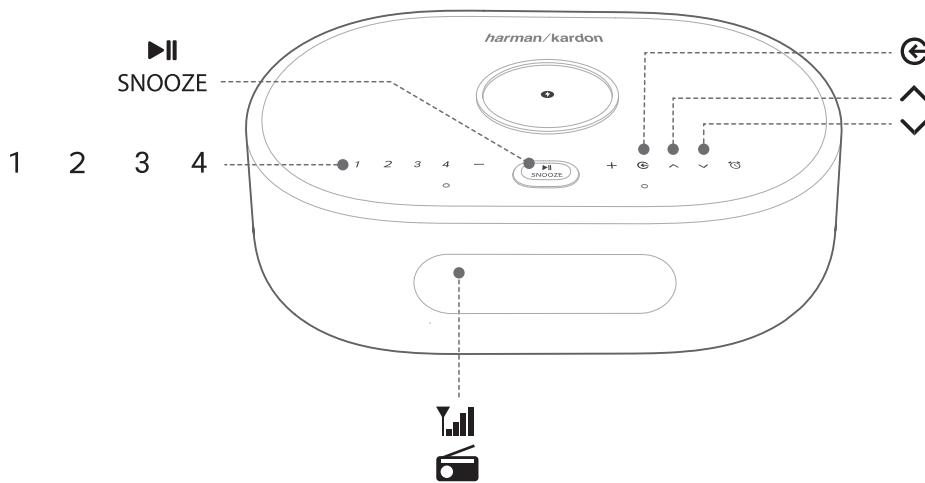4.1 DAB



	Press repeatedly to select the DAB mode.
	Press briefly: Select a DAB station. Press and hold (>3s): Fast search for a station.
1, 2, 3, 4	During playback, press and hold (> 3s) to store current station as a preset. Press 1 / 2 / 3 / 4 to play the preset station.
 SNOOZE	Press briefly: Turn on/off the DAB radio. Press and hold (> 5s): Restart DAB station scanning.

4.2 Google Assistant

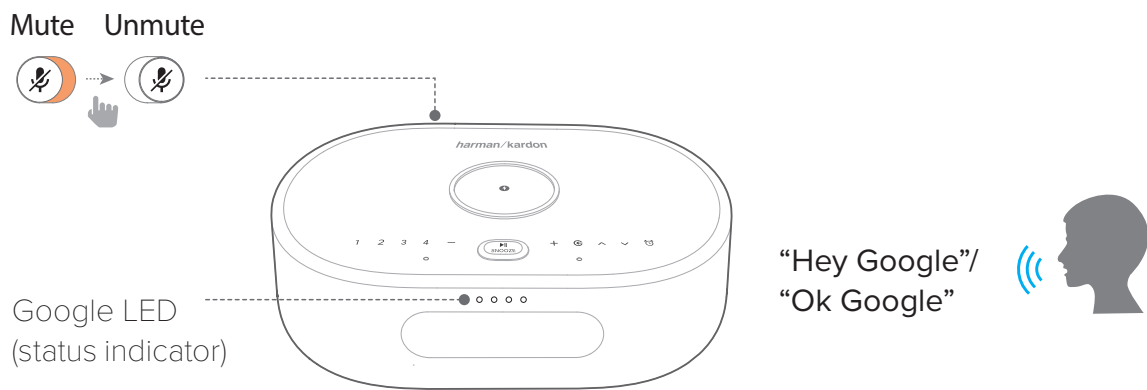

Set and manage your alarms

Desired Action	Voice Command (Say “Ok Google” or “Hey Google”, then...)
Set new alarm	“Set alarm for 6am tomorrow”
Set alarm with name	“Set an alarm for 7 am called Medicine”
Set recurring alarm	“Set alarm for 7am every day of the week”
Ask about existing alarm	“When is my alarm set for?”
Ask about all alarms	“What alarms are set?”
Cancel an existing alarm	“Cancel my alarm”

* Set your favorite music as an alarm

 
Select a song, artist, genre or playlist from your default music service in the Google Home app.


Desired Action	Voice Command (Say "Ok Google" or "Hey Google", then...)
Set media or music alarm	"Set J-pop radio alarm for 6am tomorrow" or "Set birthday music alarm for 7:30 am Monday"
Set recurring media or music alarm	"Set Beethoven music alarm for 7am every day"

NOTE:



- * This feature is available in selected countries. To check the list of supported countries, go to <https://support.google.com/googlenest/answer/7071598?hl=en>.

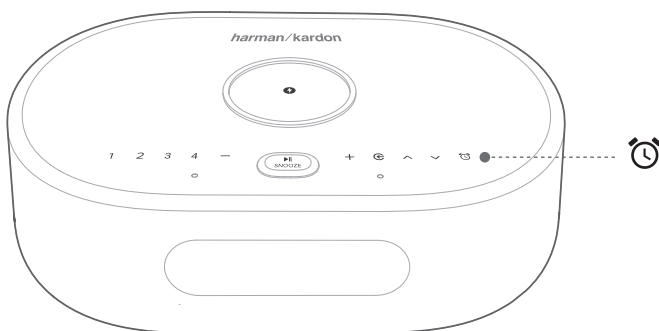Set DAB as an alarm



	<p>Press and hold (> 5s): Use DAB for all alarms; Press and hold (> 5s) again: Restore the default alarm tone.</p>
---	--

Change alarm volume

1. Make sure that your mobile device or tablet is connected to the same Wi-Fi as the Citation OASIS DAB.
2. Launch the Google Home app .
3. Select the **Citation OASIS DAB**.
4. At the top right, tap Settings  > Alarms & Timers.
5. Move the slider to adjust the volume.

NOTE:

- When DAB is set as alarms, the alarm volume is the same as the system playback volume.

Set the sleep timer for music playback

Desired Action	Voice Command (Say “Ok Google” or “Hey Google”, then...)
Set a sleep timer during music playback	“Set a sleep timer for 30 minutes” / “Set a sleep timer at 9:30”
Set a sleep timer before music playback	”Play Google Play for 30 minutes”

NOTE:

 
- The Sleep timer function is now available for Chromecast and Bluetooth music streaming. For DAB, AUX and AirPlay music streaming, this feature may be available in the future via automatic software updates.

4.3 Alarms

 
To snooze the alarm for 10 minutes, press  **SNOOZE (PLAY/PAUSE, SNOOZE)**.

To stop the alarm, press  (or  "STOP").

To check the alarms you have set, press  repeatedly.

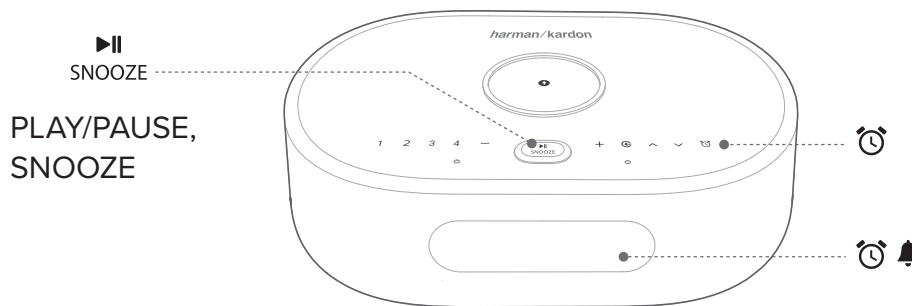

4.4 Chromecast

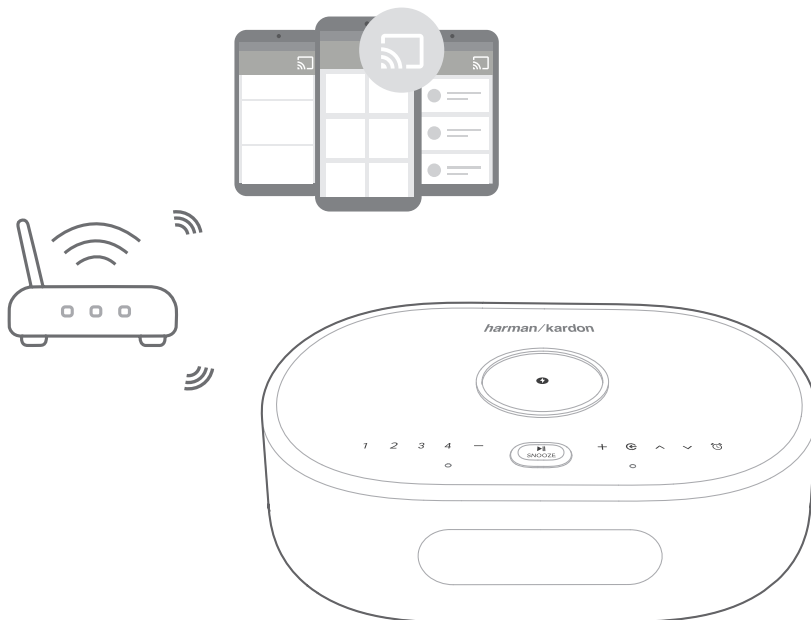

Step 1: Open a Chromecast supported app.

Step 2: Play Music.

Step 3: Tap the cast icon and select “Citation OASIS DAB”.

e.g.

Spotify

Pandora

 
TuneIn


Deezer

Google Play Music

 
* The Citation OASIS DAB can be included into a multi-room system with other products that support Chromecast. For more details please refer to the Google Home app.

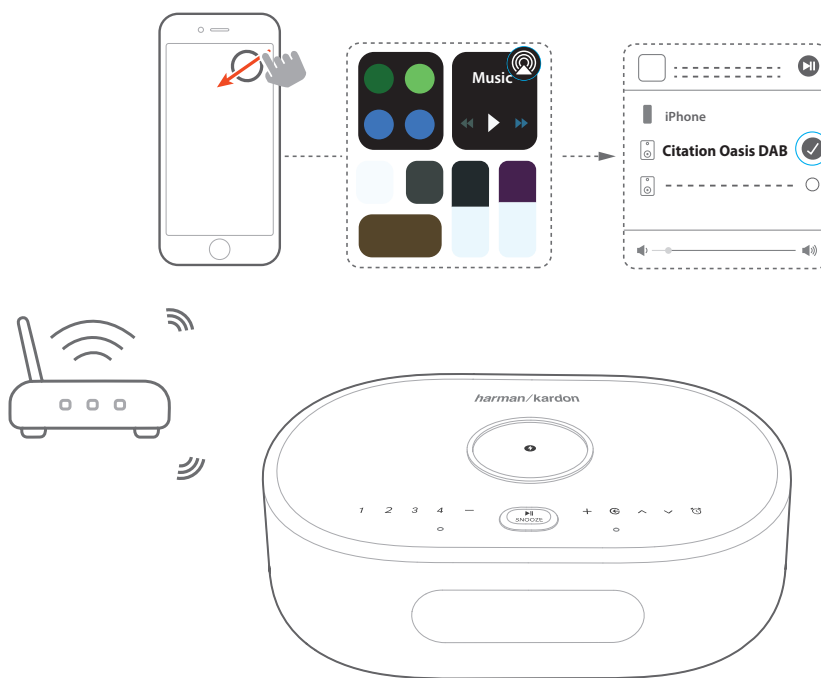

4.5 AirPlay



1. On an iOS device, enter the Control Center.
2. Tap  to select “**Citation OASIS DAB**” as speaker.
3. Start audio streaming from an app.

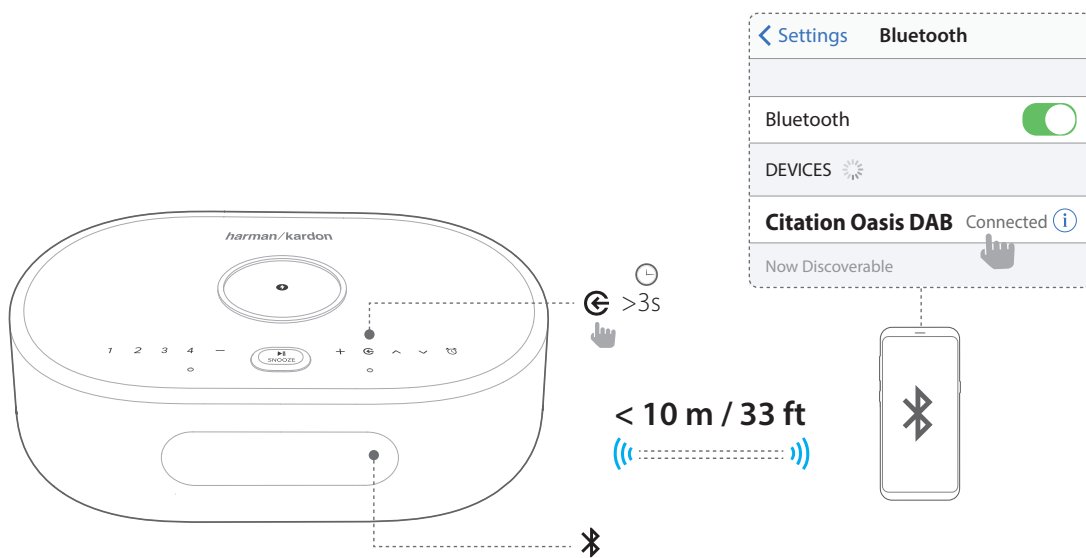4.6 Bluetooth



1. Press  repeatedly to select the Bluetooth source.
2. Press and hold  (> 3s) to enter the Bluetooth pairing mode.
3. On the Bluetooth device, enable Bluetooth and search for "Citation OASIS DAB".

After successful connection, start audio playback on your Bluetooth device.

/ SPECIFICATIONS

- Model Name: Citation OASIS DAB
- Transducer: 2 x 45 mm (full range)
- Output power: 12 W RMS
- Signal-to-noise ratio: > 80 dB
- Power Supply: 100-240 V ~ 50/60 Hz
- Bluetooth version: 4.2
- Bluetooth transmitter frequency range: 2402 – 2480 MHz
- Bluetooth transmitter power: <10 dBm (EIRP)
- Bluetooth transmitter modulation: GFSK, $\pi/4$ DQPSK, 8DPSK
- Wireless network: 802.11 a/b/g/n/ac (2.4GHz/5GHz)
- 2.4G Wi-Fi transmitter frequency range: 2412 – 2472MHz (2.4GHz ISM Band, USA 11 Channels, Europe and others 13 Channels)
- 2.4G Wi-Fi transmitter power: <20dBm (EIRP)
- 2.4G Wi-Fi modulation: DBPSK, DQPSK, CCK, QPSK, BPSK, 16QAM, 64QAM
- 5G Wi-Fi transmitter power: <23dBm (EIRP)
- 5G Wi-Fi modulation: QPSK, BPSK, 16QAM, 64QAM, 256QAM
- 5G Wi-Fi transmitter frequency range: 5.15 - 5.35GHz, 5.470 - 5.725GHz, 5.725 - 5.825GHz
- Technology: DAB broadcast receiver
Frequency band: 174 MHz - 240 MHz
- Technology: WPC
Frequency band: 113.622 kHz - 180.288 kHz
H-field: 16.68 dB μ A/m@3m

/ TRADEMARKS



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by HARMAN International Industries, Incorporated is under license. Other trademarks and trade names are those of their respective owners.



The Wi-Fi CERTIFIED Logo is certification marks of the Wi-Fi Alliance.



Apple®, AirPlay®, iPad®, iPad Air®, iPad Pro®, and iPhone® are trademarks of Apple Inc., registered in the U.S. and other countries. Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards. To control this AirPlay 2-enabled speaker, iOS 11.4 or later is required.



Google, Google Play, Chromecast and other related marks are trademarks of Google LLC. Chromecast built-in may require subscription(s). The Google Assistant requires an internet connection and is not available in certain countries and languages. Availability and react of certain features and services are device, service, and network-dependent and may not be available in all areas. Controlling certain devices in your home requires compatible smart devices. Subscriptions for services and applications may be required and additional terms, conditions and/or charges may apply.

harman / kardon[®]
by HARMAN