

# INSTRUCTION MANUAL



## Artemis 70 SL Artemis 111 SL

<p>1.</p>	<p>2.</p>	
<p>3.</p> <p>4.</p> <p>INPUT: AC220-240V</p>	<p>4.</p> <p>5.</p> <p>6.</p>	<p>5.</p> <p>warning: when replacing a halogen lamp, wait for it to cool, for a minimum of 5 minutes</p>
<p>6.</p>	<p>Overall Sizes:</p> <p>AR70</p> <p>AR111</p>	