




Step 5

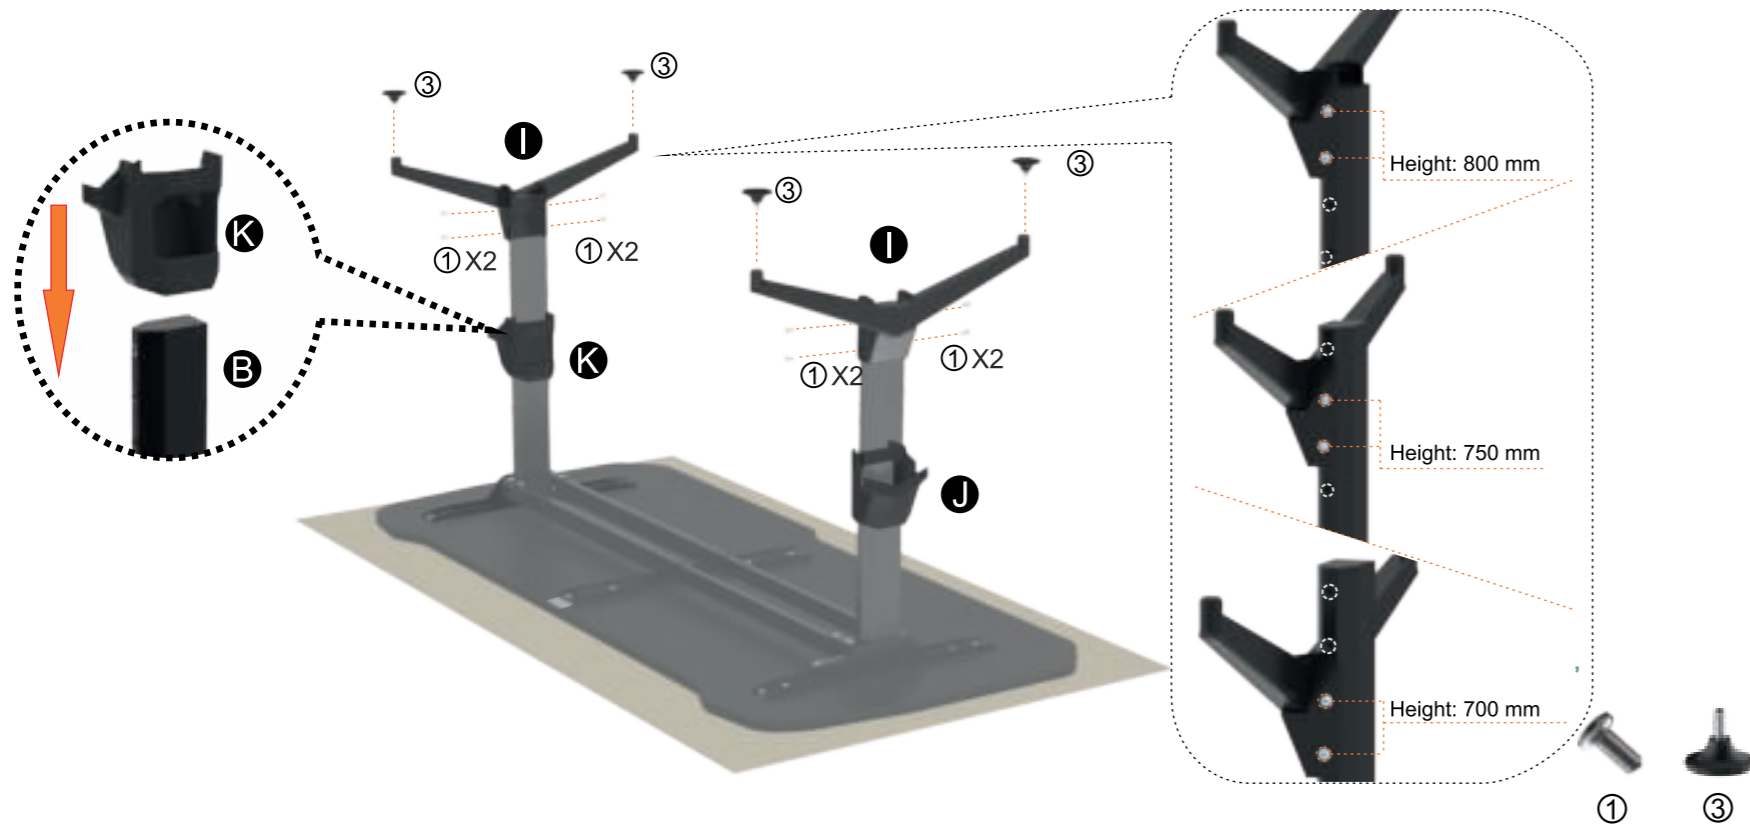

Step 6

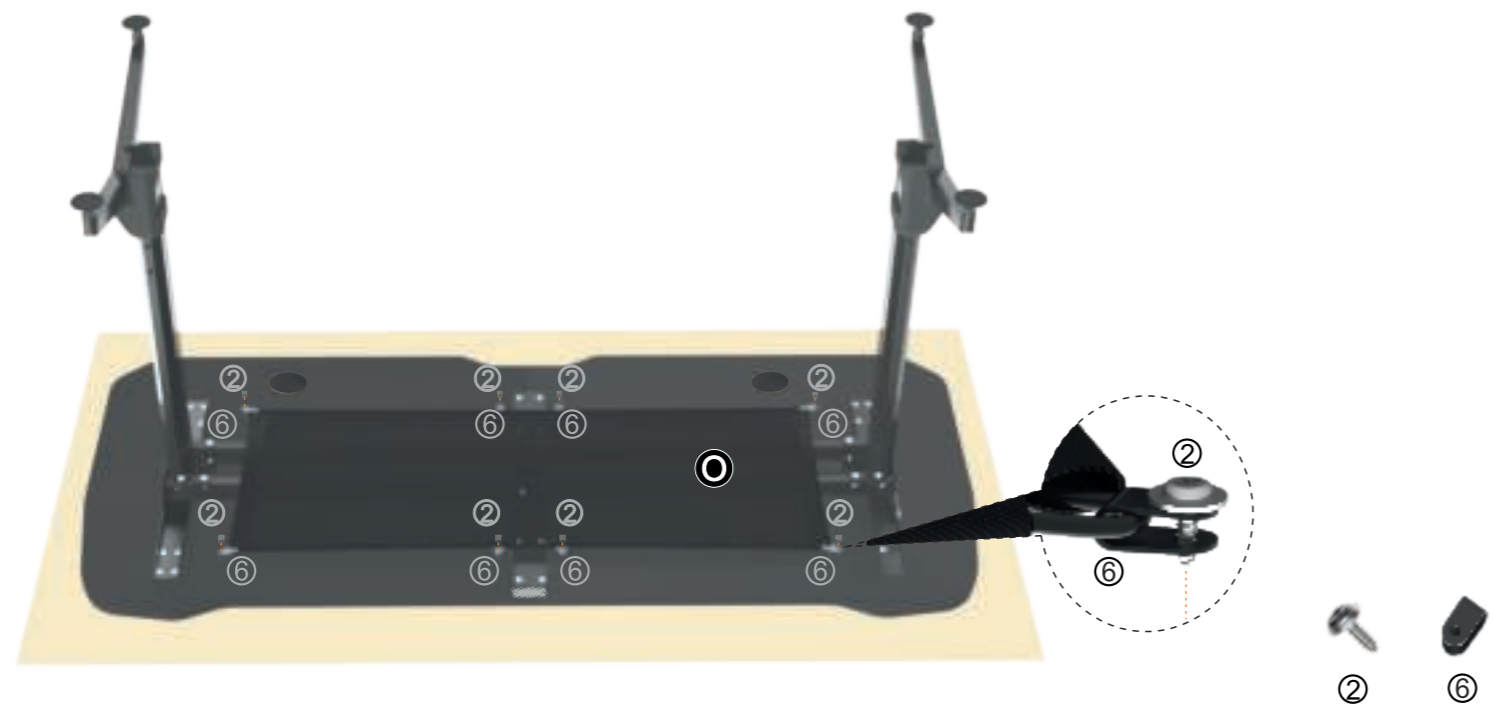

Step 7

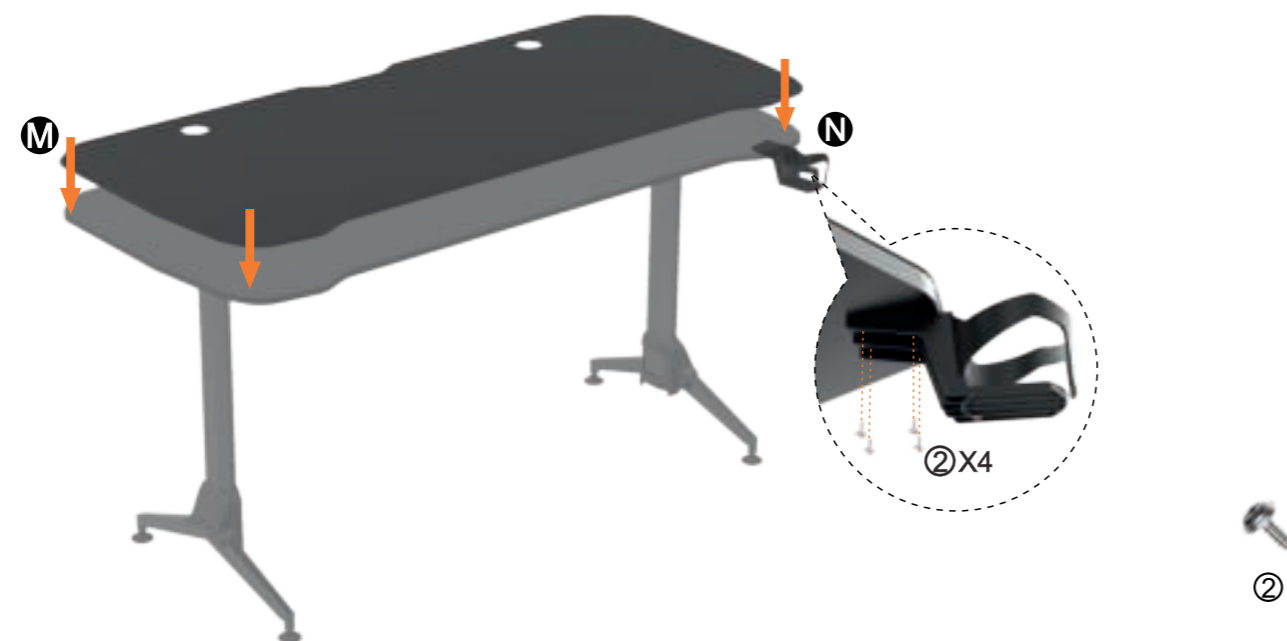

DELTA CO GAMING

DT310

DAN | Brukermanual

LAV | Lietošanas instrukcija

ENG | Instruction manual

LIT | Naudojimo instrukcija

EST | Kasutusjuhend

NLD | Gebruiksaanwijzing

FIN | Käyttöopas

NOR | Brukermanual

FRA | Manuel d'utilisation

POL | Instrukcja obsługi

GER | Betriebsanleitung

SPA | Manual del usuario


HUN | Felhasználói kézikönyv

SWE | Användarmanual


Parts list

① X30	② X34	③ X4	④ X1	⑤ X1	⑥ X8
----------	----------	---------	---------	---------	---------


  




**A** X1




**B** X1




**C** X1




**D** X1

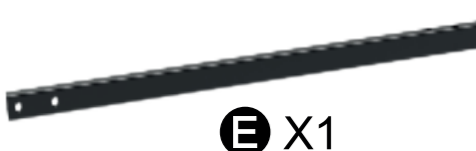


**E** X1




**F** X1



**G** X1




**H** X1




**I** X2


Height: 750 mm




**J** X1




**K** X1




**L** X1



**M** X1



**N** X1



**O** X1

Step 1



Step 2

Step 3

Step 4