

## 👁️ CLEANING AND MAINTENANCE

- Unplug the appliance and allow to cool.
- To maintain peak product performance and to prolong motor life, it is important to regularly remove any dust and dirt from the air filter grille and clean with a soft brush.
- Wipe all the surfaces with a damp cloth.

✳️ **To remove the rear grille for cleaning** – hold the dryer handle in one hand, then with the other place your thumb and index finger on the indents either side of the rear grille and twist clockwise. Pull the grille away from the dryer.

✳️ **To replace the rear grille** – hold in place with the thumb and index finger again and click anti clockwise.

## ♻️ ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



## ➡️ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Defects from repair by an unauthorized dealer are not covered.

Consumables are excluded.

Your statutory rights are not affected.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at

[www.remington.co.uk/parts-accessories](http://www.remington.co.uk/parts-accessories)

## ➡️ SERVICE CENTRE

United Kingdom

☎ Tel 0800 212 438 (free call mainland UK)

☎ +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)

Ireland

☎ Tel 142 951 40

Remington Consumer Products,  
Unit B12, Ballymount Corporate Park,  
Ballymount, Dublin 12.  
[www.remington.co.uk](http://www.remington.co.uk)

## 📄 REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit [www.productregister.co.uk/remington](http://www.productregister.co.uk/remington). You must register within 28 days of purchase.

## Model No. AC9096

13/UK/ AC9096 T22-0000961 Version 01 /13

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2013 SBI

Background copyright Alexpi, 2013

Used under license from Shutterstock.com

REMINGTON

PROFESSIONAL

SILK DRYER



AC9096

Register online for  
£10,000 prize draw  
EXTRA year guarantee  
FREE rewards gallery



Visit [www.productregister.co.uk/remington](http://www.productregister.co.uk/remington).  
You must register within 28 days  
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use. Claim your extra 1 year warranty by registering your product online. Simply go to: [www.productregister.co.uk/remington](http://www.productregister.co.uk/remington)

### STOP IMPORTANT SAFEGUARDS

- Warning – for additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask an electrician for advice.**
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
- Warning: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- Do not wrap the cord around the unit. Check the cord regularly for any sign damage.
- If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- Do not use the appliance if it is damaged or malfunctions.
- Do not allow any part of the appliance to touch the face, neck or scalp.
- Keep direct airflow away from eyes or other sensitive areas.
- During use, always ensure the inlet and outlet grilles are not blocked in any way as this will cause the unit to automatically stop. If this should occur, switch off and allow the unit to cool.
- Ensure the inlet grille is free from obstructions such as fluff, loose hair etc.
- Do not leave the appliance unattended while plugged in.
- Do not set the appliance down while still on.
- Do not place the appliance down on any soft furnishings.
- Do not use attachments other than those we supply.
- Do not use the diffuser on the highest heat setting.
- This appliance is not intended for commercial or salon use.
- Let the appliance cool down before cleaning and storing away.

# SILK DRYER



### KEY FEATURES

- |                       |                                    |
|-----------------------|------------------------------------|
| 1 Silk Ceramic grille | 6 Concentrator                     |
| 2 3 heat settings     | 7 Diffuser                         |
| 3 2 speed settings    | 8 Removable easy clean rear grille |
| 4 Turbo function      | 9 Hang up loop                     |
| 5 Cold Shot           | 10 Cord                            |

### PRODUCT FEATURES

- 1850 – 2400 watts.
- Ion generator for smooth frizz-free styling.
- Salon quality AC motor.
- 7mm slim air concentrator for precision styling.
- 11mm wider concentrator for faster drying.
- Turbo function – increases airflow by 10% for fast drying.
- True cold shot – to set your style and add extra shine.
- 5 year guarantee.

### INSTRUCTIONS FOR USE

- Wash and condition your hair as normal.
- Squeeze out excess moisture with a towel and comb through.
- \* Hairsprays contain flammable material – do not use while using this product.
- Plug the product into the mains power supply.
- Select the desired temperature and speed setting using the switches on the handle.
- To switch product on press speed setting down to medium speed setting . To increase speed press switch down again to high speed setting .
- To select heat setting press the temperature setting switch to the low , medium or high setting .
- For fast drying use the high heat / high speed function with the 11mm concentrator.
- For the fastest air flow use the turbo function. To operate push the turbo cool shot switch to the left. Return to centre to switch off.
- To create smooth styles use the 7mm concentrator and a round hair brush (not included) whilst drying.
- To enhance natural curls and waves, attach the diffuser to the dryer. Turn your head upside down and gently place your hair into the diffuser bowl slightly rotating the dryer as you style.  
**Caution:** Do not use the diffuser on the highest heat setting.
- To set your style, use the cold shot switch whilst styling. To operate push the turbo cool shot switch to the right. Return to centre to switch off the cool shot.
- To create extra volume at the roots of the hair, keep your head upright and place the diffuser against the top of the head. Gently rotate the hairdryer allowing the diffuser fingers to gently massage the scalp being careful not to burn the scalp. Dry gently on a low heat / low speed setting.
- After use, turn the appliance off by pressing the speed setting switch to '0' and unplug.