

# VICTROLA™



## **USB Turntable**

Model: VPRO-3100

## **Instruction Manual**

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE USE  
AND KEEP IT FOR FUTURE REFERENCE.

## CONTENTS

SAFETY INSTRUCTIONS .....	2
HOW TO INSTALL / REMOVE POWER ADAPTOR PLUG.....	3
TURNTABLE LAYOUT.....	4
ASSEMBLY OF THE DUST COVER.....	5
TURNTABLE OPERATION .....	5
SET UP.....	5
BASIC OPERATION .....	5
AUTO RETURN RESET .....	6
HOW TO REPLACE THE NEEDLE .....	6
IF THE BELT BECOMES LOOSE.....	7
TIPS FOR BETTER TURNTABLE USE .....	7
USB RECORDING OPERATION .....	7
SPECIFICATIONS .....	8

## WEEE & CE STATEMENTS



### WEEE marking

#### Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When this crossed out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC. Please make yourself aware of the local collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.



This appliance complies with the following EEC directives: 2014/35/EU Low voltage directive / 2014/30/EU EMC directive

You can download the complete EU conformity declaration from [www.victrola.com/eudoc](http://www.victrola.com/eudoc)

Imported by:


Exertis Supply Chain Services Ltd.

M50 Business Park, Ballymount Rd. Upper, Dublin 12, D12 T4C2, Ireland

## SAFETY INSTRUCTIONS

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement, near a swimming pool, or near other wet areas.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Keep at least 5 cm around the apparatus for sufficient ventilations. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Please keep the unit in a well ventilated environment.
16. Only use attachments/accessories specified or provided by the manufacturer
17. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall not be placed on apparatus.
18. The main plug is used as disconnect device, the disconnected device shall remain readily operable.
19. This product is not intended for commercial use. Household Use Only.



20.  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

 
21. 

 <p>The lightning flash with arrowhead within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.</p>	<p><b>CAUTION</b></p> <p><b>RISK OF ELECTRIC SHOCK DO NOT OPEN</b></p> <p><b>CAUTION: TO PREVENT RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PROFESSIONAL.</b></p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------



**Warning:** To reduce the risk of fire or electrical shock, do not exposed the apparatus to rain or moisture. No naked flame sources such as candles shall be placed on top of the apparatus.

**Caution:** Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this device. Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous exposure.

## HOW TO INSTALL / REMOVE POWER ADAPTOR PLUG

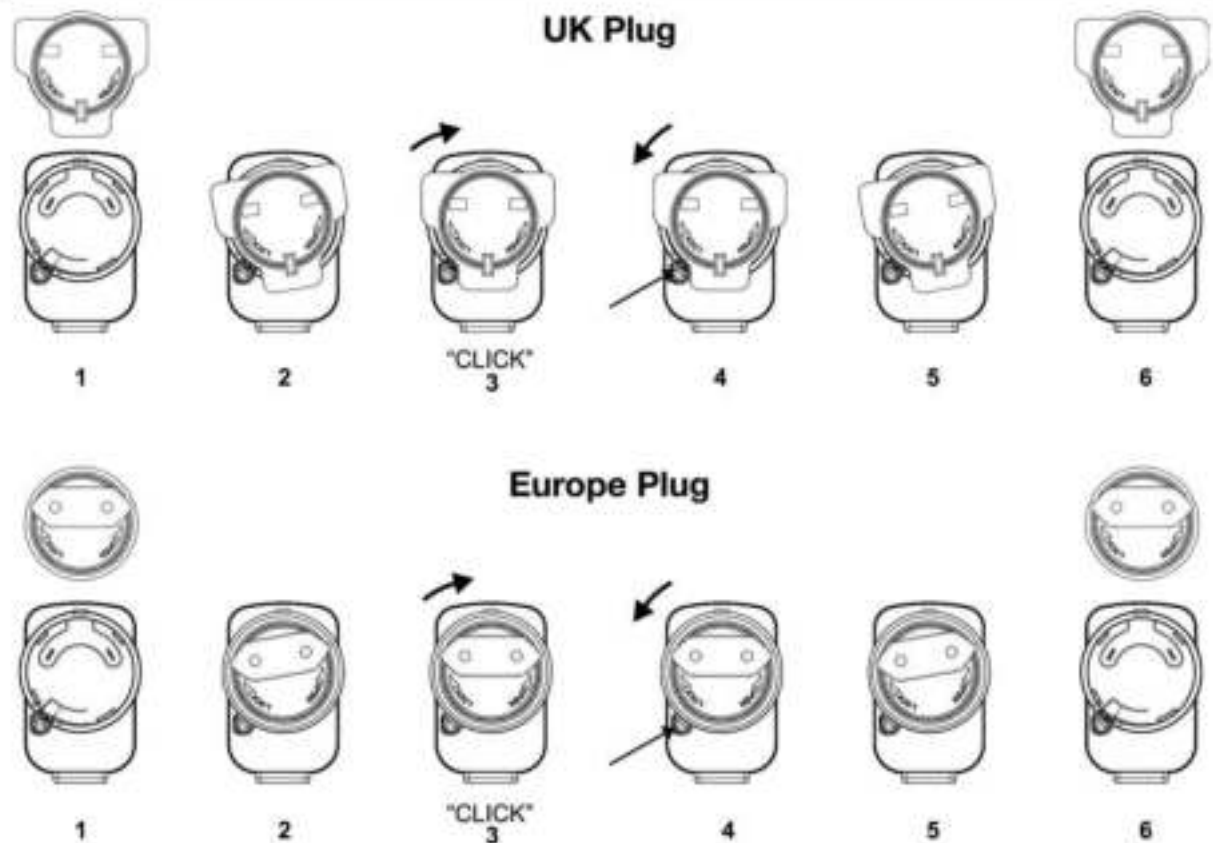


## TURNTABLE LAYOUT

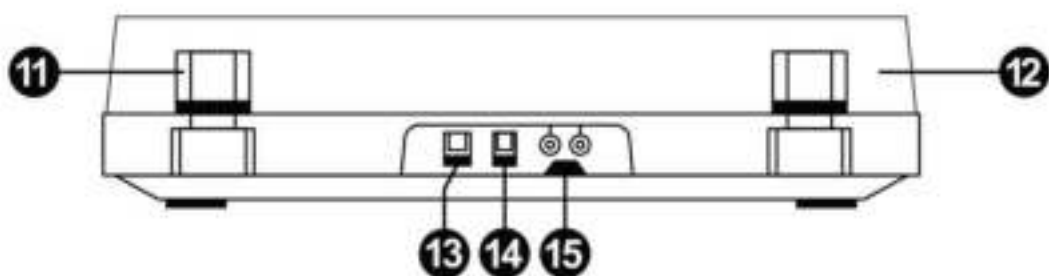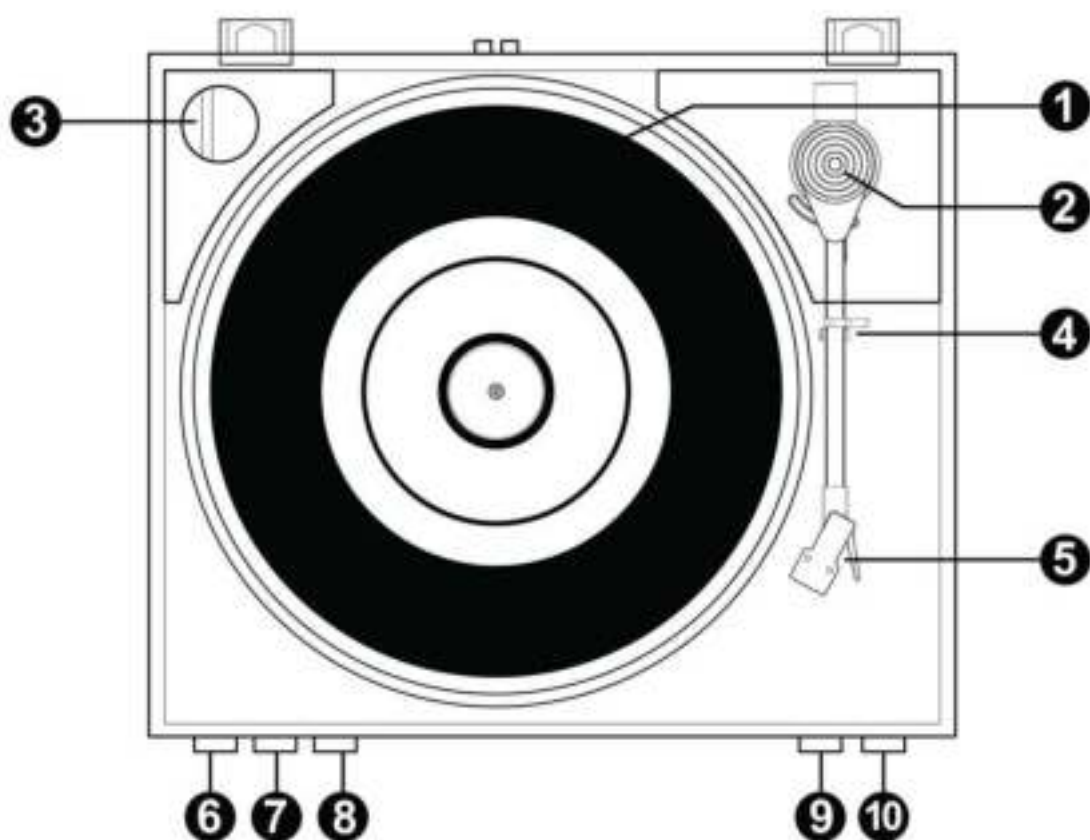  

- |                                                                                                                                                                                                                                                                              |                                                                                                                                                                                                                                                                              |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> <li>1. Turntable Platter</li> <li>2. Tone Arm</li> <li>3. 45 RPM Adaptor</li> <li>4. Tone Arm Lock</li> <li>5. Phono Stylus Cartridge</li> <li>6. Power Button</li> <li>7. Speed Change Button</li> <li>8. Start / Stop Button</li> </ul> | <ul style="list-style-type: none"> <li>9. Tone Arm Return Button (Eject)</li> <li>10. Tone Arm Lift Lever (   )</li> <li>11. Dust Cover Hinges</li> <li>12. Dust Cover</li> <li>13. USB Output Jack</li> <li>14. Power Adaptor Jack</li> <li>15. RCA Output Jack.</li> </ul> |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## ASSEMBLY OF THE DUST COVER

 1. Remove protective plastic film from the DUST COVER.
2. Align the DUST COVER (#12) to the DUST COVER HINGES (#11), on the back of the unit. Then, push down the dust cover gently to clip into the hinges.

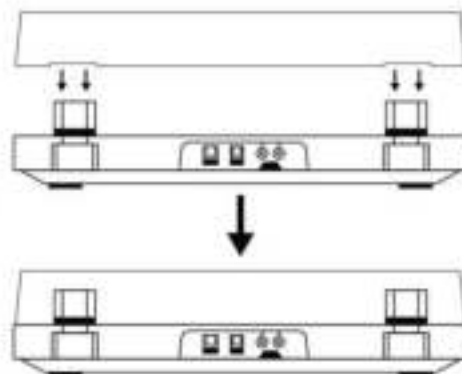

## TURNTABLE OPERATION


### SET UP

An AC/DC adaptor with an output of 12V/1.0A is included with the USB Turntable. This adaptor is required for operating the unit.

1. Connect the external Hi-Fi Amplifier or Speaker System using RCA Cables (Not Included). *NOTE: The RCA Cables are color coded, the red cable is plugged into a red jack on both the unit and external device (white cable into the white jacks).*
2. Firmly and securely insert the DC plug of the adaptor to the DC IN Jack on the back of the unit.
3. Plug the AC/DC adaptor (12V/1A, AC 100-240V, 50-60Hz) to a AC/DC wall outlet.

### BASIC OPERATION

Before use, be sure to remove the white stylus guard off of the needle. Always make sure that the tone arm is unlocked and free to move across the record while operating. Lock the tone arm in place again when it is not in use.

1. Push the POWER Button on the unit to turn the turntable ON.
2. Place a record on the TURNTABLE PLATTER and select the desired speed (33 1/3 / 45) by pushing the SPEED SELECTION SWITCH to the speed according to the type of record.  
*NOTE: When playing a 45 rpm record, use the included 45 rpm adaptor located inside the accessories bag.*
3. Press the START / STOP Button to Start the Turntable. Pushing this button again will Stop (Pause) the Record.
4. Open the TONE ARM CLIP to release the TONE ARM. Push the TONE ARM LIFT LEVER Button (  ) to raise the arm. Gently move the tone arm to the desired position over the record. The turntable will begin to spin only when the tone arm is moved toward the record. To begin playing, push the LIFT LEVER Button again to lower the arm slowly onto the desired position of the record.
5. To return the Tone Arm at any time press and hold (for 1-2 seconds) the RETURN Button. This will automatically return the Tone Arm to the Tone Arm Holder and will Automatically stop the record from playing.

*PLEASE NOTE: The Auto Return will automatically return the Tone Arm to the Holder once it has reached the end of the record.*

6. To select the volume level, use your external device to adjust the volume.

## AUTO RETURN RESET

*It is recommended to reset the Auto Return when you move this product. The mechanism of Auto Return will rotate irregularly when moving and it will cause the malfunction of Auto Return. The following steps will reset the Auto Return.*

1. Place a record on the platter and play it (Follow the Operation Steps above).
2. Manually place the Tone Arm to the blank part at the end of the record and let it finish playing.
3. The mechanism of Auto Return function will adjust itself properly, then the tone arm will automatically return to the arm rest.

## HOW TO REPLACE THE TURNTABLE NEEDLE (*Replacement Needle # ITNP-LD1*)

### Removing the Stylus from the Cartridge

1. Set a screwdriver at the tip of the stylus and push down to the direction "A".  
**WARNING:** When applying force to stylus, too much may damage or break the stylus.
2. Pull the stylus out toward the direction "B".

 
### Installing the Stylus

1. Hold the tip of the stylus and insert the other edge by pressing toward direction "C".
2. Push the stylus up toward direction "D" until it locks at the tip.

### Caution:

- Do not remove or bend the stylus needle.
- Do not touch the needle to avoid injury to your hand.
- Turn off the unit's power before you replace the stylus.
- Keep out of reach of children.

**Please note:** *The stylus should last about 300 hours under normal use. It is recommended that the stylus be replaced as soon as you notice a change in sound quality.*

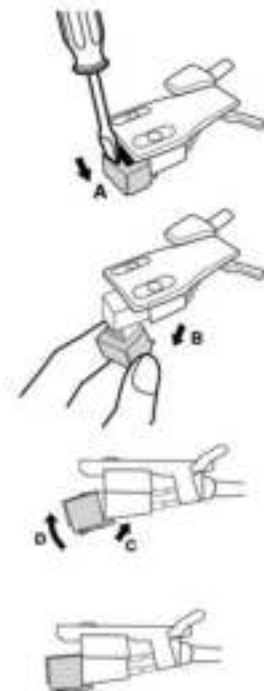


## IF THE BELT BECOMES LOOSE

The belt and turntable platter have been installed properly during production, but the belt may have become loose during transportation. If so, follow the below procedures to re install the belt drive:

1. Remove the rubber mat from the turntable platter and carefully unclip the small E ring from the turntable shaft (using tweezers or pliers), Then release the turntable platter from the shaft.
2. Put the drive belt on the inner rim of the turntable platter and pull it through the hole on the platter as shown in the drawing.
3. Hold the belt with your fingers and place the belt onto the motor pulley as shown in the drawing.
4. Clip the E ring on the shaft and place the rubber mat onto the turntable platter.

 *Caution: Make sure that the drive belt is not twisted or distorted. Avoid oil. Oil splashes will make the belt slippery.*

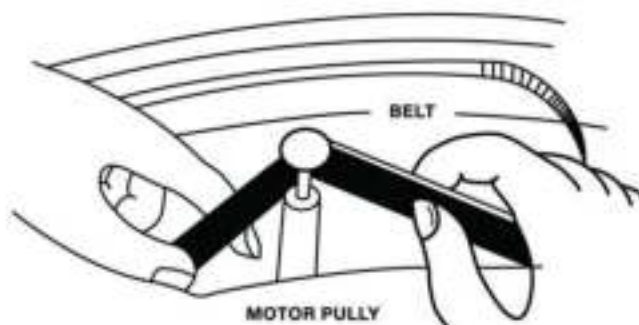

## TIPS FOR BETTER TURNTABLE USE

1. When opening or closing the turntable cover, handle it gently, gripping it either at the center or at each side.
2. Do not touch the needle tip with your fingers; avoid bumping the needle against the turntable platter or record edge.
3. Frequently clean the needle tip, using a soft brush in a "back-to-front" motion.
4. If you must use a needle cleaning fluid, use very sparingly.
5. Gently wipe the dust cover and turntable housing with a soft cloth. Use only a small amount of mild detergent to clean the turntable and dust cover.
6. Never apply harsh chemicals or solvents to any part of the turntable system.

## USB RECORDING OPERATION

To properly record your vinyl to MP3 via computer, use the included USB Output Cable and Instructional CD Software. Connect one end of the USB cable to the turntable and the other end into your computer. Then connect the AC power cord to the turntable. To install and use the software on your computer, select the proper Mac or PC install files, then follow the prompts provided on the Instructional CD.

For the most up to date manuals, software, instructional details, troubleshooting or other downloadable content, please go to <http://audacityteam.org>.



## SPECIFICATIONS

Power Supply:.....	AC Adaptor: 100-240V, 50-60Hz
.....	DC-12V/1.0A
RCA Output Freq. Range:.....	20-20 KHZ
Max Power Consumption For Adaptor:.....	6W
Included: .....	Turntable, Dust Cover, Turntable Operation Sheet, Instruction Manual, CD Software, 45 RPM Adaptor Turntable Rubber Mat, 12V/1.0A Switching Power Supply with 2 Plugs, USB Output Cable
Unit Size: .....	15.35" x 13" x 3.15"
.....	390mm x 330mm x 80mm
Unit Weight:.....	5.77 lbs (2.62 kg)
Needle Model Number:.....	ITNP-LD1

Made in China.

Design and specification are subject to change without notice.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Other trademarks and trade names are those of their respective owners

This product is manufactured and sold by Innovative Technology Electronics LLC. Victrola and the Victrola logo are trademarks of Technicolor or its affiliates and are used under license by Innovative Technology Electronics LLC. Any other product, service, company, trade or product name and logo referenced herein are neither endorsed nor sponsored by Technicolor or its affiliates.