 


A-RISE

PRODUCT MANUAL

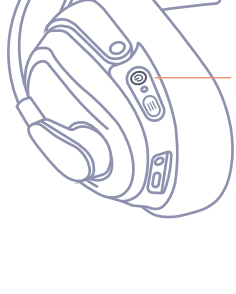

POWER ON/OFF

To power the headset on, press and release ① after 1 second, or connect the headset to a USB power source.

To power the headset off, disconnect any USB connection and hold ① for 2 seconds.

BATTERY STATUS

 
 
While the headset is turned on, single press ① to get a voice prompt of the headset battery level.

CONNECTION

USB ② - MAIN GAMING USE, and CHARGING
For the best gaming performance and charging, connect using the USB Type-C cable.

AUX ③ - CONSOLE USE
For consoles where a USB connection is not possible, connect using the AUX cable.

BLUETOOTH - CASUAL USE
While the headset is off, press and hold ① until the headset prompts "Power, On" to enter pairing mode.

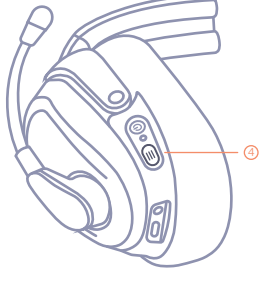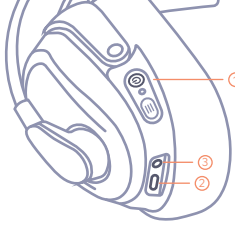


HEADSET MODE

Single press ④ to switch between the following 3 headset modes:

- Pro Gaming
- Gaming and Music
- Gaming and Music, ANC off

 Press and release ④ after 1 second to get a voice prompt indicating the current headset mode.

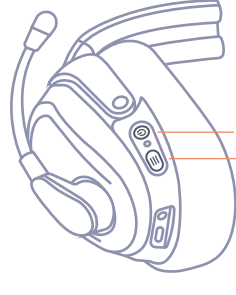

CHARGING LED SLEEP MODE

To turn off the LED while the headset is charging, hold ① for 2 seconds.

BLUETOOTH CLEARING

Press and hold ④ for 10 seconds to clear the bluetooth pairing list.

MUSIC CONTROL

PLAY/PAUSE MUSIC ▶||
Single press ⑤.

ADJUST VOLUME ◀/▶
Single press ⑥ for volume up, and single press ⑦ for volume down.

PREVIOUS/NEXT TRACK ⏪/⏩
Press and hold ⑥ for next track, or press and hold ⑦ for previous track.



PHONE CONTROL

ANSWER/HANG UP 📞
Single press ⑤ to answer an incoming call.
Single press ⑤ to hang up an ongoing call.

DECLINE INCOMING CALL ✖
Press and hold ⑤.



LED INDICATION

① CONNECTION

- • • • Bluetooth pairing mode
- 5s • Connected

 
② CHARGE

WHILE ON BATTERY **WHILE CHARGING**

— Battery OK ○ ○ ○ Charging

— Battery Low — Fully charged



• • • Critical — Charging error

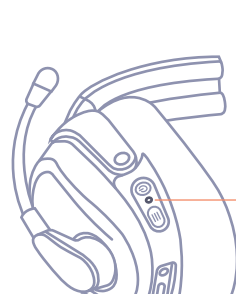

BOOM ARM


Rotate the boom arm to a vertical or horizontal position to respectively mute or unmute the boom arm microphone.

  Ensure that the embedded microphone symbol on the boomarm microphone faces your mouth, and that the foam tip is securely in place.

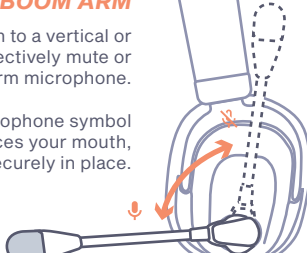


HEADBAND ADJUSTMENT

 Adjust the headband slider to either lengthen or shorten the headband. The headband slider is designed to be firm, so as to avoid unintentional slider movement.



 For optimal noise isolation and audio quality, adjust the headband until the ear pads sit centered around the ears, not touching the top or the bottom of the ears.

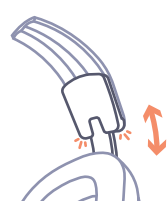

REMOVEABLE EAR PADS

If needed, the ear pads can be removed for cleaning or replacing. The ear pads are mounted to the headset with magnets, and can therefore be removed simply by pulling them off the headset.

When reattaching the ear pads, make sure both the ear pads and the headset are clean of dust and debris, to ensure a tight seal between the two.



REGULATORY

CE AceZone ApS hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU and all other applicable EU directive requirements. The complete declaration of conformity can be found at: www.acezone.io/compliance

UK CA This product conforms to all applicable Electromagnetic Compatibility Regulations 2016 and all other applicable UK regulations. The complete declaration of conformity can be found at: www.acezone.io/compliance

AceZone ApS hereby declares that this product is in compliance with the essential requirements per Radio Equipment Regulations 2017 and all other applicable UK regulations. The complete declaration of conformity can be found at: www.acezone.io/compliance

Important Safety Instructions

- Do not use this apparatus near water.
- Clean only with a dry cloth.

Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNINGS/CAUTIONS

- Do NOT use the headset at a high volume for any extended period.
- To avoid hearing damage, use your headset at a comfortable, moderate volume level.
- Turn the volume down on your device before placing the headset in/on your ears, then turn the volume up gradually until you reach a comfortable listening level.
- Do NOT use your headset while driving for phone calls or any other purpose.
- Do NOT use the headset with noise canceling mode at any time the inability to hear surrounding sounds may present a danger to yourself or others, e.g., while riding a bicycle or walking in or near traffic, a construction site or railroad, etc., and follow applicable laws regarding headset use.
- Turn the headset off, or use the headset with noise canceling off and adjust your volume, to ensure you can hear surrounding sounds, including alarms and warning signals.
- Be aware of how sounds that you rely on as reminders or warnings may vary in character when using the headset, even with transparency mode.
- Do NOT use the headset if they emit any loud unusual noise. If this happens, turn the headphones off and contact AceZone customer service.
- Remove the headset immediately if you experience a warming sensation or loss of audio.
- Do NOT use the headset as aviation communication headsets. Contains small parts which may be a choking hazard. Not suitable for children under age 3. This product contains magnetic material. Consult your physician on whether this might affect your implantable medical device.

WARNINGS/CAUTIONS CONT.

- Do NOT use mobile phone adapters to connect headset to airplane seat jacks, as this could result in injury or property damage due to overheating.
- To reduce the risk of fire or electrical shock, do NOT expose this product to rain, liquids or moisture.
- Do NOT expose this product to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the product.
- Keep the product away from fire and heat sources. Do NOT place naked flame sources, such as lighted candles, on or near the product.
- Use this product only with an agency approved LPS power supply which meets local regulatory requirements (e.g., UL, CSA, VDE, CCC).
- Do NOT make unauthorized alterations to this product.
- If the battery leaks, do not allow the liquid to come in contact with the skin or eyes. If contact is made, seek medical advice.
- Do NOT expose products containing batteries to excessive heat (e.g. from storage in direct sunlight, fire or the like).
- Do NOT wear while charging



This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.