

MINI PRINTER

Quick Start Guide

(Ver. 1.0)

■ Package



Printer



User Manual




Printing Paper



USB Cable

■ Product View

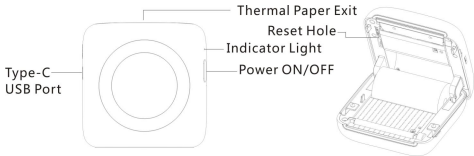

■ How to Use

① Power ON/OFF

Long press 2 seconds to Power ON/OFF

- Indicator light on: Normal running/ Full charged
- Indicator light flash quickly: Error running (Lack of paper, Low battery Indicator, Printing head overheating)
- Indicator light flash slowly :Charging



Charge

Please plug the device into the USB cable and connect it to 5V/1A adapter or the computer for charging before the first time.

- When the indicator light flashes quickly during charging, check if it means lack of paper, then load the printed paper to ensure normal charging.

RESET

If the device does not respond, try to insert the needle/toothpick into the reset hole for 3 seconds and then release.

■ **Download “iLabel” APP**




User can scan below QR or search “**iLabel**” in APP Store/Google Play to download.



(Android 4.3 or above and iOS 9.0 or above)



After power on, double click the button to print QR code, scan the code to download “iLabel” APP.

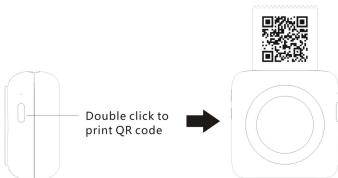


■ Connect to print

1. Turn on the phone Bluetooth and the APP, allows applications to gain access (photos, media, files etc) of the phone.
2. Then register and login in the APP, connect the device by scan the same QR code printed before.


■ Replace the Thermal Paper

1. Follow the arrow direction to slide and open the device.

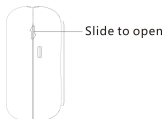

2. When replacing, insert the thermal paper. Please attention, the new thermal paper needs to expose the length of the paper 2cm, so that the machine

can automatically absorb paper when loading the paper.

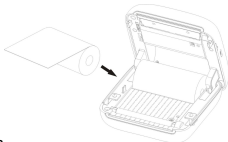

3. Cover the device.

※ **Do not touch the print head to avoid scalding when changing the printing paper after printing.**

■ Parameter

Product Dimension: 85*85*44mm

Print Type: Thermal Printing

Thermal Paper Specification: 57*D30mm (Standard)

Capacity: 800mAh Lithium Battery

Charging Time: About 2-3 Hours

Input: 5V/1A

Charging Port: Type-C

■ Safety Precautions

- This product is with built-in lithium battery, please do not use it higher than 40 °C, do not close to the fire and other sources of heat, do not placed in the hot sun.
- Do not remove, impinge, puncture or modify the battery. Do not use the battery for other purposes.
- Do not put the product in fire or water to avoid short circuit of the battery causing fire or burns.
- Please do not use this product in high humidity or dusty areas

- **Please gently insert or unplug the charging cable to prevent excessive force from damaging the charging interface.**

■ **Frequently Asked Questions**

Q : No connectable devices were found when adding devices?

A: When adding the device, please check whether the power of the device is enough to work.

Q : The device can not print. How to do?

A: ① Confirm whether the Bluetooth of the mobile phone is on, and exclude the possibility of others connecting to this device.

② Check whether the thermal paper has been used up, timely replacement of the printing paper.

③ Printing head is overheating, if overheating, please let the printing head cool before trying to print.

④ Restart the device, if still can not solve, please use the pin inserted into the reset hole for reset.

Q : Why is it all white papers instead of content?

A: It may be caused by the incorrect installation of the thermal paper. Please reinstallation.

Q : Why

A: ①
the device
②
the



the printed
getting lighter?
Check whether
is low battery.
Check whether
printing head

and wheel is covered with carbon ink, please wipe with alcohol softly.

Q : Why does the adhesive paper fail to print out?

A: Please pull the adhesive paper out 2cm.