 


Cordless Vacuum Cleaner

Instruction manual

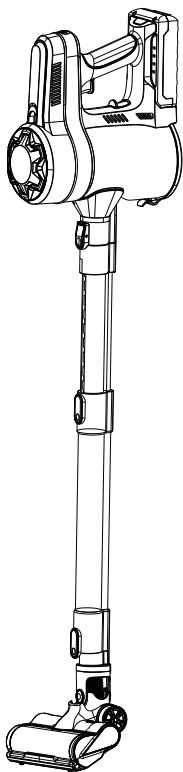

Model : A10

Important Safety Instructions

WARNING: Basic safety precautions should always be observed when using an electrical appliance, including the following to reduce the risk of fire, electrical shock, or injury.

Personal Safety

1. Store it indoors in a dry place and out of the reach of children;
2. Always use responsibly. This appliance can be used by children aged from 10 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved;
3. Do not let children play with the appliance; supervise children using or maintaining the appliance;
4. Use only manufacturer's recommended attachments as described in this manual; **misuse or use of non-recommended attachments or accessories may result in personal injury.**
5. Take extra care when cleaning stairs;
6. Keep the appliance and accessories away from hot surface;
7. Do not block the appliances openings or hinder air flow, keep openings free of any objects including dust, lint, clothing, fingers (and all parts of the body);
8. Particularly keep hair away from openings and moving parts.

Electrical Safety

1. Only use batteries and chargers supplied by the manufacturer;
2. Never modify the charger in any way;
3. The charger has been designed for a specific voltage. Always check that the voltage is the same as that stated on the rating plate;
4. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack;
Before using, check the charger cord for signs of damage. A damaged or entangled charger cord increases the risk of fire and electric shock;
6. Do not abuse the charger cord;
7. Never carry the charger by the cord;
8. Do not pull the cord to disconnect it from a socket, grasp the plug and pull to disconnect it;

9. Don't wrap the cord around the charger when storing;
10. Keep the charger cord away from hot surfaces and sharp edges;
11. The supply cord cannot be replaced. If the cord is damaged, the charger should be discarded and replaced;
12. Do not handle the charger or the appliance with wet hands;
13. Do not store or charge the appliance outdoors;
14. The charger must be removed from the socket before removing the battery, cleaning or maintaining the appliance.

Battery Safety

1. This appliance includes Li-ion batteries, do not incinerate batteries or expose to high temperatures, as they may explode;
2. Liquid ejected from the battery may cause irritation or burns;
3. In an emergency situation contact professional help immediately;
4. Leaks from the battery cells can occur under extreme conditions. Do not touch any liquid that leaks from the battery. If the liquid that gets on skin, wash immediately with soap and water. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention. Wear gloves to handle the battery and dispose of immediately in accordance with local regulations;
5. Shorting the battery terminals may cause burns or fire;
6. When the battery pack is not in use, keep it away from paper clips, coins, keys, nails, screws or other small metal objects that could make a connection from one terminal to another;
7. When you dispose of the appliance remove the battery and dispose of the battery safely in accordance with local regulations.

Service

1. Before using the appliance and after any impact, check for signs of wear or damage and repair as necessary;
2. Do not use the appliance if any part is damaged or defective;
3. Repairs should be carried out by a service agent or a suitably qualified person in accordance with relevant safety regulations. Repairs by unqualified persons could be dangerous;
4. Never modify the appliance in any way as this may increase the risk of personal injury;
5. Only use replacement parts or accessories provided or recommended by manufacturer.

Intended Use

 
1. This appliance has been designed for domestic dry vacuum cleaning only;
2. Do not pick up liquids or use on wet surfaces;
3. Do not pick up anything that is flammable, burning or smoking;
4. Use only as described in this manual;
5. Don't use on concrete, tarmacadam or other rough surface.

Warning


1. Do not use water, solvents, or polishes to clean the outside of the appliance; wipe clean with a dry cloth;
2. Never immerse the unit in water and do not clean in a dish washer.

Introduction of Components

Main body

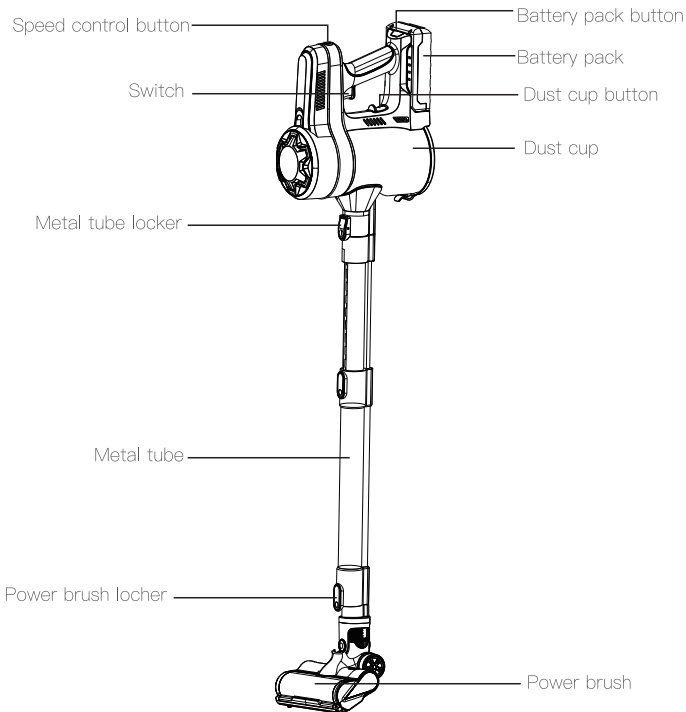


Wall mount

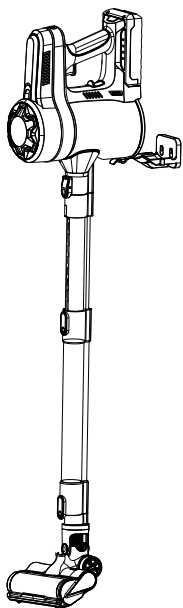 


Product Installment

I. Use as the stick vacuum cleaner

 
a) Install the dust cup into the dust cup slot

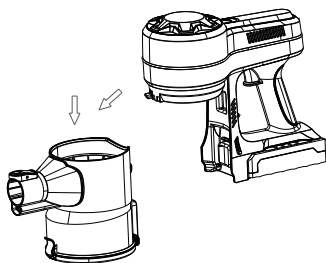

 
b) Slide the metal tube into the dust cup, the tube lock will click when locked in position.



 
c) Attach the brush to the tube.



 
d) Attach the bristle brush to the tube.



 e) Attach the long crevice to the tube.




 
f) Hold the battery and align it with the rail groove on the body and fasten the battery bottom cover in the direction of the arrow.

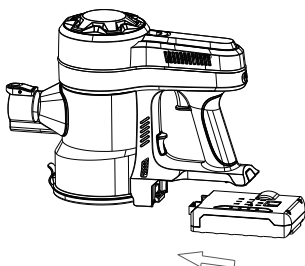


g) Press the switch and choose the desired vacuum speed.

II. Use as a hand vacuum

  a) Insert the accessory (bristle brush or long crevice) to the dust cup.

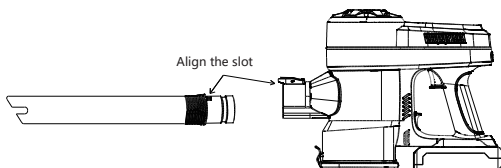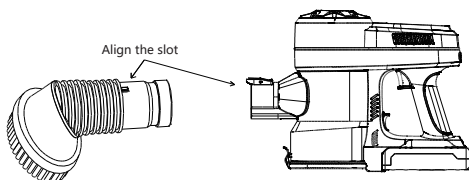

 b) Hold the battery and align it with the rail groove on the body and fasten the battery bottom cover in the direction of the arrow.

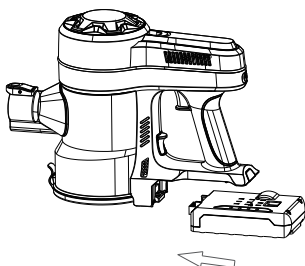

c) Press the switch and choose the desired vacuum speed.

Product Operation

I. Battery charging

1. When the battery indicator is blinking red, please turn off the appliance, and charge it.

 
2. When charging, 3 blue lights are illuminated sequentially.

3. When fully charged, 3 blue lights are steady on.

During operation, the indicator light shows:


Blue — On

Red — low battery/brush head is jammed

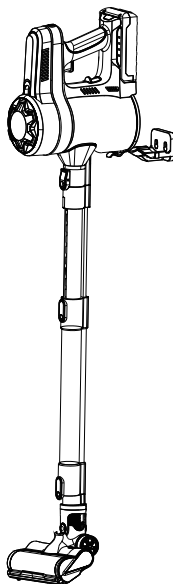


II.How to empty the dust cup

 Pull out the bottom cover of the dust cup and pour the dust out.

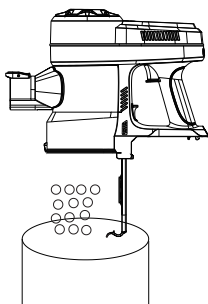


III.How to clean the filter

 
1. Remove the dust cup.

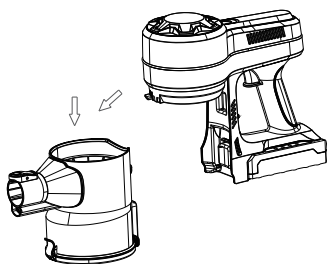

 2. Take out the filter case, then take out the filter.

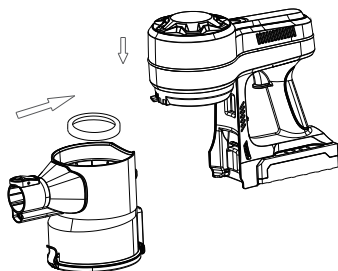

 
3. Wash the filter case.

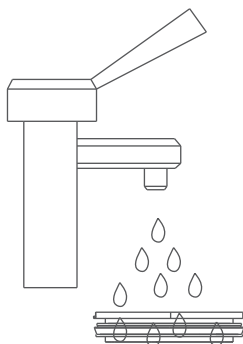

NOTE: Assemble it when totally dry.

IV.How to disassemble the battery

 Press the battery pack button and slide the battery out.

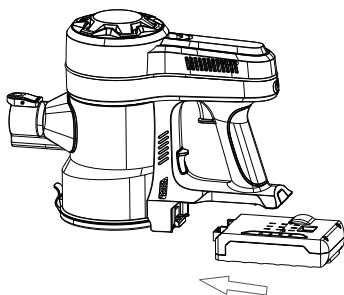

Troubleshooting

Suction gets weak	<ol style="list-style-type: none"> 1.Empty the dirt cup 2.Clean the HEPA filter 3.Check if the dirt cup is installed correctly
Roller brush stops spinning & has strange noise	<ol style="list-style-type: none"> 1.Check if the brush (especially the bearing part) is stuck by hair 2.Check if the filter cup is installed correctly in the right place 3.Detach the tube, use the handheld part only. If not work, contact the seller for help
Battery doesn't hold a charge	<ol style="list-style-type: none"> 1.Check if the vacuum cleaner is fully charged with 3 lights on 2.Check if the charger & charging base is connected correctly 3.If there is no light on when charging, contact the seller for help
The light of motorized brush flickers for 6 times	Please check if it is entangled with foreign objects or blocked, make it clean then install correctly and using again

Technical Data

Model	A10
Power	180W
Charging time	4-5H
Separation technique	Cyclone technical
Container volume (gross)	0.8L
Battery charger output	26.5V/500mA
Battery	22.2V/2200mAh
Mode	7kPa/30min
-Standard	12kPa/15min
-High	



Email:
lovevacuum@outlook.com

If you have any problems, please scan the QR code below to contact us directly, we will solve your problem as soon as possible!

