

Charging instructions

- When the product is in charge state, the working indicator refers to the charging state (green light is full, red light is charged)
- When the product is full of electricity and the charger is still connected, the working indicator will be green and bright
- After unplugging the charging wire, the working indicator lights out
- When connecting charger, the product can be used normally

Other conventions

- In order to get a better use experience, the product should be filled with electricity before use, and the appropriate grinding head should be used
- After use, please fill the product with electricity in time to prevent battery damage caused by over-discharge during long-term storage
- Due to the inherent characteristics of lithium batteries, after the rated number of charges and discharges (generally about 500 times /cycle)
- According to the different environment and mode of use, there may be deviation, there will be capacity attenuation, which is a normal phenomenon
- Because improper use may lead to skin damage, please ensure that the use of foot grinder products before use is fully aware of the precautions, and for the correct use.
- This product does not have waterproof function, please pay attention to not wash when cleaning and pay attention to waterproof.
- When the sponge of dust storage is used for a long time, it may reduce the filtering effect or affect the function of dust collection. Please be prompt.

- The grinding head will stop automatically when the blockage (excessive pressure of the grinding head) is detected.
- The grinding head will automatically restart one second after the grinding head stops turning, and flashes if the grinding head is detected three times in a row
- When the power is low and the grinding head is blocked, the overdischarge protection of the battery hardware will start automatically. At this time, the output of the battery will be cut off. After the reason of blocking is removed, the charger can be plugged in to remove the protection

Safety precautions

- It is forbidden to use it in bathing or showering. Do not use it near the bathtub, washbasin or other utensils that hold water
- This product with motor rotation function is not suitable for people with mental disorders, unsafe behavior awareness (including children) or physical and sensory problems, unless supervised and guided by a guardian
- This product has the function of motor rotation. When not in use, it should be placed in a place that is not easily touched by children. In the process of using, it should avoid touching and playing by children
- Packaging plastic bags of products should be placed where infants and young children can not touch
- This product does not have waterproof function. Do not use it in the humid environment such as bathroom, which is easy to cause water intake
- When a liquid enters the product, the power supply must be switched off at the first time and sent to the manufacturer's maintenance department or professional maintenance personnel for maintenance.

- Please use this product for the right purpose
- Please charge the product at rated voltage. When charging, make sure the plug is fully inserted
- Do not wet hand plug-in power supply and use this product, otherwise it may lead to electric shock or short circuit.
- Do not use this product near inflammable and explosive materials, otherwise it may lead to fire or explosion accidents
- When the product is connected to the power supply, do not let it unattended; after use, be sure to unplug the power plug
- Do not pull the soft wire part of the power supply directly. If the charging soft wire or professional be replaced with special soft wire or professional components bought from its manufacturer or maintenance department
- Do not use accessories or components manufactured by other manufacturers that are not recommended by the manufacturer of this product. If the products are damaged by such accessories or components, the company will not guarantee them
- Do not insert metal objects into the product to avoid splashing. After use, do not entangle the power supply soft knot on the product, which may cause damage to the power supply soft wire
- When you abandon the appliance, remove the batteries and hand them over to the official collection point for safe handling
- Battery removal steps: Turn off the product power switch, pull the plug out of the socket, and the product stops working. Use screwdriver and other tools to loosen the screw. After the battery is removed, the appliance can not be connected with the power socket!

Clean Maintenance and Maintenance

- Do not wash this product in dishwasher or washing machine
- This product does not have waterproof function. When cleaning, attention should be paid to avoid

water or other liquids from the product gap or interface into the product interior, resulting in short circuit failure of the product.

- After each use, please clean the grinding head and dust storage in time.
- Please make sure that the product is cleaned and maintained when the machine is shut down.
- Do not use sharp or corrosive, volatile diluent cleaners.
- Clean and wipe the product with a soft wet cloth (with a small amount of non-irritating, volatile, flammable detergent) and dry it with a soft dry cloth.

Certificate

Product name: foot grinder S161

Quality Inspector:




Date of manufacture:

- Under one of the following circumstances, even during the warranty period, repairs can not be guaranteed, but they can be repaired at a fee:
1. Within one year after the date of purchase.
 2. There is no guarantee card and goods that can prove the date of purchase
 3. Faults caused by force majeure (such as fire, earthquake, typhoon disaster, flood, war and other external factors)
 4. Scratches, stains and other external damage during use
 5. Faults caused by self-decomposition, disassembly and wrong repair
 6. Loss of consumables such as LED, accessories other than body.
 7. Faults caused by use outside the home (e.g. in business activities)

Wireless Portable Foot Grinder S161

The instruction book

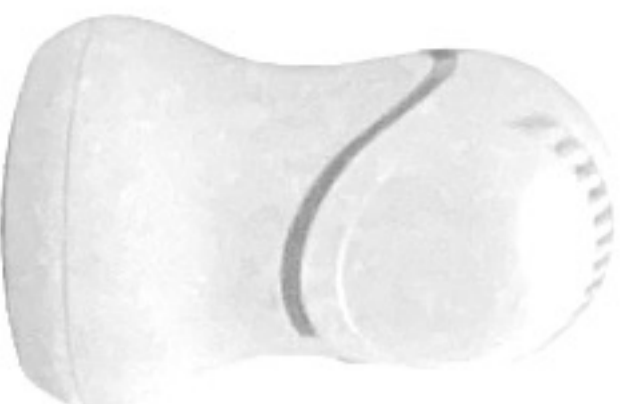


The product's color in this picture is for reference only, the actual color is based on the product which is received

Note: Please keep this instruction properly for future reference. Please read this instruction thoroughly and carefully before you use the product.

(The company reserves the right of final interpretation of this instruction.)

Product Structure Description

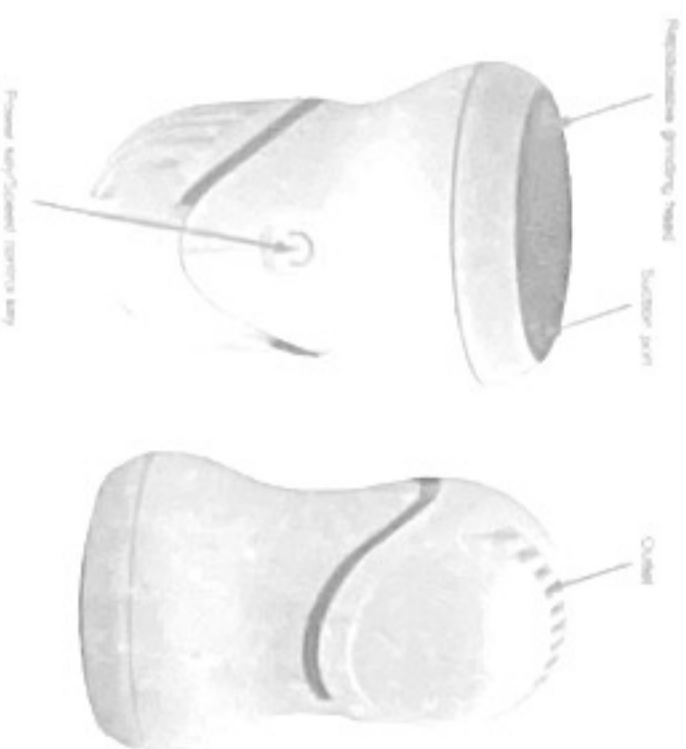

Specific Parameters

- Product Name: Foot Grinder
- Product Model: S161
- Charging Voltage: 5V
- Charging Current: 2A
- Origin: China

Product Characteristics

- Built-in 1200mAh polymer lithium-ion battery.
- With self-cleaning function, reduce the dropping of small debris (powder can be inhaled partially).
- One key switch, with working indicator (charging indicator), speed can be switched.
- Universal Micro USB charging port, 5V DC charging voltage, most mobile phone chargers are suitable.
- Removable multi-grinding head configuration, according to particular use, choosing coarse sand, fine sand grinding head.
- Wireless use, free of space restrictions, available globally.

Note: This instruction has tried to ensure the accuracy and rigor of the information provided. In view of the continuous improvement and upgrading of the products, the company reserves the right to change the instructions without further notice.

Using Steps

- 1 Turn on: Hold down the power button for 2 seconds in shutdown or charging state, then working indicator will show green, and the grinding head will start to rotate at high speed.
- 2 Speed regulation: In startup state, the speed of grinding head can be changed between high speed (green working indicator) and super high speed (red working indicator).
- 3 Shutdown: Press the power button for 2 seconds in the boot state, the working indicator lights go out, the grinding head stops running, and the product enters the shutdown state (if charged, it enters the charging state).


Instructions

Before using this product, please make sure that you have read and know all the safety precautions.

- When the grinding head rotates, the grinding head would rub a part of the skin and press slowly, the degree of pressure is comfortable for the skin.
- When the skin is uncomfortable, please adjust the pressure of stop using it in time.
- After use, please charge it in time. Not charging for long term will lead to degradation of lithium battery's performance.
- After use, please clean the dustbin in time, dust accumulation may affect the effect of dust collection.

Instructions for Replacing Grinding Heads

- 1 Make the product shut down.
- 2 Place the clip in place according to following picture.

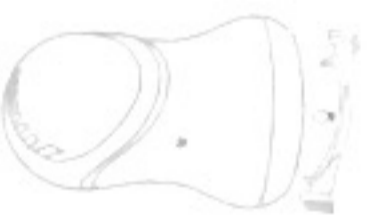

- 3 Press the finger on both sides of the clip and pull it up at the same time.



- 4 Install the reversed grinding head for replacement when you hear the click sound and check in situation whether in place or not.

Clean Sponge Description

Clean the inner sponge after loosening the dust storage bin as the direction showed in the following picture: install the sponge back to its original position after cleaning, lock the dust storage bin in the opposite direction, and finish the cleaning.



Protection Function

- When the battery power is lower than the protection value, in order to protect the battery from discharging, the working indicator flashes five times and then goes out. The product will automatically enter the shutdown state.