



1

Mark the exact location of mounting hole, drill the hole(suggested 50mm in depth) and put the anchor (A) into the hole.

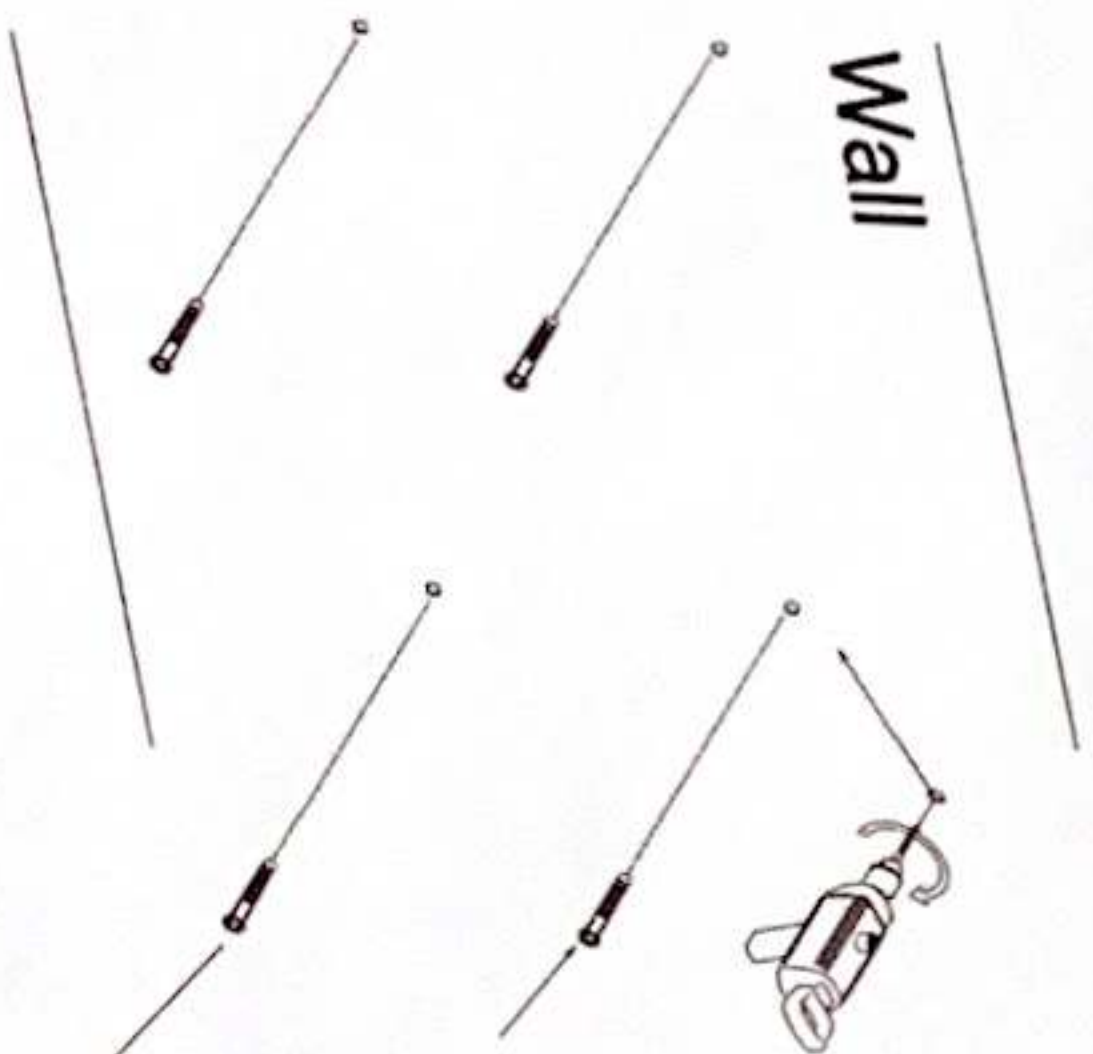

AX4


BX4

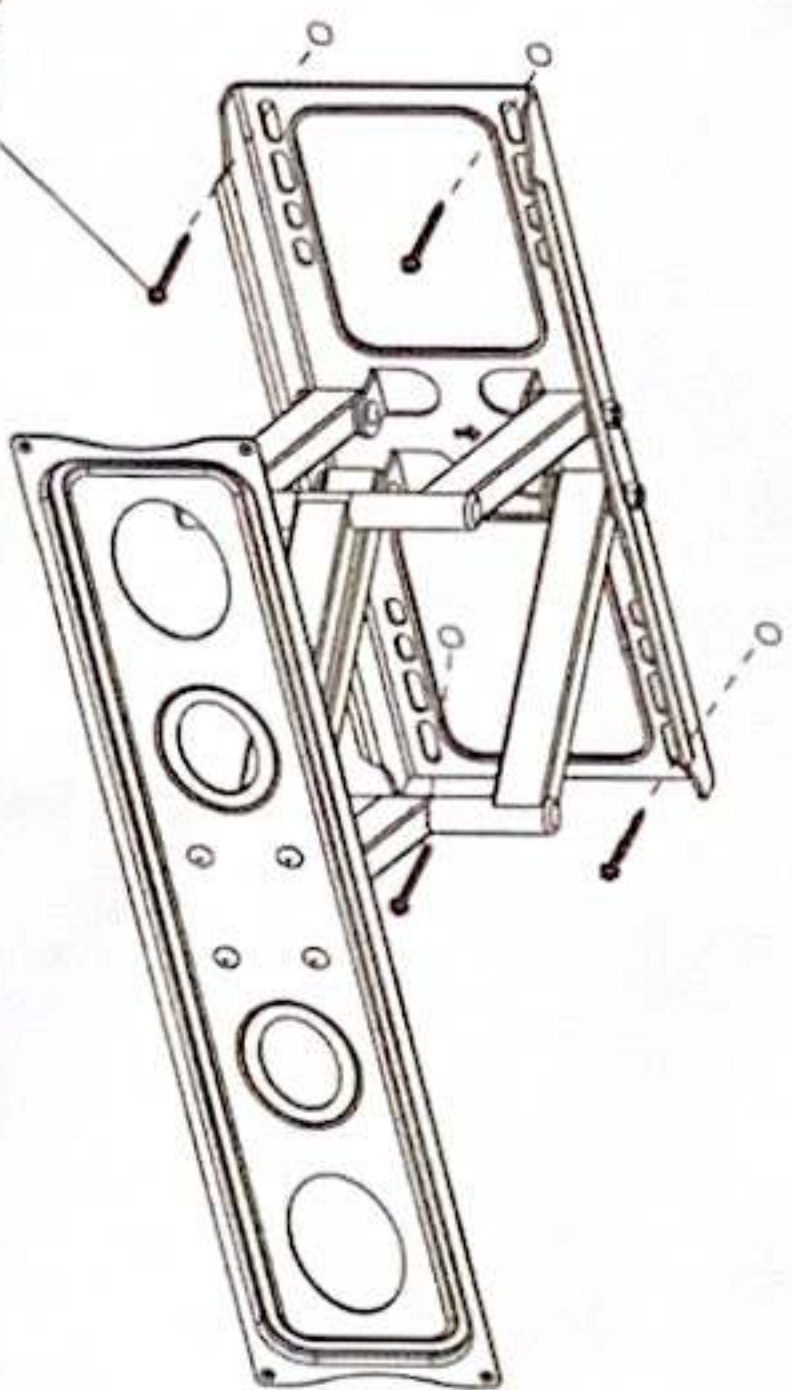

Put the mounting plate against the wall, and tighten the wall mount into the hole by using rack bolt(B)

2


Put the arm against the TV, tighten the arm onto the TV by using bolt D/E/F

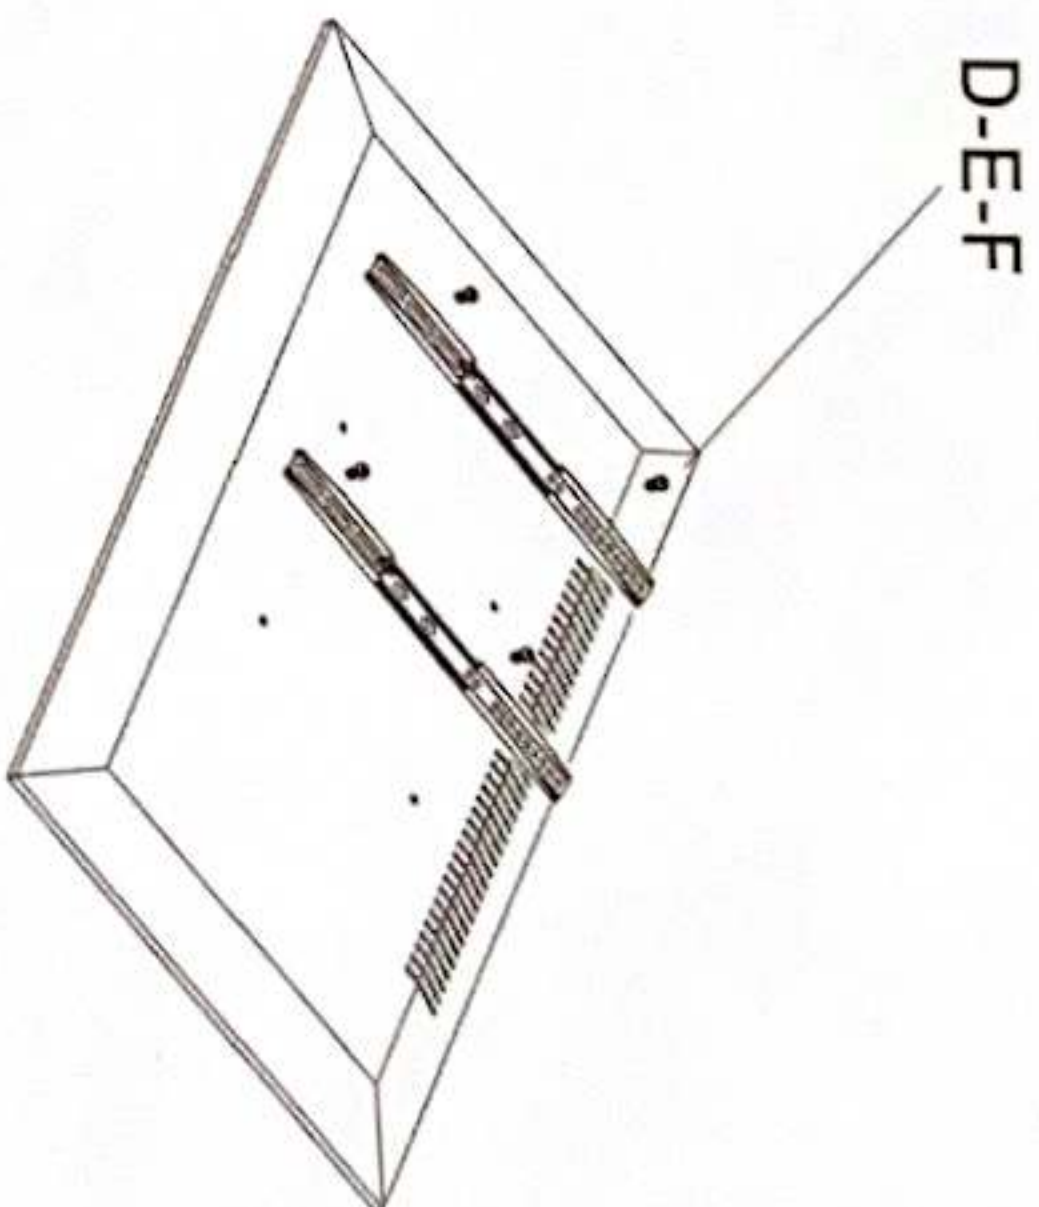

D-E-F


3

Put the TV with arm onto the wall plate, and screw the bottom safety bolt to the right position.

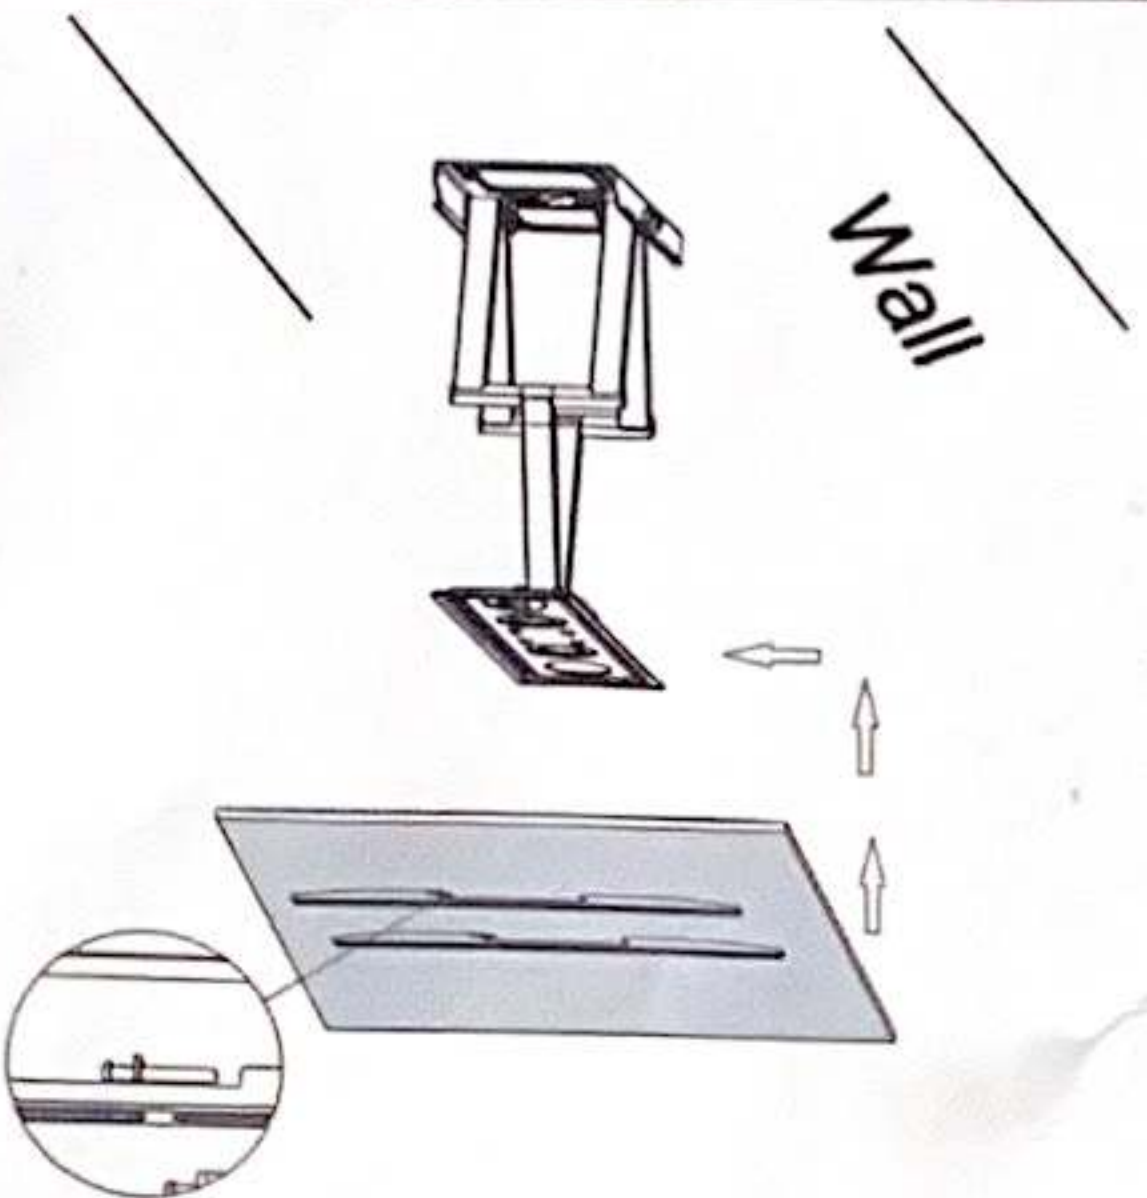





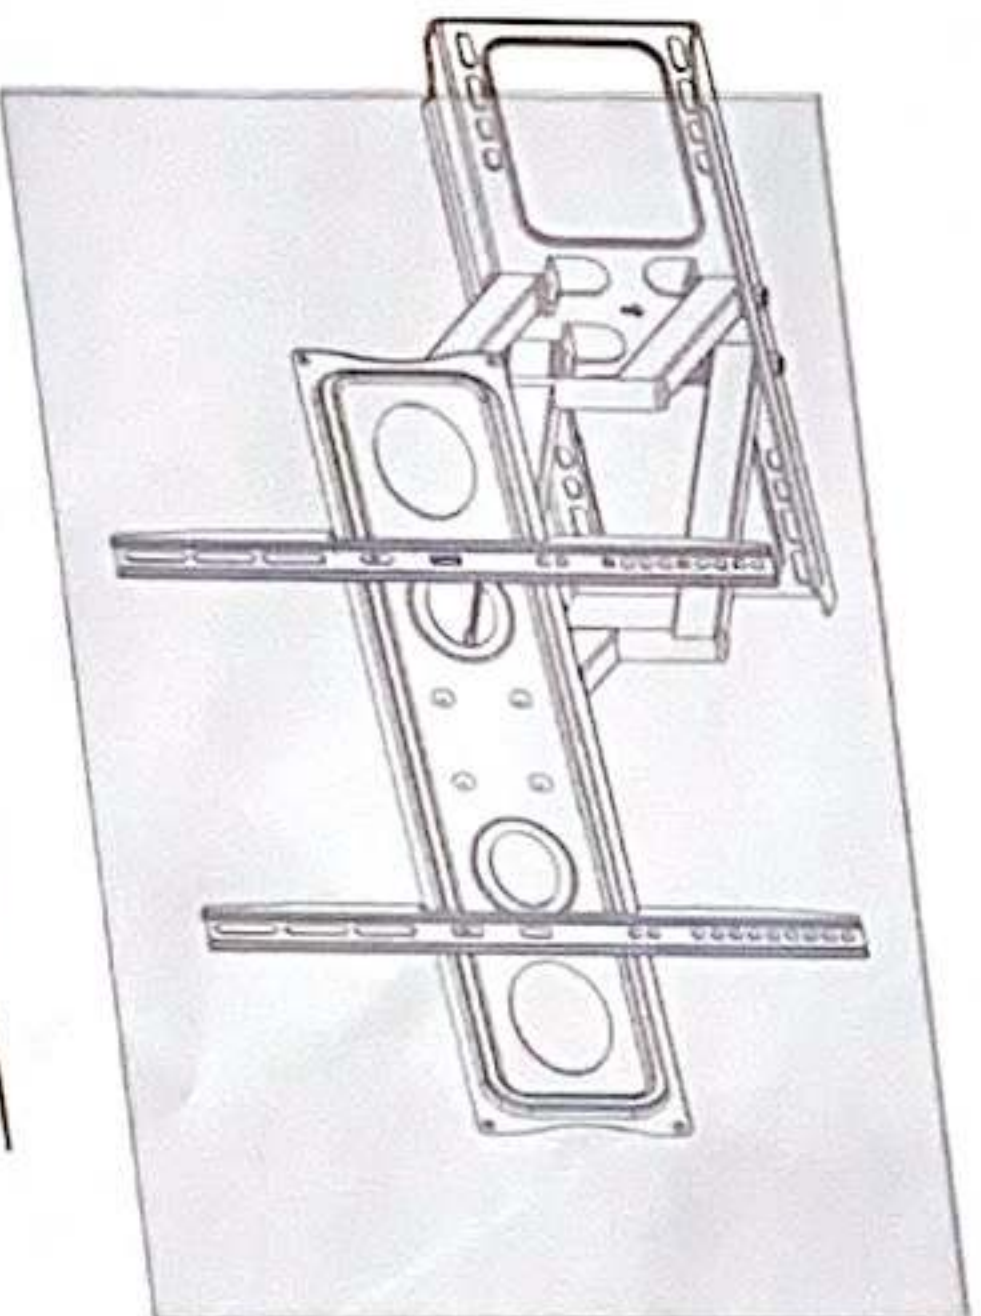




4

Micro-adjust the TV to the right position.



Parts

					
Φ10X50 AX4	M8X50 BX4	10mm CX4	M8X25 DX4	M6X22 EX4	M5X22 FX4
					
D8 GX4	D6 HX4	I			