

# Warranty card

Notice of warranty:

This product has been strictly inspected and delivered from the factory. The warranty period is 5 years from the date of sale under the conditions of using the correct usage method and storage conditions of this instruction. During the warranty period, if it is found that the failure caused by quality problems, the warranty is guaranteed by our company or dealer. However, for the damage caused by improper use, self-assembly and irresistible force and it is not in the scope of the warranty. The maintenance fee shall be charged appropriately for the maintenance.

User name		purchasing date	
User phone		Product model	
User address			
sent date for repair	fault and maintenance record	Repair date	Signature of maintenance man

# Handheld luxury garment steamer

## Operating Instruction



# Environmental Claims

According to the Regulations of management methods for restricted use of hazardous substances in electrical and electronic products of the People's Republic of China, the names and the contents of the poisonous and harmful substances or elements that may be contained in electrical and electronic products are listed in the table below.						
Component Name	the poisonous and harmful substances or elements					
	lead(Pb)	mercury (Hg)	cadmium (Cd)	hexavalent chromium(Cr(VI))	polybrominated biphenyls (PBB)	polybrominated diphenyl ethers (PBDE)
Plastic type	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	X
Hardware type	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Heating component	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Power cord	X	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Rubber type	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Electronic type	X	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
screw	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Packaging, stickers	X	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

This form is prepared based on the requirements of SJ/T 11364.

O :indicates that the content of the poisonous and harmful substance of all homogeneous materials in the components is below the relevant threshold of the GB/T 26572 standard.

X :indicates that the content of the poisonous and harmful substance of at least one of all homogeneous materials in the components is above the relevant threshold of the GB/T 26572 standard.

Depending on the product type, you may not purchase the product containing all the above components.

The environmental protection term of this product is 10 years, the contamination control label is shown in the left pattern.

The environmental protection term will be effective only when the product is used normally in accordance with the operating instruction.

Description of harmful substances : The content of harmful substances in the materials used by our company has followed the limit requirements of harmful substances limit standard GB / T26572, in which the component marked "X" indicates that content of harmful substances elements can not be replaced due to the development of global technology level. According to the development of global technology, our company will strive to realize the replacement of the harmful substances. If the environmental protection requirements of the harmful substances of materials are upgraded due to the development of technology, we will compile instructions of new version.

## Content


Content-----	1
Product introduction-----	2
Structure of product-----	2
Cautions-----	3
Usage method/installation-----	4
Cleaning and maintenance-----	5
technical parameter-----	6
Electrical principle chart-----	6
Troubleshooting-----	7
Environmental claims-----	8
Warranty card-----	Back cover

Please read the instructions carefully before using. We reserve the right to interpret the instructions. The pictures in the instructions are for reference only. For the appearance of the products, please in kind prevail. The technical or software is subject to upgrade without further notice. this product is only suitable for sale and use in mainland China.

## Product introduction

Thank you for choosing hand-held luxury garment steamer. This product has the simple and magnificent appearance, exquisite production process and other characteristics. Please read the instructions for several minutes and take good care of them to familiarize yourself with the correct use methods and maintenance methods.

## Structure of product

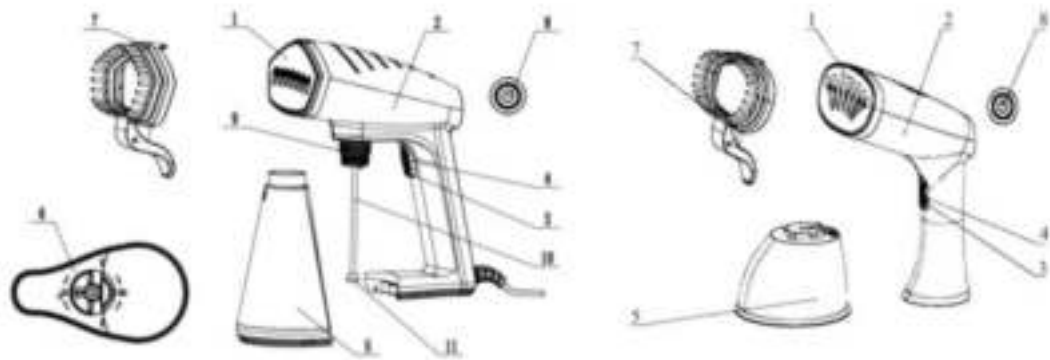

No.	Parts name	No.	Parts name
1	Stainless steel panel	7	Brush / trousers seam center
2	Base machine	8	Power button / indicator light
3	Steam switch	9	Water tank plug
4	Steam switch locking slider	10	Inlet pipe
5	water tank	11	Inlet water ball
6	Water tank positioning lock block		

## Troubleshooting


Common problem	processing method
the garment steamer does not heat	<ul style="list-style-type: none"> <li>•Check whether the plug is inserted correctly. Check power supply</li> <li>Check the power button.</li> </ul>
the garment steamer does not produce steam	<ul style="list-style-type: none"> <li>•Check water level and whether the water tank are properly installed.</li> <li>•Press hard on the steam button.</li> <li>•Keep the garment steamer upright</li> </ul>
Water leaks from the water tank.	<ul style="list-style-type: none"> <li>•Make sure that water level is not above the highest water level.</li> </ul>
	<ul style="list-style-type: none"> <li>•Please ensure that the water inlet of the tank is closed properly.</li> <li>•Keep the garment steamer upright in accordance with the operation instructions provided.</li> </ul>
There is a loud buzz or pumping sound when the garment steamer works.	<ul style="list-style-type: none"> <li>•Check the water level; if there is no water or the water level is low, please add water to the water tank.</li> </ul>
Avoid the discoloration of metal accessories on the clothing.	<ul style="list-style-type: none"> <li>•Do not use the garment steamer on the metal accessories directly.</li> <li>•Steam should be used carefully when there are metal accessories.</li> </ul>
Spray water from steam outlet	<ul style="list-style-type: none"> <li>•In the cold state, press the power button, let the machine preheat for 30 seconds at first and then press the steam switch.</li> </ul>

1. Remove steam brush on the head of the garment steamer at first and then use wet cloth to clean.
2. Please do not use rough or magic corrosion cleaners or solvents.
3. Do not immerse the garment steamer into water or other liquids.
4. Don't fall, throw or try to bend it. Don't try to disassemble or decompose electrical appliance.
5. Empty the water tank after each use.
6. Avoid storing electrical appliances in damp places.
7. Do not approach the heat source or exposure the electrical apparatus to direct sunlight.
8. Always ensure that the steam outlets are clean and free from scaling and are not clogged.
9. It is suggested that the garment steamer should be stored vertically in flat places such as cabinet.
10. Do not treat discarded electrical appliances as unclassified municipal waste, you should hand over them to an officially designated recycling center.

#### Technical parameter

Product model	Rated voltage	Rated frequency	Rated power rating	Water tank capacity
HY-168/ HY-128	220V~	50Hz	1500W	260mL/350ml

#### Electrical principle chart

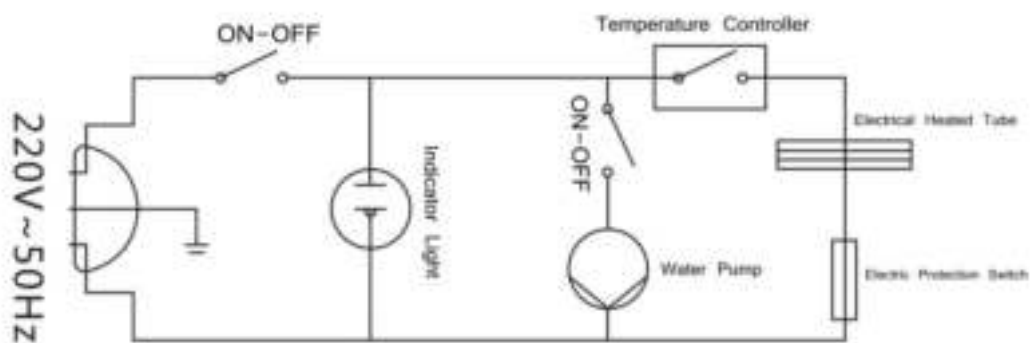

## Cautions

Before using this product, please read the user manual carefully and keep it for future reference.

## **DANGER**

1. Do not immerse this product in water or other liquids and do not rinse under the tap.
2. Be careful of the hot steam generated by the garment steamer. The steam may cause burns.

## **Warning**

- \* Check if the voltage indicated on the product corresponds to the local mains voltage before you connect the product to the power.
- \* Do not use the product if the plug, power cord or product itself has been damaged noticeably, or if the product has fallen or leaked.
- \* The product can only be sent to the authorized maintenance center for overhaul. Do not repair the product by yourself, otherwise the warranty will be invalid.
- \* If the power cord is damaged, it must be replaced by professional person in the manufacturer's maintenance department or similar department to avoid danger.
- \* The user shall not leave when the product is electrified.
- \* This product is not suitable for the children who are 8 years or older, and the people who are disabled, or mentally handicapped or those who have cognitive disorder or lack relevant experience and knowledge unless they use this product under guidance or supervision by someone to ensure them to use safely and to make them aware of the relevant hazards.
- \* Never allow children to play with this product.
- \* When the product is electrified or cooling, Please keep the product and its power cord out of reach of children under the age of 8.
- \* Children who are 8 years or older can clean the product only when they are under supervision.
- \* When using, do not touch the head of the garment steamer and hot surfaces. This product will produce high-temperature steam in the course of use, please do not aim it at people and animals, and do not iron the clothes worn on the body to avoid the risk of scalding.
- \* Be sure to unplug the power plug before installing cleaned product or disassembling the brush accessories or filling the tank with water.

## **Attention**



- \* This product can only be used with grounded electrical outlet.
- \* If the product is hot/connected to the power supply, do not let the steam nozzle contact any surface when placing the product.
- \* Check whether the power cord is damaged regularly.
- \* During the operation of the garment steamer, never let the power cord contact with high temperature steam.
- \* Please do not use this product when the water tank is running out of water.
- \* When you leave the product for only a short amount of time, please turn off the power supply of the product and unplug the power plug.
- \* After ironing, be sure to turn off the power supply of the product and unplug the power plug, and let it cool for 60 minutes before cleaning the product, installing or disassembling accessories, emptying the water tank or storing it.
- \* This product is for house use only. Please do not use this product in the bathroom or outdoor.
- \* Please do not drag this product on the floor.
- \* The steam may damage some walls or doors or cause them to fade.
- \* According to the design, your product is suitable for running water. If the water quality in the area you live in is very hard, the scaling may be very fast. Therefore, it is suggested that distilled water should be filled into the water tank to extend the service life of the product.
- \* Never pour perfume, vinegar, scale remover, ironing agent or other chemicals into the water tank, because these chemicals are not suitable for this product.

## Usage method/installation

### Before the initial use

- Remove any labels or protective covers on the head of the garment steamer, straighten and route the electric wires before using them.
- If it is used for the first time, the garment steamer can be blown off some steam for several minutes. This will remove any impurities and odors that may be left during the manufacturing process.
- To avoid circuit overload, it is recommended not to use the same outlet circuit with other appliances.
- When you open the package of the garment steamer, check all the items and parts list you received to avoid being discarded.

## Installation and use

1. Turn the positioning lock of the water tank at the bottom of the machine to the unlocking position, and remove the water tank downward. Add water of proper amount to the water tank, and install the water tank upwards into the machine, and turn the positioning lock of the water tank at the bottom of the machine to the locking position.
2. Connect the device to the power outlet and power on. Press the power button and the power indicator light is on. The garment steamer starts heating. Preheat for 30 seconds and you can start

using.

3. When the power button is pressed again, the indicator light goes out and the garment steamer is turned off.
4. Do not press the steam switch during the preheating period. After the preheating is completed, press the steam switch to release the steam, and release the steam switch to stop the steam accordingly. The steam can be produced continuously by sliding the steam locking block down to the locking.
5. This product can be directly connected to the pure water bottle instead of the water tank, which is convenient for traveling.

## **Ironing**

Garment steamer is very easy to use, it is suitable for ironing wrinkled / creased clothing, curtains and refreshing decorative fabrics, it can be used on most of fabrics .

Note: Garment steamer is designed for vertical hanging clothes to avoid using garment steamer when the clothes are in a horizontal position.

1. Check whether it is permeable on the back of the cloth so that the steam is not to be gathered on the cloth to wet it.
2. Check the pockets of the clothing to make sure there are no items in the pockets.
3. Check whether there is any object that is easily damaged by steam on the back of the clothing.
4. It is suggested that the garment steamer should not be used around the metal fittings of the clothing. The high-temperature steam will cause the metal accessories to fade.
5. When you press the steam button, you will feel the vibration and hear the subtle buzzing sound. This is normal.
6. While ironing, the steam panels are pasted on the creases of the fabric to move up and down, so that the creases can be ironed.
7. If the sound of the garment steamer becomes louder and there is no steam coming out, it means that there is a shortage of water in the water tank. Please check the water level of the water tank and refill water to the water tank.
8. If the steam button is released, the steam will be stopped.

## **After each use**

1. When you stop using it, press the power switch or pull the power cord out of the outlet.
2. Remove the water tank and empty the remaining water from the water tank.
3. Place it on the flat desktop vertically and wait for the product to cool down.