 
 


6. Place the assembled water dispenser on a stable ground and plug in the adapter to pass electricity.  
 Note: Keep the water level between the Min and Max level. The pump will fail if it runs dry.

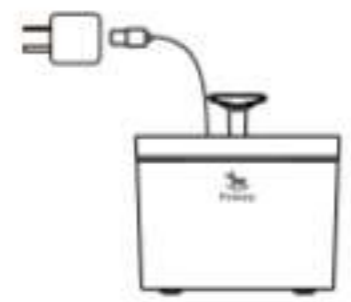


**How to Clean**

 
1. The water dispenser needs to be cleaned once about 3 days in operation, and the filter element should be replaced once about 2 weeks. The parts of the water dispenser are not allowed to be cleaned in the dishwasher. The new filter element needs to be soaked in water for about 5 minutes before it can be used.
2. Cleaning the water pump can prolong the service life of the water pump. It is recommended to clean it once every 1 to 2 months to prevent dirt from blocking the waterway, resulting in unsmooth water flow, poor water quality, noise and other abnormal phenomena. The steps are shown in Figure 1 to Figure 4.

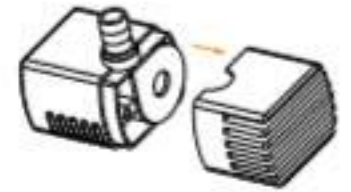


1 Disassemble the water pump filter cover

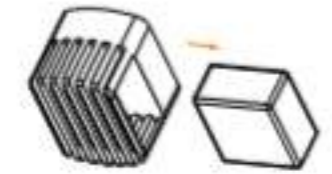

2 Take out the filter sponge

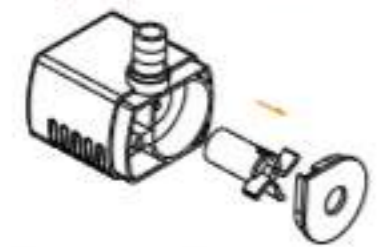 

3 Take out the water pump rotor

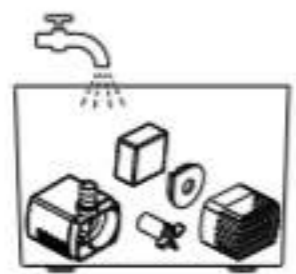 

4 Use the brush to clean the parts with water

**Troubleshooting**

How often should I change the filter? Where to get?	It's recommended to replace the filter every 2 weeks. Please contact us at support@petory.net to purchase filter replacements.
The pump does not pump water or "gurgling", why?	After starting up or cleaning for the first time, please wait a few minutes for the pump to discharge the trapped air. If the pump still cannot pump water; dismantle the pump cover; replace the sponge, and then rinse all debris in the pump with water.
Why does the pump work and then stop now and then?	There's too little water in the tank. Fill in water between MIN and MAX.
Water keeps spilling out of the water tray.	Please soak the filter in a clean bowl (not in the water tank) for 5 minutes before the first use.
How often should I clean the product?	Please clean that every 3-4 days, and use the brush to clean the pump every 1-2 month.
Why do I need to soak the filter before first use?	The filters absorb more water (and therefore clean more water) when they're wet and expanded. Soaking the filter removes particulate matter that may have settled on the filter.
Water output speed slows down	For the first use (or reuse after long-term storage), the water pump needs to discharge air, it's normal if the water output speed slows down.



1-Year Warranty

@PetoryStore

support@petory.net

Petory Official



Made in China