



peoplecounter



#1

## Product Content:

- 1x Receiver with display
- 1x Transmitter
- 1x Magnet key hanger
- 2x Screws for locking the box covers
- 1x Screwdriver
- 1x User guide

## Specifications:

Max counter value:	999999 in both directions
Power:	1.5V Alkaline batteries
Battery life:	Up to 1 year
Max width:	Up to 8 meters
Material:	ABS Black
Dimensions:	116 * 70 * 26 mm

#2

## Placing the batteries:

Place the batteries into the Receiver with display and the Transmitter. Please take note of the battery polarity when placing them.

### Active devices:

The transmitter led will flash red. The receiver will show a 0 count on display.



# COUNT IT

USER GUIDE



*For your safety, please read this manual carefully before use. Improper operation may result in product damage or even personal injury. Please keep this manual properly for future use and maintenance.*

#3

## Mounting the counters

Please take care of the following when mounting the counters :

- The max installation distance is 8 meters .
- Install the counters between 125 and 140 cm .
- Avoid obstacles blocking the sight of the counters.
- Install only on steady surfaces .


### Important information:

Be aware of infrared light from other sources like lights and infrared devices . When the receiver receives infrared from other sources , unexpected behavior could be the result .

Due to strong AM fields of EAS Systems , its recommended to install them at least 1m away from them .

**Note:** the red led on the receiver will light up when noise is detected .

The measurement width of 8m will decrease when the infrared signal goes through glass .

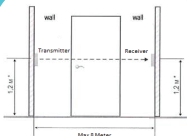

#4

## Check alignment

The receiver contains an alignment feature which helps to point the transmitter to the receiver To enable this mode , slide the magnet on the top side of the receiver . When the led is blinking red you need to point the transmitter to the receiver until the led lights up green continuously.

### Accuracy of the people counter:

The accuracy of the counter will get higher when the distance between the transmitter and receiver decreases , When more persons interrupt the infrared beam at once , the people counter will increase the count value with one.



888888

1454

First direction count

1482

Second direction count

#5

## Start counting

The count value on the display will count from 0 to 999999 for both directions separately . The green status led on the receiver will blink once when a count is created.

### Resetting the count value:

To reset the value on the display to 0 , slide the magnet over de top side of the receiver.

**Note:** The alignment mode in the receiver will also be activated when resetting the display Slide again with the magnet over the top side to disable the alignment mode.

### Determine the direction of the count value:

When a count is made the display will immediately show the new count value of that direction . The arrow above the count value shows the direction of that value.

If you have questions about the People Counter or its installation, email us immediately and we will answer your questions.  
[support@peoplecounteronline.com](mailto:support@peoplecounteronline.com)

Installation Video



SCAN ME