 
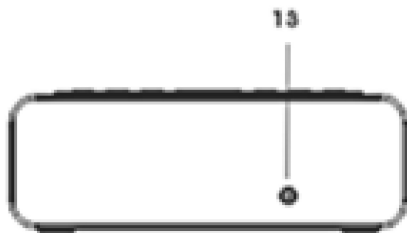 
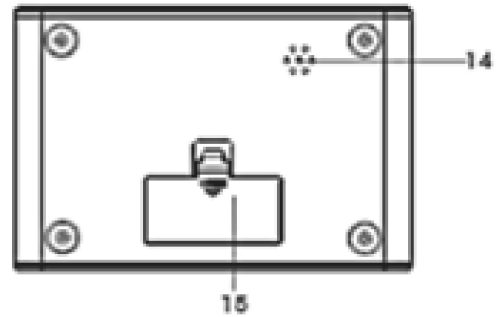 


Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. This product is not a toy. Keep it out of reach of children.
2. Keep product out of the reach of children and pets to avoid chewing and swallowing.
3. Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
4. Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
5. Do not expose to heat, water, moisture, direct sunlight!
6. Please protect your ears against loud volume. Loud volume can damage your ears and risk in hearing loss.
7. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
8. Only use with supplied Adaptor. The direct plug-in adapter is used as disconnect device, the disconnect device shall remain readily operable. So, make sure there is space around the power outlet for easy access.
9. Do not use non original accessories together with the product as this can make the product functionality abnormal.
10. Never use old and new batteries or different types of batteries together. Remove the batteries when you are not using the system for a longer period of time. Check the polarity (+/-) of the batteries when inserting them in the product. Wrong positioning can cause an explosion. Batteries are not included.

LOCATION OF CONTROLS

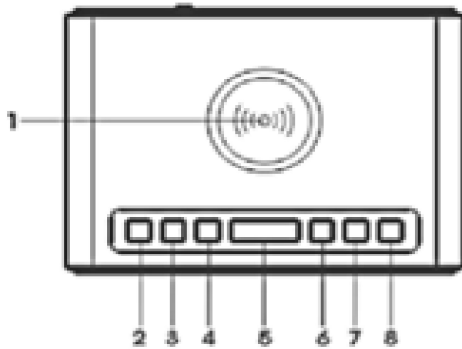

1. Wireless charging pad
2. TIME
3. HOUR
4. MINUTE (MIN)
5. DIMMER/SNOOZE
6. ALARM 1 (AL 1)
7. ALARM 2 (AL 2)
8. ALARM OFF (AL OFF)

9. PM indicator
10. Alarm 1 indicator
11. Alarm 2 indicator
12. Wireless charging indicator
13. DC IN
14. BUZZER
15. Battery compartment

Unit Power Supply

This unit is designed to operate with AC/DC adaptor.

Operation with AC/DC adaptor

Insert the small plug of adaptor into the DC jack.

Insert the AC/DC adaptor into any convenient household outlet having AC 100-240V 50/60Hz.

The display will be illuminated, indicating that it is powered on.

BACKUP SYSTEM

1. The unit is equipped with a backup system. It requires 2 'AAA' size batteries. Insert the batteries into the battery compartment and make sure the positive and negative (+ or -) ends of the batteries are in contact with the corresponding terminals in the battery compartment.
2. In the event of power failure or disconnection of the power cord, the power supply is automatically switched to the backup battery, keeping the time and alarm settings.
3. To open the battery compartment, press the battery cover from the side and pull it.
4. When replacing the battery, do not disconnect the power adaptor. Otherwise, all clock and alarm settings will be lost.

SETTING TIME

1. Press and hold the TIME button for 2 seconds to enter the clock setting mode.
2. Press the HOUR or MIN button to select 12H or 24H hour format. Press the TIME button to confirm.
3. Press the HOUR button to set the hour and MIN button to set the minute. Press the TIME button to confirm.

SETTING THE ALARM 1

1. Press and hold the AL 1 button for 2 seconds to enter the alarm 1 time setting mode.
2. Press HOUR to set the hour and MIN button to set the minute. Then press the AL 1 button to confirm.
3. Press HOUR or MIN button to select h or n. (Note: h-----buzzer volume is high, n-----buzzer volume is low.)
4. Press the AL 1 button to confirm.
5. Press the AL 1 button to turn on the alarm 1 function till the alarm 1 indicator appears on LED display.

Note:

SETTING THE ALARM 2

1. Press and hold the AL 2 button for 2 seconds to enter the alarm 2 time setting mode.
2. Press HOUR to set the hour and MIN button to set the minute. Then press the AL 2 button to confirm.
3. Press HOUR or MIN button to select h or n. (Note: h-----buzzer volume is high, n-----buzzer volume is low.)
4. Press the AL 2 button to confirm.
5. Press the AL 2 button to turn on the alarm 2 function till the alarm 2 indicator appears on LED display.

Note: The buzzer is located at the bottom of the unit, make sure that nothing will cover the buzzer while using the alarm function.

TURNING THE ALARMS ON OR OFF

When the display shows clock time, press AL 1 or AL 2 button to enable or disable the respective alarm. The corresponding Alarm 1 or Alarm 2 indicator will be on when the alarm is enabled.

SNOOZE

1. When the alarm goes off, the corresponding Alarm 1 or Alarm 2 indicator will flash on the display.
2. Press the DIMMER/SNOOZE button to temporarily deactivate it. The snooze function will delay your alarm for 9 minutes. After 9 minutes, the alarm sounds again.
3. The corresponding Alarm 1 or Alarm 2 indicator will flash on the display during the snooze period.
4. To cancel the snooze and the alarm, press AL OFF button.

TO STOP THE ALARM WHEN ALARM GOES OFF

1. Press AL OFF button to stop the alarm.
2. Alarm indicator will still stay on and the alarm will go off the next day at a preset time.

TO DISABLE THE ALARM

1. Press AL 1 button repeatedly to disable Alarm 1 while the alarm is not going off. Press AL 2 button repeatedly to disable Alarm 2 while the alarm is not going off.
2. Corresponding alarm indicator will be off and the alarm will not go off until you enable it again.

DISPLAY DIMMER

1. Press the DIMMER/SNOOZE button to change the brightness level of the display: 100% > 75% > 50% > 25% > Off.
2. Default setting of the brightness level is "100%".

QI WIRELESS CHARGING

1. Place your Qi enabled smartphone on the center of the wireless charging pad.
2. Please check if your phone screen shows charging status.
If your phone is not charging:
 - Check if your device supports Qi wireless charging
 - Place mobile device in the center
 - Remove the phone case which contains magnet/metal material or is thicker than 0.12" (3mm)
3. Charges through most cases of PC or TPU material up to 0.12" (3mm) thick.

4. Compatible devices (Qi Wireless Charging Pad)


iPhone 13/13Pro, iPhone 12/12Pro, iPhone 11/11Pro, iPhone X, iPhone 8/8 Plus, Samsung Galaxy Note 8/5, Galaxy S9/S9+/S8/S8+, S7/S7 Edge, S6 Edge+, S6/S6 Edge, LG V30, Nexus 7/6/5, other Qi-enabled smartphones/tablets and accessories.

Note: The Wireless charging indicator will be on while the unit is charging.

Manufacturer's name or trade mark, commercial registration number and address	DongGuan Obelieve Electronic Co.,Ltd 91441900050747698U Huazhaoxin Industrial Park B-4/F, Golden Phoenix Industrial Zone, FengGan Town, DongGuan, GuangDong Province,P.R.C.
Model identifier	OBL-501800B/OBL0501800E
Input voltage	100-240V
Input AC frequency	50/60HZ
Output voltage	5.0V
Output current	1.8A
Output power	9W
Average active efficiency	81.01%
Efficiency at low load (10%)	74.25%
No-load power consumption	0.074W

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

 ALL RIGHTS, COPYRIGHT DENVER A/S

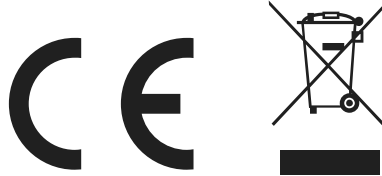

Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type ECQ-106 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: ECQ-106. Now enter product page, and RED directive is found under downloads/other downloads.

Max Output Power: 9W

Denver A/S
Omega 5A, Soefte
DK-8382 Hinnerup
Denmark
www.facebook.com/denver.eu

Contact

Nordics

Headquarter
Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

Phone +45 86 22 51 00
(Push "2" for support)

E-Mail

For technical questions, please write to:
support.hq@denver.eu

For all other questions please write to:
contact.hq@denver.eu

Germany

Denver Germany GmbH Service
Gutenbergstrasse 1
94036 Passau

Phone: +49 851 379 369 40

E-Mail support.de@denver.eu

Fairfixx GmbH
Repair and service
Rudolf-Diesel-Str. 3 TOR 2
53859 Niederkassel

(for TV, E-Mobility/Hoverboards/
Balanceboards, Smartphones & Tablets)

Phone: +49 851 379 369 69

E-Mail: denver@fairfixx.de

Austria

Lurf Premium Service GmbH
Deutschstrasse 1
1230 Wien

Phone +43 1 904 3085

E-Mail denver@lurfservice.at

Benelux/France

Denver Benelux BV
Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone +31 348 420 029

E-Mail support-nl@denver.eu

Spain

Denver Spain S.A.
C/ Moscú, 1 Pol.Ind.Mas de Tous
46185 La Pobla de Vallbona
Valencia (Spain)

Phone +34 960 046 883

Mail serviciotecnico.denver@denver.eu

Portugal

Phone +35 1255 240 294
E-Mail denver.service@satfiel.com

If your country is not listed above,
please write an email to

support@denver.eu



Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark
denver.eu
facebook.com/denver.eu