



M-995 CVB Twin Car DVD Player User Manual




Please read the instruction carefully before operating the unit.

English

* Never use an AC adaptor that is damaged, route power lead in a safe manner and make sure it is not subjected to trapping or pinching. If the power lead is damaged refer to a qualified service agent.

Using car plug

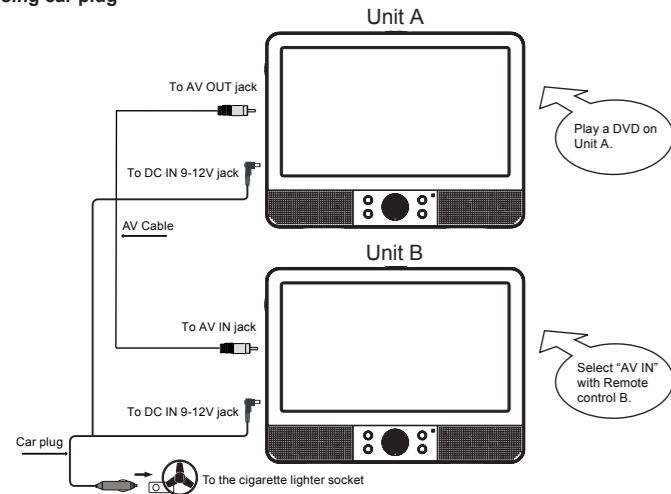

WARNING: Disconnect this car power adaptor when not in use. Not for use in 24V vehicles.


Cautions

- Use only the included 12V car power adaptor. Use of any other 12V car power adaptor could damage the unit.
- The 12V car power adaptor included is for use with this unit only. Do not use it with any other equipment.
- In the interest of traffic safety, drivers should not operate the unit or view videos while driving.
- Make sure the unit is fastened correctly to prevent from falling in the vehicle in the event of an accident.
- When the inside of the cigarette lighter socket is dirty with ashes or dust, the plug section may become hot due to poor contact. Be sure to clean the cigarette lighter socket before use.
- After use, disconnect the car power adaptor from both the unit and cigarette lighter socket.

GB - 6

LOCATION OF CONTROLS

UNIT A & B

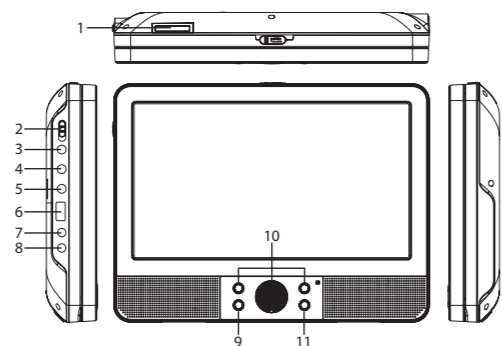


UNIT A & B

- SD/ MMC
- POWER ON/OFF
- EARPHONE OUT JACKS
- VIDEO/AUDIO OUT
- VIDEO/AUDIO IN
- USB
- DC OUT
- DC IN 9-12V
- ENTER
- ▲, ▼, ◀, ▶/Vol+/Vol-
- SOURCE

REMOTE CONTROL A & B

- SOURCE:** To select between DVD, AV IN or MEDIA (USB/CARD) mode.
- MUTE:** To mute or restore sound.
- 0,1,2,...9,10:** number entry.
- DISPLAY:** To show status information on the screen.
- MENU/PBC:** Return to DVD root menu (DVD). To turn PBC mode on/off for VCD.
- AUDIO:** To change the AUDIO setting.
- ▶|| PLAY/PAUSE:** To start and pause the playback.
- STOP:** MP3/Jpeg/DivX files: press once to stop playback. DVD/VCD/CD: press once to pre-stop (resume with ▶|| button), press again to stop playback.
- MODE:** To access LCD setting mode.
- VOL+:**
- FORWARD SKIP ▶▶:** Go to next chapter/track.
- REVERSE SKIP ◀◀:** Go to previous chapter/track to the beginning.
- ▶▶ BUTTON:** Press ▶▶ button allow skipping ahead at 5-level speed(X2-> X4->X8->X16->X32->PLAY), press ENTER button return to normal playback.
- ◀◀ BUTTON:** Press ◀◀ BUTTON allow skipping back at 5-level speed (X2-> X4->X8->X16->X32->PLAY), press PLAY button return to normal playback.
- STEP:** To play frame by frame
- SEARCH:** to search for a desired title, chapter, time.
- SUBTITLE:** To change the subtitle setting.
- ANGLE:** To access the camera angle function for DVD disc.
- TITLE:** To change the disc TITLE menu.
- Cursor (▲, ▼, ◀, ▶):** buttons Press to highlight selections on a menu screen and adjust certain settings.
- ENTER** button Press to confirm selections on a menu screen.
- SETUP:** To enter and exit the setup menu.
- VOL-**
- REPEAT:** To repeat playback.
- SLOW:** Press SLOW button repeatedly to enter slow playback, and cycle between different speeds. The speeds are 1/2, 1/4, 1/8, 1/16, and normal.
- PROGRAM:** To program playback sequences.
- ZOOM:** To access the zoom function.


Note: " ◯ " will be displayed if the function you select is not available.

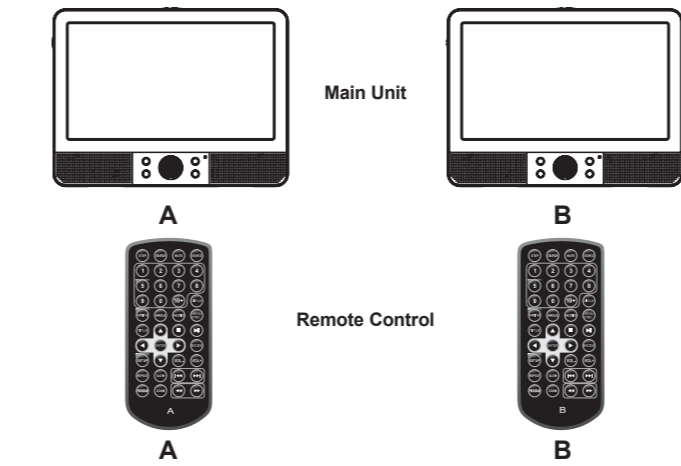

Notes:


- There are 2 different remote controls.
- Remote control A can only be used to operate Unit A.
- Remote control B can only be used to operate Unit B.
- Please refer to the or marking on unit and remote control.

The remote control operates on 1pc "CR2025" lithium battery (included). To power up the remote control, remove the insulation tab from the back of unit.

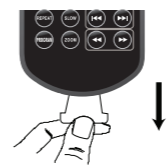

INSTALLING BATTERY

 - Push the button toward right.
- Pull the battery loader out.
- Insert one "CR2025" size battery with the positive side (+) facing up.
- Replace the cover.



GB - 3

USING HEADPHONES / EARPHONES

Maximum output voltage ≤150mV.

HEADPHONE VOLUME WARNING

Connect earphones with the volume set low and increase it if required. Prolonged listening through some earphones at high volume settings can result in hearing damage. When headphones/earphones are connected, no sound will be emitted from the unit's speaker. Caution: Avoid listening to sound at levels which may be harmful to your ears.



Continuous use of earphones at high volume can damage the user's hearing.

DISC PLAYBACK

Region Management Information

Region Management Information: This unit is designed and manufactured to respond to the Region Management Information that is encoded on DVD discs. If the Region number printed on the DVD disc does not correspond to the Region number of this unit, this unit cannot play that disc. The region number of this unit is 2.

Basic Playback

- Slide ON/OFF switch to turn ON the unit. The power ON indicator will go on.
- Slide OPEN lock according to the arrow and hold the front panel to open the disc door.
- Insert a disc with label face up.
- Close the disc door. It takes a short while for your unit to load the disc. After loading, the unit will automatically bring you to the main menu of the DVD or start playing the DVD. If the unit does not automatically start playing the DVD, press the ▶||.

Accelerated play

While the disc is playing, press ◀◀ or ▶▶ one or more times to vary the speed and direction of the accelerated play. Press ▶|| to resume normal playback.

Frame advance (DVD)

- While the disc is playing, press STEP once.
- Press STEP a number of times to advance forward image by image
- Press ▶|| to resume normal playback.

Changing chapter/track

While the disc is playing, press ◀◀ or ▶▶ to go immediately to the next or previous chapter(DVD), or to the next or previous track(CD).

Zoom (DVD, JPEG)

While a disc is playing, press ZOOM until you reach the zoom size you want. The button cycles through 2x, 3x, 4x and then zooms out to 1/2x, 1/3x and 1/4x, then returns to normal playback.

Note: Under Zoom function for JPEG file, press ZOOM button to go to Zoom 100% mode, then Press ◀◀ or ▶▶ button a number of times to vary the Zoom steps which you want.

ADVANCED FUNCTIONS

On screen display


Press the DISPLAY button a number of times during playback to show in turn: DVD: Title elapsed time, Title remaining time, Chapter elapsed time, Chapter remaining time, Display off. CD: Single elapsed time, Single remaining time, Total elapsed time, Total Remaining time.

Search a desired section

The user can access a specific location or a specific track by keying in the target time or the track number.


- Press SEARCH button repeatedly to enter different search mode.

DVD:

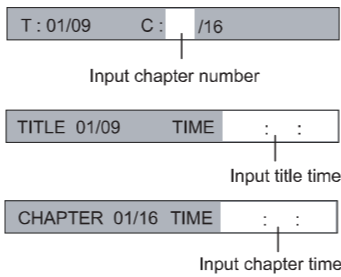

- Input the chapter number or playback time, then it will jump to the target location immediately.

CD:

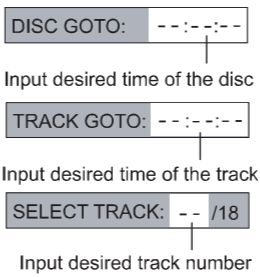

- Input the chapter number or playback time, then it will jump to the target location immediately.

NOTES:

- Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling.
- In order to avoid leakage, always remove the batteries when unit will not be used for a long period of time.
- If the remote control is not going to be used for a long time, remove the battery to avoid damage caused by battery leakage corrosion.
- CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive).

ACCESSORIES


- Remote Control(with battery) x 2
- Car power adaptor x 1
- AC adaptor x 2
- AV cable x 1
- Earphones x 2
- Car headrest mounting bracket x 2

POWER SUPPLY

Using the AC adaptor

The supplied AC adaptors are suitable for use on AC mains supplies of 100-240V-50/60Hz and should only be connected to a mains supply within these parameters.

Using Unit A or Unit B

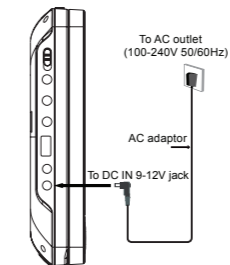

GB - 4

PLAY MODES


Repeat playback

While the disc is playing, press the REPEAT button repeatedly to select a play mode: DVD: Repeat Chapter, Repeat Title, Repeat All, (Repeat Off); CD: Repeat Track, Repeat All, Repeat Off; MP3: Single, Repeat one, Repeat Folder, Folder, Shuffle, Random Note: "SINGLE": The selected track will play once and then stop playback. "REPEAT ONE": The selected track will play continuously. "REPEAT FOLDER": All tracks in the selected folder will play continuously. "FOLDER": All tracks in the selected folder will play once and then stop playback. "SHUFFLE": Randomly play once and then stop playback. "RANDOM": Random play continuously. Note: Some DVD discs do not allow repeat function.

Program playback

With this option, you choose and program the playback order. You can store up to 20 tracks.

DVD

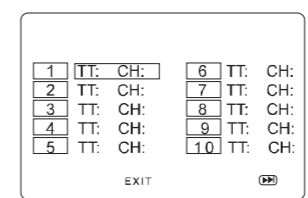


- Use the number buttons to enter the title number and then the chapter number (DVD) or the track number (CD).
- Use ▲, ▼, ◀, ▶ button moving to the next input. Repeat step 3 until programming is completed.
- press ▶|| to go to next page for programming track 11 to 20.
- Highlight the "PLAY" icon, press ENTER button to start the program play.
- Press ◀ to return to a previous menu.
- Press SETUP to exit from the setup menu.

Note: Press ▶|| to go to next page for programming track 11 to 20. Note: Press ◀ to return to a previous menu. Note: Press SETUP to exit from the setup menu.

GB - 10

Using Unit A and Unit B together

You can watch the same DVD on the two units.

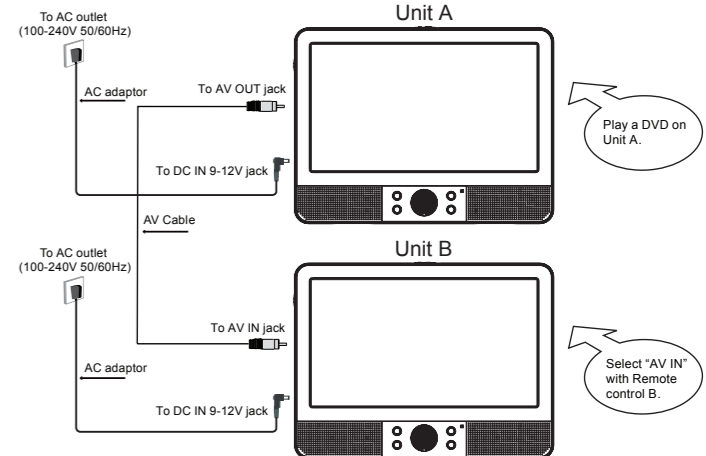

Watching on the two units together

- Connect Unit A and Unit B using the supplied AV cable.
 - Turn on the two units.
 - Press SOURCE button on Remote control B or front panel, then select and confirm "AV IN" mode for Unit B, while Unit A was a DVD player.
 - Play a DVD on Unit A; Unit B will play at the same time.
- Note: If you want to watch on Unit A or Unit B independently, disconnect the AV cable between the two units. You may need to select "DVD" or "MEDIA" mode for Unit B by pressing SOURCE button on Remote control B or front panel in order to play normally.

Cautions:

- The AC adaptor included with this unit is for its use only. Do not use it with other equipment.
- Turn off the unit before unplugging the AC adaptor from the unit so as to avoid the unit being damaged.
- When the unit is not going to be used for long time, disconnect the AC adaptor from the AC outlet.
- Be sure to use it near the wall outlet and easily accessible. If a malfunction occurs, disconnect the plug from the wall outlet at once.
- AC adaptor is used as the disconnect device. It shall remain readily operable and should not be obstructed during intended use. To be completely disconnected the apparatus from supply mains, the AC adaptor of the apparatus shall be disconnected from the mains socket outlet completely.

GB - 5

USB OR SD/MMC CARD PLAYBACK

You can connect a USB flash drive (not included) to the USB connector port or a SD/MMC card (not included) to the memory expansion card slot on the unit to play DivX/movies as well as sound & picture files.

- Plug the USB flash drive into the USB port on the unit. Plug the SD card into the memory expansion card slot.
 - Press SOURCE button, then press ▼ to select "Media". Press ▲, ▼, ▶ to select "USB" or "SD" (When "MMC" or "SD" card is inserted, it displays "MMC" or "SD" instead.), then press ENTER to confirm.
- For operation of playing files on the USB flash drive or SD/MMC card, please refer to the section "PLAYING MP3/DIVX/PICTURE FILES"
- Note:
- It is recommended USB flash drive or the SD/MMC card is plugged when the unit is in OFF mode.
 - There are many USB devices in the market. We cannot guarantee to support all different models. Please try another USB device if your device is not supported.
 - Some SD/MMC card may be incompatible.

PLAYING MP3/DIVX/PICTURE FILES

This unit can play MP3, DivX and Picture files recorded on CD-R/CD-RW/ DVD+ R/ DVD+RW discs, USB flash drive and SD/MMC card.

- Insert a disc.
- The content of disc will be displayed on screen.
- Press ▲, ▼, ◀, ▶ button to view and select the file that you want to play, then press ENTER button to confirm the selected file and start playback.
- Press ■ button to stop playback.


SETUP MENU

Navigating the setup menu

- Press SETUP to display the setup main menu.
- Press ◀, ▶ to select a menu icon.
- Press ▲, ▼ to select one of the available options under a menu icon.
- Press ▶ to access the submenu and ▲, ▼ to select an option.
- Press ENTER to confirm your selection.
- Press ◀ to return to a previous menu.
- Press SETUP to exit from the setup menu.

GB - 11

General Setup Page

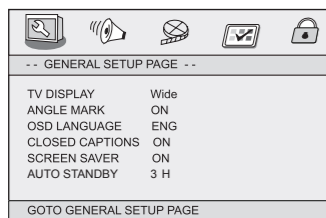

* **TV DISPLAY:** selects the aspect ratio of the playback picture.

4:3 PANSKAN:

- When wide-screen video is played, this mode clips the right and left sides of the image so that it can be viewed on a conventional screen.
- Some wide-screen DVDs that do not permit Pan Scan mode playback are automatically played in letterbox mode (black bands top and bottom).

4:3 LETTERBOX:

- When wide-screen video is played in this mode on a conventional screen, black bands appear at the top and bottom of the screen.

16:9: wide screen display.

- This is the correct mode for playing wide-screen videos on a wide-screen TV.

WIDE SQUEEZE

The wide-screen image will be displayed in full screen in its native aspect ratio and so does the 4:3 image but with black borders on the left and the right side.

Notes:

- The visible picture size is preset on the DVD disc. Therefore the playback picture of some DVD discs may not conform to the picture size you select.
- When you play DVD discs recorded in the 4:3 aspect ratio, the playback picture will always appear in the 4:3 aspect ratio regardless of the TV shape setting in the function setup menu.

* ANGLE MARK

ON: To show angle mark when a disc with multiple camera angles is playing. You can view different camera angles of a DVD disc by pressing ANGLE button on remote control.

OFF: To hide angle mark.

NOTE: This function is only available for discs encoded with multiple camera angles.

* OSD LANGUAGE

To select the language of unit's menus.

* CLOSED CAPTIONS

Some discs have closed captions.

ON: Show the closed captions.

OFF: Hide the closed captions.

* SCREEN SAVER

To set screen saver ON or OFF.

* AUTO STANDBY(Automatic turn off)


This function allows you to select the standby setting:

OFF: The unit will not switch to standby mode.

3 H: If no button is pressed within 3 hours, the unit will switch to standby mode automatically.

4 H: If no button is pressed within 4 hours, the unit will switch to standby mode automatically.

Analog Audio Setup Page

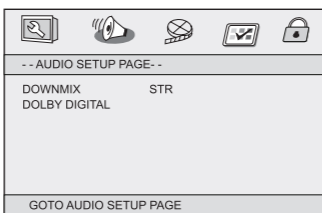

* DOWNMIX

LT/RT: left and right soundtrack audio output.

STEREO: Stereo audio signal output

* DOLBY DIGITAL

DUAL MONO


To select STEREO, L-MONO (left mono), R-MONO (right mono) and MIX- MONO for Dolby Digital output.

DYNAMIC

- To control the different sound levels via dynamic compression. It improves the quality of the sound track at a low volume, and quiets the loudest sounds.

- This function is available only on DVD discs recorded in Dolby Digital.

Video Setup Page

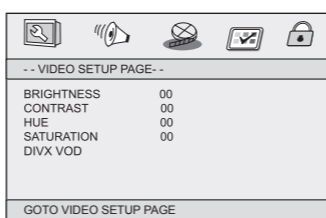

* **BRIGHTNESS:** To adjust the video brightness level on a scale of -16 to +16.

* **CONTRAST:** To adjust the video contrast level on a scale of -16 to +16.

* **HUE:** To adjust the color hue level on a scale of -9 to +9.

* **SATURATION:** To adjust the color saturation level on a scale of -9 to +9.


* DIVX VOD

Some DivX Video-On-Demand files required registration code, please get the code of your DVD player.

Registration code is for DivX Video-On-Demand only, do not apply this code for another applications or websites.

Preference page

Noted: The preferences Setup menu is only available at stop mode.

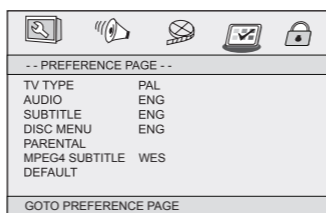

* TV TYPE

- To select your TV system among PAL, AUTO or NTSC.

* AUDIO

- To select the dialog language.
- If the selected language is not available on the disc, the disc's language will be used instead.
- To change the dialog language during playback, press **AUDIO** on the remote control.

* SUBTITLE

- To select the language of the DVD subtitles. Select "OFF" to turn off the subtitles.
- If the selected language is not available on the disc, the disc's language will be used instead.
- To change the subtitle language during playback, press **SUBTITLE** on the remote control.

* DISC MENU (menu language)

- To select the language of the DVD menus.
- If the selected language is not available on the disc, the disc's language will be used instead.

* PARENTAL

Some DVD discs are equipped with a password function and are rated according to their content. The contents allowed by parental lock level and the way a DVD disc is controlled may vary from disc to disc. For example, if the disc allows, you could lock-out violent scenes unsuitable for children or you could lock out playback of the disc altogether. You cannot play DVD discs rated higher than the level you selected unless you cancel the parental lock function.

The parental lock levels are equivalent to the following ratings.

Level 1 : Kid Safe

Level 2 : G

Level 3 : PG

Level 4 : PG-13

Level 5 : PG-R

Level 6 : R

Level 7 : NC17

Level 8 : Adult


* MPEG4 SUBTITLE

If your MPEG4(DivX) video file includes subtitle file, use this to select your preferred subtitle language.

* DEFAULT

Pressing **ENTER** with this function selected resets all settings to their initial factory state, except for parental level and password.

Password Setup Page

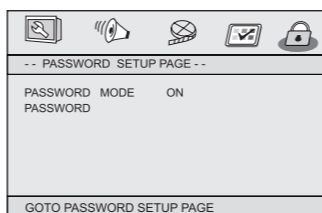

* PASSWORD MODE

To turn the password mode ON/OFF.

* PASSWORD

This option allows you to set or change the password.

Use **▼**, **▲** button to select "PASSWORD", press **►** button to highlight "CHANGE", then press the **ENTER** button. Press the number buttons to input your 4-digit password until to "OK" (if the password has not been set yet after you purchase this unit, it is "1369").

SAFETY INSTRUCTION



ATTENTION: To reduce the risk of electric shock, do not remove the cover or back. There are no user serviceable parts inside the unit. Refer all servicing to qualified personnel.



The lightning flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.



The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: Invisible laser radiation when open and interlocks defeated. Avoid exposure to beam.

Class 1 laser product.



CLASS 1 LASER PRODUCT
APPAREIL À LASER DE CLASSE 1
PRODUCTO LASER DE CLASSE 1
PRODUTO LASER CLASSE 1

GB - 12

GB - 13

GB - 14

GB - 15

GB - 16

GB - 17

- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- The use of apparatus in moderate climates.
- The apparatus should not be exposed to dripping or splashing.
- Ensure a minimum distance of 5cm around the apparatus for sufficient ventilation.
- Do not place objects filled with liquids, such as vases, on the apparatus.
- The marking plate is located on the back of unit.
- Attention should be drawn to the environmental aspects of battery disposal.
- Do not throw batteries in fire!
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Excessive sound pressure from earphones and headphones can cause hearing loss.
- Under the influence of electrical fast transient or/and electrostatic phenomenon, the product may malfunction and require user to power reset.

MAINTENANCE

Cleaning

Be sure to turn the unit off and disconnect the car power adaptor before maintaining the unit.

- Use a soft, dry, clean cloth. Regularly dust the vents at the back or sides.

- Using solvents, abrasive or alcohol-based products risks damaging the appliance.

- If an object or liquid enters inside the appliance, unplug it immediately and have it checked by an authorized engineer.

Note on disc

* Do not use irregular shape CDs (example: heart-shaped, octagonal ones). It may result in malfunctions.

* Do not place more than one disc in the disc compartment.

* Do not try to open the disc compartment during playing.

* Do not touch the lens. Doing so may cause malfunction.

* If there is a scratch, dirt or fingerprints on the disc, it may cause tracking error.


Before playing, clean the disc with a cleaning cloth. Wipe the disc from the center out. Don't store discs in places with high temperatures or high humidity, they can become warped. After playing, store the disc in its case.

Important Note

- Before transporting the unit, remove the disc from the disc compartment.

PLACEMENT


Mounting bracket

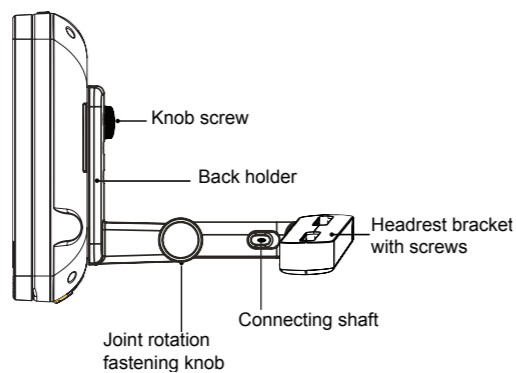


Mounting in the Vehicle

Use the supplied car mounting brackets to install the main unit and monitor on the back of the vehicle's headrests.

1. Remove the 4 screws on the headrest bracket. Fix the headrest bracket into the steel pipes of the vehicle's headrest using these screws.

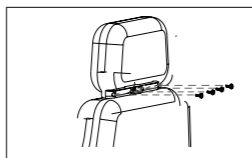

2. Fix the back holder and connecting shaft through the joint rotation fastening knob.

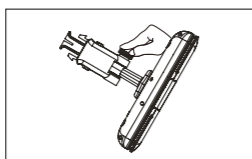

GB - 18

GB - 19


GB - 20

GB - 21


GB - 22

GB - 23

3. Combine the holder into the headrest bracket.

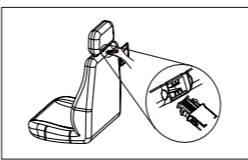

4. Fix the main unit or monitor to the back holder using the knob screws.

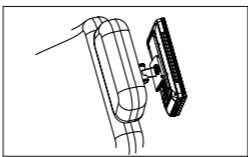

Caution!


- Make sure the screws are properly locked to avoid accidental loosening.

- Always remember to lock the holder to ensure the safety of your passengers.

- Do not install when car travels.

5. Connect the 12V car plug as shown.

CAUTION: Using other car plugs could damage the unit.

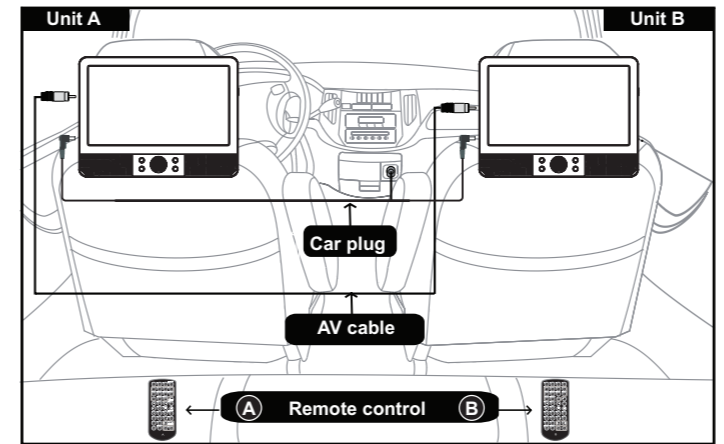

SAFETY WARNING!

• On no account should this unit be used by the driver of a moving motor vehicle, or left unsecured in the vehicle whilst driving.

• If this unit is being used by a passenger in your vehicle, be sure that it is secured or held safely, and does not obstruct any safety device (i.e. airbag, seat belt etc.) that is fitted.

• All passengers should wear seat belts when using this unit in a moving vehicle.

• If in doubt, please contact your vehicle manufacturer for further advice.

• Using other car power adaptors could damage the unit.

TROUBLE SHOOTING

No power.

- Ensure the car power adaptor is connected.
- Make sure that the unit is turned on.

The remote control does not function.

- Make sure the infrared remote sensor is not blocked.
- Point the remote directly at the infrared remote sensor on the unit.
- Replace the battery in the remote with a new one.

Very little or no sound is coming from a DVD.

- Make sure that the unit is turned ON.
- Make sure the unit is not paused. Press **►||**.
- Make sure the unit is not in fast-forward or fast-reverse mode. Press **►||**.
- Make sure that the connections are correct.
- * Make sure the MUTE function is not on.

The player does not start playback

- Insert the disc with the printed side facing you.
- Check that the disc can actually be played by this device.
- Check that the disc's regional code matches the player's regional code. This player's regional code is 2.
- Clean the disc.

The picture is not clear.

- The DVD is dirty. Gently clean the disc.
- The disc is scratched.
- Please adjust the LCD's brightness and contrast in LCD mode.

Forget Password

If you forget your own password, enter "1369" to reset.

Specifications and appearance are subject to change without notice.

NEW ONE S.A.S
10, Rue de la Mission, 25480 Ecole Valentin, France

