

User Guide

Lighting model

FN+*↑/↓*key, level 6 brightness adjustment;

FN+*←/→*key, 5 level fast slow adjust

	Model 1	Model 2	Model 3	Model 4
FN+INS	Normal Light	Sparkle	Breathing	Extinguish
FN+Home	Sparkle	Explosive	Non-trace	Ripples
FN+PgUp	Blow	Marquee	rotazione	Snake
FN+Delete	Water Floating	Water Drop	Overflow	Colorful
FN+PgDn	Flashing	Flowing	Sideling Change	Light Waves

Custom mode key recording storage

FN + END = record key / store key

FN + 9 or FN + 0 to enter the corresponding custom mode

and press FN + end to enter the custom slipping recording state.

Press any key that needs to be on or off to the specified state. After setting, press FN + end to store.

FN + ESC to clear the light recording and restore the normaly on mode.

Game Model

Fn+1=game mode1:(FPS)ASDW↑↓←→ESC

Fn+2=game mode2:(CF) - ASDW Ctrl Shift Alt Space RGQEB 1-5

Tab F1-F3 Home End PgUp PgDn PrtSc Scroll lock

Fn+3=game mode3:(COD)QWERTASDFGCV 1-7 Ctrl Shift

Fn+4=game mode4:(RTS)QWERTASDGXZFKLHMNUYTP Space

1-0 Ctrl Shift Alt

Fn+5=game mode5:(LOL)QWER DGFBV Ctrl Alt Tab Space - 1-6 Esc

Fn+6=game mode6:(Car Race)ASDWR ↑↓←→ Ctrl Shift Alt

Fn+7=game mode7:(NBA)AFSWRE Ctrl Shift Alt Space ↑↓←→ ZXCV 1234

Fn+8=game mode8:(LOL-2)QWERDFB 1-6

Fn+9=Custom mode1:self design

Fn+0=Custom mode2:self design

Specifications

20 Running lighting modes

Dual injection keycap

Metal Surface

N-key rollover

Customized lighting mode

Support:Win7/8/10

Product size:425*120*30mm

Multimedia keys function

FN+F1=Computer

FN+F2=Search

FN+F3=Calculator

FN+F4=CD

FN+F5=Prev Track

FN+F6=Next Track

FN+F7=Play/Pause

FN+F8=CD Stop

FN+F9=Mute

FN+F10=Volume-

FN+F11=Volume+

FN+WIN=win lock and app



User's manual

K80 MECHANICAL
MIXED COLOR LIGHT EFFECT