


Phomo - digital retro camera

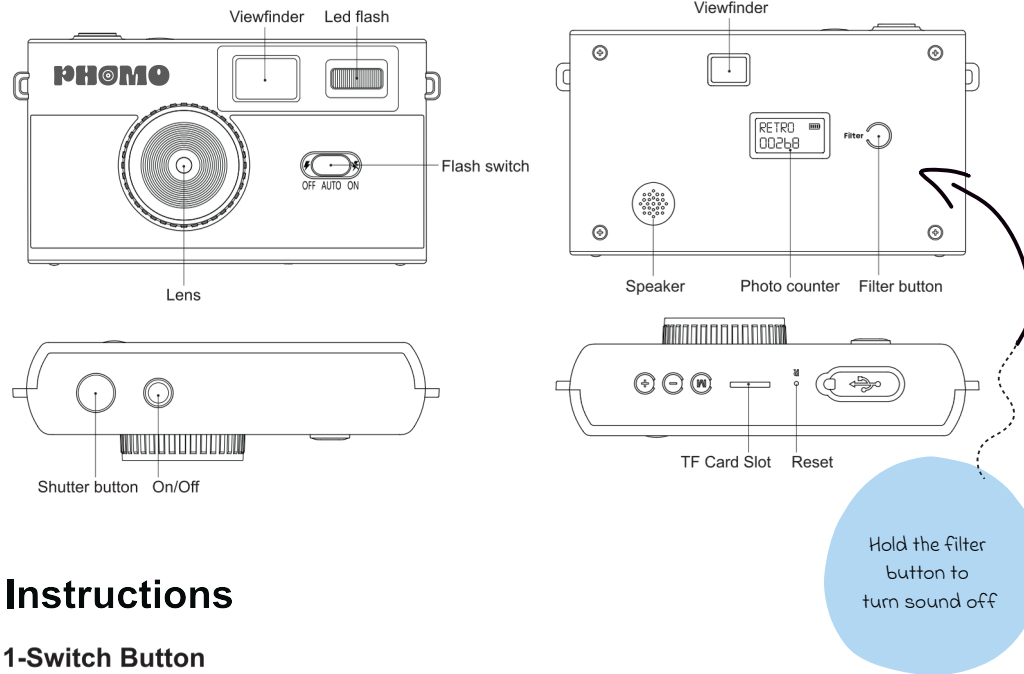

Instructions

1-Switch Button

- Press and hold the switch button for approximately 2 seconds to power on the camera. You will hear two beeps. When the photo counter displays a number, you are ready to take photos.
- To power off the camera, press and hold the switch button for approximately 2 seconds. You will hear a single beep, and the photo counter will turn off.

2-Flash Selector Switch

Left is off, center is automatic, right is on. Use the flash in low light settings.

3-Automatic Shutdown

The camera will automatically shut down after being idle for 10 minutes to conserve battery.

4-Charging The Camera

- To charge the camera attach the USB-C cable to the camera and connect to a charging block or a computers USB port.
- The light will turn red when the camera is charging.
- When charging is complete, the light will turn green.

5-Taking a Photo

- If the camera is off (photo counter is not displayed), power on the camera as described in step 1a.
- Hold the camera still and tap the shutter button. Keep the camera steady until you hear the shutter sound.
- For best results, stand at least 3 feet away from your subject and capture photos in good lighting conditions with the sun behind you.
- Use the flash when taking photos in low light or indoors.

6-Photo View / Download

- Use the data cable to connect the camera to a computer.
- Power on the camera.
- Open the file manager/finder on your computer and navigate to the Phomo folder
- Copy or view the files as desired.
- Once the photos have been copied over, you can delete all the files from the camera.

Photo view / download via phone (only possible with a phone that has a USB-C port):

- Connect your camera to your phone using the USB-C cable.
- Open 'Photos' and navigate to XR CAMERA \ PHOMO.
- Select the desired photos and download them to your phone.

Photo view / download via adapter:

- Remove the micro SD card from the camera.
- Insert the micro SD card into the provided full-size SD card.
- Insert the SD card into the adapter.
- Insert the adapter into your phone.
- Open 'Photos' and navigate to XR CAMERA \ PHOMO.
- Select the desired photos and download them to your phone.

7-Photo Storage Card

- Your camera comes with a pre-installed 8 GB card capable of holding approximately 2000 photos.
- To remove the TF card, Push the TF card in, and it will pop out.
- To insert the TF card, carefully insert the card into the slot with the gold contacts facing towards the counting screen. It will click into place.

8-Set metadata date on photos

- Press and hold the "M" button at the bottom of your camera, adjust the year accordingly with the "+" and "-" button then press the M button again to save
- Repeat the same steps above for both month and date
- When the photo counter shows the number of photos taken, the date is saved.

9-Filter selection

- Click the filter button on the right side of the screen to switch filters.
- Every time the button is Clicked, the camera will switch to the next filter.
Available filters: Retro, Standard, Analog, B&W.

NOTE:

**The camera is an electronic product and is not waterproof.
Do not expose the camera to liquids, keep dry.**

PHOMO