



# UG-06

USER MANUAL

深圳市品存数码科技有限公司




## LED Indicator Light Description

<b>Pairing Status</b>	Blue and green LED twinkle alternately
<b>Power On</b>	Blue LED stays on indefinitely
<b>Wireless Mode</b>	Blue LED flashes slowly when music playing, Blue LED stays on indefinitely when paused
<b>Incoming Call Status</b>	The blue led light of mic boom will stays on indefinitely after headphones power on, and the blue led light of mic boom will go off if you press mute button.
<b>Charging Status</b>	Orange LED stays on while in charging Orange LED goes out while fully charged

## Basic Key Operation

### Turn On

Long press  for 3 seconds, the headphone will turn on after blue LED stays on for 3 seconds.

### Turn Off



Long press  for 3 seconds, the blue and green LED will stay on for 3 seconds, then go out.



## Volume Adjustment

Turn the volume control knob to the  side to turn up the volume, turn it to the  side to turn down the volume.

## Music Selection

Short press  or  to skip to the next song or previous song.

## Play/Pause/Phone call

Music Pause: Short press  when in music playing.

Music Play: Short press  when in music pause.

Answer Calls: Short press  when a call coming in.

Hang Up: Short press  when on a call.

Refuse to Answer: Long press  when a call coming in.

When Wireless is connected, double press  will re-dial the last phone number in your call record.

## Headphone Turn On Status

Long press the On/Off button for 3 seconds, the headphone will turn on, and enter pairing status or re-connect to the last connected Wireless device.

## Wireless Connection

After the headphone turns on, the blue and green LED will twinkle alternately. Turn on the Wireless in your cell phone and search for "UG-06", click to connect. The blue LED will stay on indefinitely after connected successfully, and the blue LED will flash slowly when music playing.



## Mute the Boom Microphone

after power on the blue LED light on the mic boom will stay on indefinitely. Short press the mic mute button to mute the microphone, and the headphone will prompt "didi", and the blue LED light on the mic boom will go off. Short press the mic mute button again to turn on the mic, it will prompt "di", and the mic blue LED light will stay on indefinitely.

## Language Switch

Turn on the headphone and don't connect it with any devices, long press M button for 3 seconds for switching language between Chinese and English.

## Charging Mode

When in a low battery, please charge it for around 2 hours with USB-C charging cable. The headphones will be turned off automatically while charging. Orange LED stays on indefinitely while in charging, and orange LED goes out while fully charged.

## Power Status

When the headphone is connected to the IOS device, the current power status of the headphone will be showed on the upper right corner of the device screen. When the battery is low, it will prompt "battery low".

## Line-in Mode


\*In the power-on state: plug in the audio cable, the headphone will automatically turn off, and you can listen to music on the audio cable.

\*In the power-off state: plug in the audio cable, you can only listen to the music on the audio cable.

Note:

\*If you want to use Wireless, you need to unplug the audio cable and turn the headphone on.

## Headphone Overview

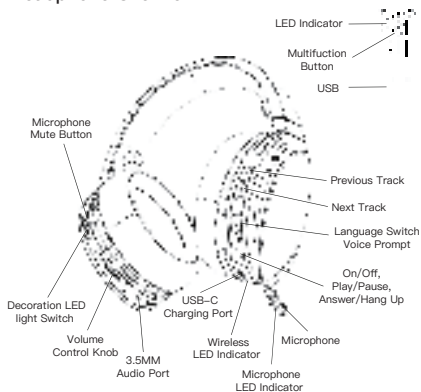

### Colorful Decoration LED Switch

After the headphones turn on, the colorful LED light defaults to be turned off. Long-press the decoration LED light switch for 2 seconds to turn the LED light on. If you want to turn off the colorful LED light for saving battery or for other reasons, long-press the decoration LED light switch for 2 seconds to turn the LED light off.

\*Note: The decoration LED light will not work while the headphone is in charging or in wired mode.

### Wireless Disconnection

In the non-calling state, long press the  and  for 3 seconds to clear the pairing information. The green and blue LED stay on for 3 seconds, then the headphones will enter pairing status, and the green and blue LED will twinkle alternately.

### Reset

Plug in the audio cable to turn off and reset the headphone when there is a crash.

### Wireless Transmitter LED Indicator Description

<b>Power On</b>	Red LED stays on indefinitely
<b>Pairing Status</b>	Blue LED flashes quickly
<b>Connection Succeeded</b>	Blue LED stays on indefinitely

### For the First Time Using

① Insert the Wireless transmitter into the USB port of the device, the device will automatically install the driver, the name displayed on the device is: UG-06, and the default is device audio transmission, the transmitter enters the standby state with the red LED lighting on indefinitely.

② The Wireless device enters the pairing state after power on, long press the button on the Wireless transmitter for 3 seconds to enter the pairing status, and the blue LED will flash quickly.

③ The Wireless transmitter is successfully connected with the Wireless device, and the blue LED will stay on indefinitely.

### For the Second Time and Subsequent Using

When there is pairing information of the headphones on the device, for the second time using, the Wireless transmitter will automatically connect back to the Wireless device.

### Connect between transmitter and headphones

when headphones connect phone, the transmitter will not connect headphones. after headphones disconnect your phone, then press the button of transmitter for 1 click, or long press the button of transmitter for 3 seconds then transmitter will enter the pairing mode with headphones.

### Power On

Insert the Wireless transmitter into the USB port of the computer and it will automatically turn on.

## Power Off / Reset

Unplug the Wireless transmitter.

## Wireless Connection

Long press the transmitter button for 3 seconds, the Wireless transmitter enters pairing status with the blue LED flashing quickly, now it supports listening to music, Wireless video playback, Wireless video calls, etc.

## Wireless Disconnection

Short press the Wireless transmitter button, and the red LED will stay on indefinitely.

## Clear Connection

In any state, long press the transmitter button for 8 seconds, the blue and red LED light will stay on indefinitely.

## Wireless Transmitter Parameters Information

<b>Wireless Version</b>	Wireless 5.0
<b>Input</b>	USB2.0
<b>Signal-to-Noise Ratio</b>	>90dB
<b>Frequency Range</b>	20HZ----20KHZ
<b>Transmission Range</b>	20M
<b>Operating Voltage</b>	5V
<b>Operating Current</b>	14mA----27mA

**KOFIRE****Headphone Parameters Information**

<b>Wireless Version</b>	5.0
<b>Profiles Supported</b>	A2DP/AVRCP/SMP/HFP
<b>Accept Range</b>	8-10M
<b>Microphone sensitivity</b>	-42±3dB
<b>Resistance</b>	26Ω±15%
<b>Sensitivity</b>	100±3dB
<b>Frequency Range</b>	20-20KHZ
<b>Charging Voltage</b>	DC5V
<b>Charging Current</b>	800mA
<b>Operating Voltage</b>	3.7V
<b>Operating Current</b>	26-65mA

**Packing List**

1. Wireless Headphone	4. Audio Cable
2. Wireless Transmitter	5. User Manual
3. Charging Cable	6. Microphone set

**KOFIRE****Warm Tips**

1. Please charge the headphone with 5V 1A / 5V 2A charger, high voltage may damage the headphone.
2. When the headphone has not been used for more than 3 months, it needs to be charged before use.
3. When the headphone has not been used for a long time, we suggest you charge every 3 months to provide good protection for the battery.
4. We suggest you fully charge the headphone for the first time use.

**Attentions**

1. Please keep or use the headphone at normal temperature, avoid direct sunlight.
2. Please keep the headphone away from fire or other hot objects.
3. Please keep the headphone away from damp places or submerged in liquid, keep dry.
4. Please don't try to use other methods of charging other than the USB charging cable we provide.
5. Please don't disassemble, repair, or modify.
6. Please pay attention to excessive clash, if any damage (like dents, deformation, corrosion, etc.), please turn to us for assistance by the contact information on the warranty card.
7. If the headphone produces an abnormal smell, higher than normal temperature, color, or shape changes abnormally, please stop using and turn to us for assistance by the contact information on the warranty card.

**KOFIRE****Warning**

1. If the battery is replaced improperly, there is a danger of explosion. It can only be replaced with a battery of the same type or equivalent. The battery (battery pack or assembled battery) must not be exposed to the conditions such as sunlight, fire, or the similar overheating environment.
2. The device should not be exposed to water droplets or water splashes. It should not be placed in objects such as vases or similar objects filled with liquids.
3. This product is not a children's toy. Children under the age of 14 need to be accompanied by parents to use.

**WARRANTY CARD**

Product Model:	Product Color:
Purchase Date:	Purchase Store:
Purchase Account:	Reason for Warranty:
User Name:	Phone Number:
User Address:	

**Warranty Description**

Please keep the warranty card and valid purchase proof properly, show it together when sending the product to repair. If you can't provide the warranty card or relevant purchase certificate, the calculation date of the product warranty will be based on the product manufacture date.

**Warranty Regulations**

1. If you have any questions during using, please don't hesitate to call 4008894883 for help.
2. Within one year from the purchase date, if the product with quality issue and the technical staff of our company has confirmed that the issue occurs under normal use, we will provide free replacement services.
3. In the following cases, our company refuses to provide free warranty service, only provides maintenance services, free of labor costs, only charges for parts:
  - A. The product main part has been damaged due to incorrect operation, negligent use or irresistible reasons
  - B. The product has been dismantled or repaired without our company authorization
  - C. The headphone driver unit has been used at high volume, and the diaphragm is deformed due to debris or impact. The headphone cable is broken, crushed, immersed in water, the case is damaged, deformed, and some other man-made damage reason.
  - D. The original warranty card and valid purchase proof can't be provided, and the purchase date is beyond the warranty period.
4. The free service provided by this warranty card does not include product accessories, and other decorations, gift, etc.

**Product Qualification Certificate**  
 After inspection, the product  
 meets the technical standards  
 and is allowed to leave the factory.

