

#### AMPHIBIOUS • 360°Rotation INSTRUCTIONS

THANK YOU FOR YOUR CHOOSE OUR PRODUCT, IN ORDER TO UNDERSTAND OUR PRODUCT BETTER, PLEASE READ THE FOLLOWING INSTRUCTIONS BEFORE USING, WHICH BRING YOU DIFFERENT OPERATING EXPERIENCE.

### Note

 
- BATTERY OPERATE PRODUCT.
- This product is suitable for children 8 years old and above. After assembled / charged by adults, play with children again.
- PLEASE USE THIS PRODUCT UNDER THE SUPERVISION OF ADULTS. Warning: Please do not disassemble or modify this product without authorization. Any changes may cause the product to malfunction.
- This manual uses a series of products introduced by our company. Each product has a different configuration. Please see the display of the box for the specific configuration.

 
#### Precautions for use

- 1. The body of the product uses 1 rechargeable battery, see the battery diagram in the battery room for the number of volts; the handle remote control uses two 1.5VAA non-rechargeable batteries; the watch remote control uses two 1.5VA non-rechargeable batteries;
- 2. Battery removal and loading should be toy battery room polarity and voltage correctly operate;
- 3. Non-rechargeable battery is not rechargeable;
- 4. Rechargeable batteries must be charged under adult supervision;
- 5. The rechargeable battery should be removed from the toy before charging;
- 6. Different types of batteries or old and new batteries can not be mixed:
- 7. Only with the same recommended battery or equivalent battery can be used:
- 8. Exhausted battery should be removed from the toy; if not used for a long time, please remove the toy battery.
- 9. Power terminals may not be short-circuited;
- 10. Use a screwdriver to unscrew the screws on the cover of the battery compartment, insert the batteries according to the correct polarity of the positive and negative poles, and unscrew the screws on the cover of the battery compartment with a screwdriver to remove the battery.
- 11. Maintenance and maintenance: This product is composed of plastic. hardware and electronic components, shall not beinto the water or lonoterm placed in wet conditions or use, regularly check the wires, pluce. housings and otherparts for defects, should be discontinued when found defective. Until the repair is complete.

# 2.4G automatic code instructions

- 1. After put the batteries in the controller, the indicate light flashing, and put the batteries in the car and set it on startingto contect it if success the controller indicate light off, ortherwise repeat the above operation.
- 2. Each remote control can only be connected with a remote control car. when the connection is successful, each car does not interfere with each other. Note: not many cars connected at the same time.
- 3. After one minute, the remote controller has not found the 2.4G signal sent by the remote control car, it will enter the sleep mode automatically, the indicator will be off, and press any key to exit the sleep mode.
- 4. When you need to pair with other models with remote control or remote control car, you need to turn off the remote control and remote control car power can be re-paired.





# How to install the battery

- 1 . The remote control.
- 1.Open the battery cover of the remote control and
- load the AA batteriesaccording to the indication of
- the positive and negative poles of the remote control battery compartment 2. Close the battery cover.
- II Remote control car
- 1. Open the car battery cover and connect the rechargeable battery pack to the power socket into the car battery compartment.
- 2. Close the battery cover and tighten with a screwdriver.

### How to charge

- 1, before playing please charge the new battery pack.
- 2, first plug the battery pack plug in the charger, then plug the are torned charger plugged in the socket.(Figure 1)

(2)

- 3. With a 3.7V charger, the time required for the battery to be ficharged is 50 minutes. The charging plug is eorgingnd icator. Dur ing charging, the red light is al ways on and the green light is flashing. When the battery is fully charged, the green light is always on and the red light is off. Don't overcharge Charging for too iong will not increase the power.
- 4. Regularly check the toys and batteries, charging wire, plugs, such as damaged parts should be discontinued until repaired or replaced before use.

## How to play remote control car

- Turn on the remote control car switch.
- 2. Operate the direction stick of the remote control to remotely control the car forward or backward, left or right,
- 3. Turn off the switch of the remote control car after use.



- 4. Operate the remote control key to rotate left and right, 360° rotation.
- 5. The remote control car can travel on land and water. After the indicator on the remote control flashes automatically.
- it indicates low pressure, and it should be switched back in time when playing in the water.
- 6. When the play is over, just turn off the switch of the remote control car. The remote control will automatically enter sleep mode.

General troubleshooting		
Symptoms	Cause of issue	Approach
Vehicles can not drive	<ol> <li>The remote control is not connected or remote control car switch is not turned on.</li> <li>The controller or the car does not load the battery properLY</li> <li>The rechargebal battery power is low.</li> </ol>	1. Turn on the control car and contect again. 2. Insert the battery into the remote control or remote control car correctly. 3. Charge the battery pack.
Vehicles are out of control, Remote control distance	<ol> <li>There is not enough power in the remote control battery or rechargeable battery pack.</li> <li>There may be sources of interference near the site.</li> </ol>	1. Replace the battery inside the remote control with a new battery or charge the rechargeable battery pack. 2. Change the venue.
Abnormal protection	<ol> <li>When the function of the remote control car is hinder- ed by the external force and can not finish the full function of the function or the circuit battery is shortcircuited.</li> </ol>	1.Re-open the power switch remote car power protection

(1)

-

281 5/164



figer.

÷., 1.144