

Instruction Manual

1、 Installation Reminder

Secure the safe before use. The mounting bolts are included.

Modify the master code.

Don't put mechanical emergency key in the safe

2、 Main features

Usage: Storing the laptop and other valuables.

Operation : Micro-motor engine, with digital code operating system.

Locking System: Use 3-6 digit personal code or/and 6 digit master code to lock/unlock.

Safety: Entering 3 times wrong code will temporary shutdown the system for 15 minutes.

Panel shows "Holds 15" .

3、 Open and close the safe

<1> Close by personal code

Input any 3 ~6 digit code then press the "#/LOCK" key, "CLOSED" display, and the safe is locked.

<2> Open by personal code

Input your 3~6 digit code then "OPENED" display, the safe is unlocked.

<3> Open by master code

Input Master code (Default Master code is " 000000"), "OPENED" display, the safe is unlocked.

4、 Master code modification

Make sure that the safe is unlocked, the operation is as following:

Double press "* /Clear" quickly, it will display "PROG", enter the master code (Default master code is "000000"), display "NEU", enter 6 new master code, display "AGAIN", repeat the new master password, display " DONE", the master code is changed.

5、 Time set

Double press "* /Clear " quickly, it will display "PROG" , enter "895100" , it shows the first 6 digit information, ignore it and continue to press "#/Lock" . When the next 6-digit information is displayed, it means "year, month, day", input the local time, press "#/Lock" to continue, when the third 6-digit information is displayed, it means "hour, minute, second", input the local time, Press "#/Lock" to set the time completely.

6、 Power and Batteries

Open the door, use a screwdriver to open the battery cover on the back of the door, and install 4 batteries (pay attention to the up and down direction)

Press "#/Lock" once with the door closed to perform a battery test. "BA-H1" means the battery is sufficient; BA-L means the battery is insufficient, please replace the battery as soon as possible.

Attention:

<1> Press "* /Clear" to cancel when the code is wrongly input.

<2> Enter the 3 times wrong code the system will temporary shutdown for 15 minutes

Emergency mechanical key guide:

Open the black hole under the panel, insert the mechanical key and turn it clockwise, the door opens, and "OPENED" is displayed at the same time, enter a new personal password, press "#/Lock", close the door, and remove the key.