


## CHARGING:

- Before using for the first time, please charge 3 hours fully to activate the micro-harmless function.
- Please do not charge if the temperature is lower than 0°C or higher than 40°C.
- Please do not charge if it is raining the ambient temperature is below 0°C.
- The standard charging time is 3 hours. In order to avoid overheating of the hair, please turn off the charging unit during the rain.
- When it's fully charged, it can be used for more than 90 minutes. During charging, the indicator light stays red.
- Push the switch button to ON, then it can be used.

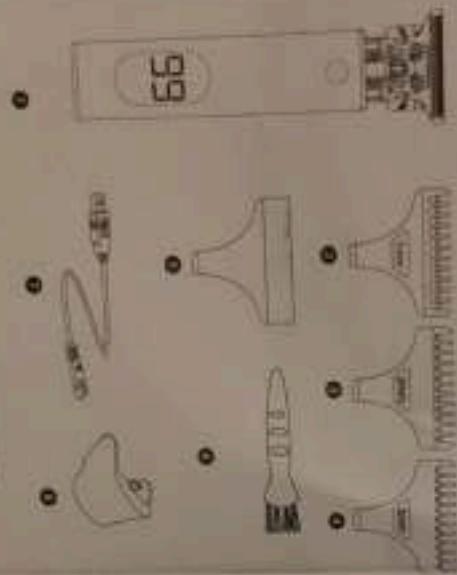

## Parts Identification

- Beard Trimmer
- Comb (1mm)
- Curved Comb
- Precision Cap
- Trimmer/Comb protection cover



1. When first use, unplug the cord, disconnect. Please ensure the power system is at OFF position.
2. Attach comb at 1.2 mm from the bottom cutting length (Cutting H).
3. Pull the comb when in action. The comb can change the width with other size.

## How to use the comb attachment.



• Clean the cutting element more smoothly under a warm tap after every cutting (1).


## Cleaning under the tap

• Clean the cutting element more smoothly under a warm tap after every cutting (1).



## Maintenance of the blades:

- The hair trimmer can be used in both wet and dry conditions.
- Pls this model correctly with the pick of the battery pack which is at the bottom of the machine, then put the adapter into connected with the blade.

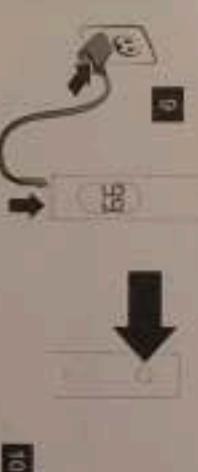

## How to use:

1. Open the cover and connect the cord, disconnect. Please ensure the power system is at OFF position.
2. Turn the cover when in action. The comb can change the width with other size.