SAFETY INSTRUCTION

Please study the instruction manual and below information carefully before installing or using this product. Please keep this user manual for further reference

- The luminaires may only be installed by authorized and qualified technicians according the valid regulations for electrical installation.
- 2. Maintenance of the luminaires is limited to their surfaces. During maintenance no moisture can come into contact with any areas of the terminal connections or voltage control parts.
- 3. The electrical supply must be switched off at the outset, preferably by means of a switch in the distribution box, before any installation, maintenance or repair work is undertaken.
- 4. Exterior lighting must not be installed during rain.
- 6. Take account of the minimal separation distance from other objects and the room required around the fitting.
- 7. If in any doubt, consult a professional, taking local installation requirements into account. Some countries stipulate that lighting may be installed only by registered installers.
- Clamping screws in electrical connections must be adequately tightened. This is particularly the case with 12V low voltage conductors.
- 9. When replacing a halogen lamp, wait for it to cool, for a minimum of 5 minutes.
- Clean with a clean, dry cloth or brush, use no solvents or abrasives. Avoid dampness on all electrical components
- 11. Take account of all available technical information.
- 12. Take note of the symbols when connecting wires:

N =Neutral

 
L =Live



13. Meaning of symbols:











(0.5-|| Minimum distance from lighted objects (meters)

Only the self-shielded halogen lamp should be used with the luminaire

Strip the wire to the indicated length (mm)

Connect using the specified cable

The luminaire is suitable for direct mounting on normal inflammable surface

The type of lamp and maximum size and wattage indicated in each lighting unit must not be exceed

The armature is designed to work only with the indicated voltage. Different items require different working voltage.

The luminaire can be used in combination with a dimmer

The reference light angle and light space of the luminaire

This luminaire cannot be disposed together with normal domestic waste in standard rubbish can, but you have to bring it to a staging area for electrical waste

WWW.OAZOA.COM

OAZOA

INSTRUCTION MANUAL










 


Bora Fan 52 E27



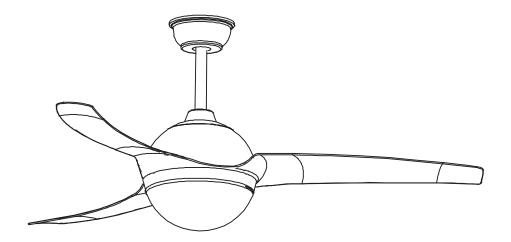

















Bora Fan 52 E27

CONTENTS:

1.Safety precautionpage2
2.Fan Structure Drawingpage3
3.Installtion Of Hanger Bracketpage4
4.Installtion Of Down Rod/Hanger Ballpage5
5. Hanging Of Celling Fanpage5
6.Wiring Of Celling Fanpage6
7.Installtion Of Canopypage6
8.Installtion Of Fan Bladespage7
9.Installtion Of Lightkitspage8
10.Maintenance Tipspage9

INSTRUCTION MANUAL











Bora Fan 52 E27

CEILING FAN REMOTE CONTROL MANUAL


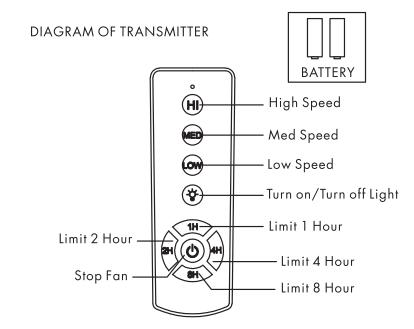


DIAGRAM OF RECEIVER



10



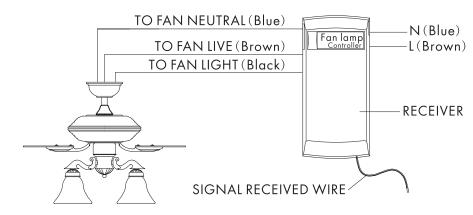







Bora Fan 52 E27



MAINTENANCE TIPS:

- 1.Because of the fan's natural movement, some connections may be loose.
 To check the support connections, brackets and blades attachments 2 times a year. Make sure they are all secured (It it not necessary to dismantle the entire fan from ceiling).
- 2.Clean your fan periodically to help maintain its appearance over the years. Do not use water when cleaning, use only a soft brush or lint-free cloth to avoid scratching the finish. The plating is coated with a lacquer to minimize the ratio of discoloration or tarnishing which would damage the motor or the wood or possibly cause an electric shock.
- 3. You can apply a light coat of furniture varnishing to the wood for additional protection and enhance its beauty. Surface scratched mark can be touch-up with a light coat of shoe polish.
- 4. There is no need to oil your fan. The motor is created with lubricated sealed ball bearings.

WARNING

MAKE SURE THE POWER IS SWITCH OFF AT THE ELECTRICAL PANEL BOX BEFORE YOU ATTEMPT TO ANY REPAIRS (REFER TO THIS SECTION), MAKING ELECTRICAL CONNECTIONS.

INSTRUCTION MANUAL











Bora Fan 52 E27





IMPORTANT: PLEASE READ BEFORE INSTALLATION

- 1. The installation work must be carried out by a qualified wiring installer.
- 2. Turn off the Electrical Main Switch at the circuit breaker fuse box.
- 3. Using power supply 220-240V/50Hz.
- 4. When mouting the fan, to ensure the safety cable is loop across the ceiling mounting "J" hook.
- 5. The ceiling mounting hook must be able to with hold a min. of 35 pounds.
- 6. The ceiling fan must be mounted at a min. height of 2.3 meters of clearance from the floor.
- 7.Do not insert any objects in the path of the blades.
- 8. When all electrical connections are done, store all wires neatly.
- 9. Make sure all screws and connections are tightly screwed and secured.
- 10. The supply wires live and neutral must be connected to a double pole switch having a contact of at least 3 min in all poles.

WARNING

TO REDUCE THE RISK OF PERSONAL INJURY, DO NOT BEND THE BLADES BRACKETS DURING ASSEMBLY OR AFTER INSTALLATION. DO NOT INSERT ANY OBJECTS IN THE PATH OF THE BLADES. TO REDUCE THE RISK OF SHOCK, THIS FAN MUST BE INSTALLED WITH AN ISOLATION WALL CONTROL/SWITCH.

 
2














FAN STRUCTURE DRAWING:

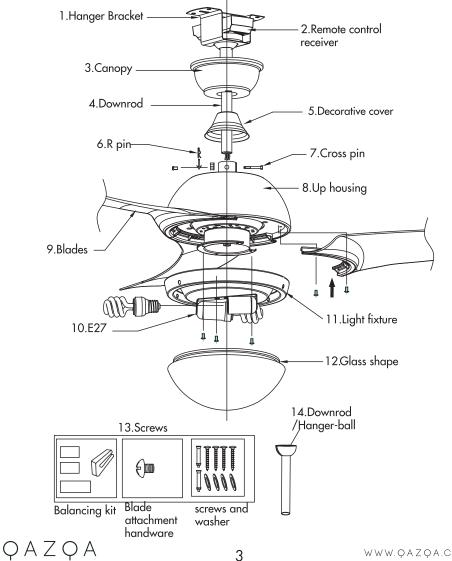

INSTRUCTION MANUAL















Bora Fan 52 E27

INSTALLTION OF LIGHTKITS:

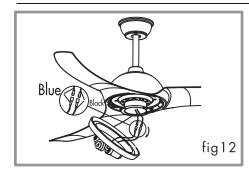

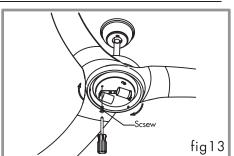


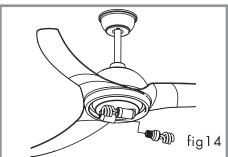

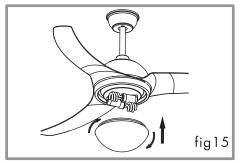

- 1) Remove one screw from the switch box, unscrew the other three screws out 3-4mm.
- 2)Install E27 lightkit: Attach lightkit to the switch box. Total two wires from the switch box.
- 3)Connect the lightkit wire to the switch box wire:Black to Black,Blue to
- 4)Pointing the holes of lightkits to the three screws by pushing up and twist clockwise.
- 5) Fasten the first screw back to the hole and tighten all four screws firmly.
- 6)Install the bulb. 220-240V/50Hz E27-20W(MAX)
- 7) Carefully lift the glass shape by pushing up to the light fixture and twist clockwise until it is held tighten in place by the three tabs.



 













Bora Fan 52 E27



INSTALLTION OF FAN BLADES:

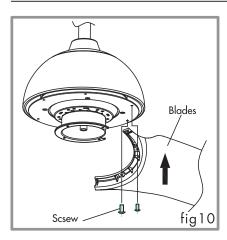

- 1)Install blade to blade bracket using the supplied screws. Star a screw into the bracket ,repeat for the two remaining screws.
- 2) Tighten each screw securely.

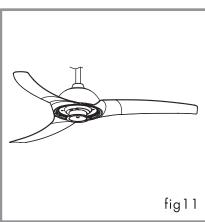

- 3) Remove the three resistance pieces and ten screws off the motor.
- 4) Assemble and attach the blades bracket to the motor holes, install with the ten screws.
- 5) Tighten each screw securely onto the motor.

INSTRUCTION MANUAL













Bora Fan 52 E27

INSTALLTION OF HANGER BRACKET:

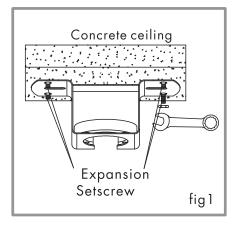

1)To use two Expansion Setscrew to install the hanger bracket firmly.

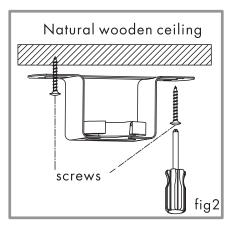

2)To use four long screws to install the hanger firmly.













Bora Fan 52 E27


Q

INSTALLTION OF DOWNROD/HANGER BALL:

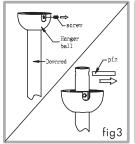




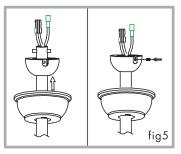

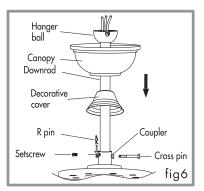

- 1.Remove the screw and bolt from the hanger ball as fig 6;Remove the "R" pin and cross pin from the downrod.
- 2. Put the canopy and the decorative cover into the downrod, then thread the wire through the downrod.
- 3.Install back the screws and bolt to the hanger ball ,ensure to fasten the screws.
- 4.Insert the downrod into the connector, loosen the two setscrews in the downrod support.
 Install back the cross pin and secured with the "R" pin.Fasten back the two setscrews .
- 5. The "R" pin must be properly installed to prevent the cross pin from working loose.

HANGING OF CEILING FAN:

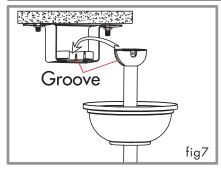

- 1. Carefully lift the fan and assembly into hanger bracket which is attached to the outlet box.
- 2.Ensure the rod ball's groove is lined up with tab on the hanger bracket.



WWW.QAZQA.COM

INSTRUCTION MANUAL












Bora Fan 52 E27

WIRING OF CEILING FAN:

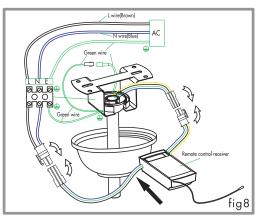


Total four colors of wires connected from the top of the motor:

- *Brown:Live wire for fan
- *Black:Live wire for light
- *Blue:Neutral wire
- *Yellow&Green:Earth wire
- 1)Connect the bracket single male end(yellow&green wire) to the motor single female end(yellow&green wire).
- 2)Conenct the remote control output 4 male end to the motor 4 female end.
- 3)Connect the remote control input 4 female end to the bracket output 4 male end.

NOTE: ALL THE MALE END AND FEMALE END MUST BE CONNECTED WELL TO ENSURE THE MOTOR AND REMOTE CONTROL WORK NORMALLY.

6

INSTALLTION OF CANOPY:

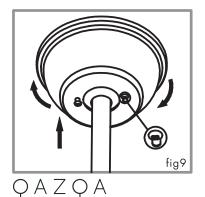

- 1) After done up the wiring, attach canopy to the hanger bracket by pushing up and twist to locate screws in the two key holes.
- 2) Tighten the two screws firmly. (fig 9)

WWW.QAZQA.COM