

Power Switch

Direction Keys

Touch Pad

Multimedia Buttons

Scroll Wheel

Keyboard Area



FN + ESC = **F1**

FN + 1 = **F2**

FN + 2 = **F3**

FN + 3 = **F4**

FN + 4 = **F5**

FN + 5 = **F6**

FN + 6 = **F7**

FN + 7 = **F8**

FN + 8 = **F9**

FN + 9 = **F10**

FN + 0 = **F11**

FN + ~ = **F12**

FN + ENTER = **CTRL** + **ALT** + **DEL**

FN + Space = Overdrive the mouse

FN + Tab = BT

FN + Caps = 2.4G