



- Switch
- Constant light mode
- O The light is off
- Motion detection mode



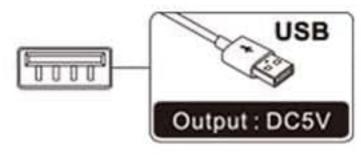

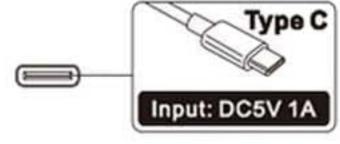

When the switch is in position "I", The lamp does not work during the day.



少

Motion Sensor

A dark environment, When the switch is in position "I", When we approach the light, it will automatically light up.