

KEY SAFE**MANUAL****Parts**

1. Shutter door
2. Release button
3. Key storage compartment
4. Reset lever

How to use


1. Slide down the shutter door.
2. Rotate the dials to the preset combination: 0-0-0-0 (factory setting).
3. Pull down the release button.
4. Open the door fully to add or remove any keys.
5. Close the door and scramble the dials to lock the door and conceal the combination.
6. Slide the shutter door back up.

To set your combination

1. Open the key safe (see instruction above).
2. Push the reset lever to the right and upward.
3. Rotate the dials to your desired combination.
4. Push the reset lever downward and left, back to its original position.

Important

- Carefully install the key safe so it is hidden from view.
- Make sure to set a new number combination immediately.
- Do not use a combination such as "A-A-A-A", which is easily guessed.
- Keep the shutter door closed to increase weather resistance.
- Rotate the dials weekly to keep them moving freely.

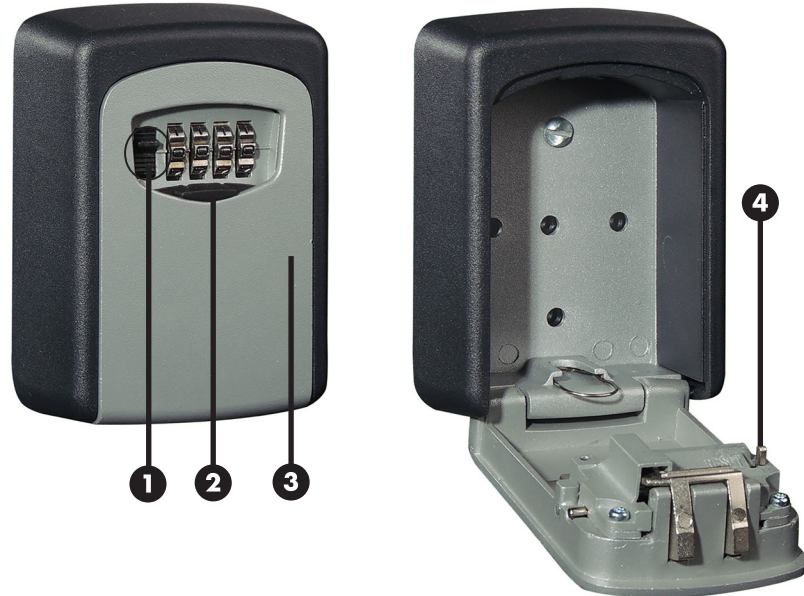

Item NO.: 293
Batch NO.: 21313

MADE IN CHINA

Overschiestraat 63
1062XD Amsterdam
The Netherlands
info@karsten.nl