



Make It Yours.



CK351

Strike with the Speed of Light

MAKE YOUR GAMING EXPERIENCE.



FN + ESC = Reset all to Default
(Press and Hold for 5 seconds to Reset to Default)



FN + F1 = Quick Pick / Cycle 9 Colors and Modes
FN + F2 = Red Color Levels (0-10)
FN + F3 = Green Color Levels (0-10)
FN + F4 = Blue Color Levels (0-10)



FN + PrtSc = Windows Lock / Full Keyboard Lock
FN + ScrLk = My Computer
FN + Pause = Calculator



FN + F5 = Cycle LED Lighting Mode
FN + F6 = Lighting Foreground Effect
FN + F7 = Lighting Background Effect
FN + F8 = Cycle LED Lighting Brightness (0-6)



FN + Ins = Play/Pause
FN + Home = Previous Track
FN + PgUp = Next Track
FN + Del = Mute
FN + End = Volume Down
FN + PgDn = Volume Up



FN + F9 = Record LED Backlight
FN + F10 = Speed up LED Lighting Effect
FN + F11 = Slow down LED Lighting Effect
FN + F12 = Switch Lighting Effect Direction



FN + F1 = Profile 1
FN + F2 = Profile 2
FN + F3 = Profile 3
FN + F4 = Profile 4

ES

FM + ESC = Base Minera (solo a las versiones profesionales)
 (Mineralog profesional durante 5 segundos para establecer
 los ajuste por defecto)

FM + F1 = Seleccione idioma / color / valores y modo
 FM + F2 = Nueva Color Wigo (0-10)
 FM + F3 = Nueva Color Verde (0-10)
 FM + F4 = Nueva Color Azul (0-10)

FM + F5 = Modo Suministro LED
 FM + F6 = Efecto frontal de iluminación
 FM + F7 = Efecto lateral de iluminación
 FM + F8 = Cate de nivel de luminosidad de LED (0-4)

FM + F9 = Gradiente de luminosidad LED
 FM + F10 = Ajustar los efectos de iluminación LED
 FM + F11 = Reducir los efectos de iluminación LED
 FM + F12 = Cambiar la dirección del efecto de iluminación

FM + PrtSc = Bloqueo de Windows / Bloqueo total del teclado
 FM + Sock = M.F.C
 FM + Pause = Volver al escritorio

FM + Inv = Play/Pausa
 FM + Home = Pista Anterior
 FM + PgUp = Subir una Pista
 FM + Del = Borrar
 FM + End = Bajar Volumen
 FM + PgDn = Subir Volumen

FM + 1 = Cambiar al Perfil 1
 FM + 2 = Cambiar al Perfil 2
 FM + 3 = Cambiar al Perfil 3
 FM + 4 = Cambiar al Perfil 4

DE

FM + ESC = Alles auf Standard-Einstellungen zurücksetzen
 (Zum Rücksetzen auf den Standard 5 Sekunden
 gedrückt halten)

FM + F1 = zufällige Auswahl aus 8 Profilen
 FM + F2 = Farbstufen rot (0-10)
 FM + F3 = Farbstufen grün (0-10)
 FM + F4 = Farbstufen blau (0-10)

FM + F5 = LED Modus
 FM + F6 = Beleuchtungseffekt vorne
 FM + F7 = Beleuchtungseffekt hinten
 FM + F8 = LED-Lichteffekt umschalten (0-4)

FM + F9 = LED Beleuchtung aufheben
 FM + F10 = Leuchtdichte des Lichteffekts erhöhen
 FM + F11 = Leuchtdichte des Lichteffekts verringern
 FM + F12 = Licht Effekt Rotationswinkel

FM + PrtSc = Windows Sperre / vollständige Tastatursperre
 FM + Sock = Computer
 FM + Pause = Zurück zum Desktop

FM + Inv = Aktivieren/Pause
 FM + Home = vorheriger Titel
 FM + PgUp = Nächster Titel
 FM + Del = Mischen
 FM + End = Lautstärke -
 FM + PgDn = Lautstärke +

FM + 1 = zu Profil 1 wechseln
 FM + 2 = zu Profil 2 wechseln
 FM + 3 = zu Profil 3 wechseln
 FM + 4 = zu Profil 4 wechseln

TR

FM + ESC = Fabrika Ayarlarına Dön
 (Fabrikaya ayarları dönmek için 5saja basarak 5 saniye
 basılı tutunuz)

FM + F1 = renk seçimi 8 renk ve Modlar
 FM + F2 = Renkleri Rengi Seviyesi (0-10)
 FM + F3 = Yeşil Rengi Seviyesi (0-10)
 FM + F4 = Mavi Rengi Seviyesi (0-10)

FM + F5 = Işıklandırma LED
 FM + F6 = Aydınlatma ön grana efekti
 FM + F7 = Aydınlatma arka plan efekti
 FM + F8 = Işıklandırma led ışık parlaklığı (0-4)

FM + F9 = LED Aydınlatma kaldır
 FM + F10 = Aydınlatma ışık parlaklığı arttır
 FM + F11 = Aydınlatma ışık parlaklığı azalt
 FM + F12 = Aydınlatma ışık parlaklığı döndürme

FM + PrtSc = Windows Kilit / Bütün Klavye Kilit
 FM + Sock = Bilgisayar
 FM + Pause = Maske Makinesi

FM + Inv = Çenstribütör
 FM + Home = Önceki Parça
 FM + PgUp = Sonraki Parça
 FM + Del = Karışık
 FM + End = Ses Açık
 FM + PgDn = Ses Arter

FM + 1 = Profil 1
 FM + 2 = Profil 2
 FM + 3 = Profil 3
 FM + 4 = Profil 4

FR

FN + ESC = Permettre tous les réglages par défaut
(Maintenez enfoncé pendant 5 secondes pour réinitialiser
aux valeurs par défaut)

FN + F1 = Sélection rapide / Cycle 9 couleurs et modes
FN + F2 = Niveaux de couleur rouge (0-10)
FN + F3 = Niveaux de couleur verte (0-10)
FN + F4 = Niveaux de couleur bleue (0-10)

FN + F5 = Mode d'éclairage LED
FN + F6 = Effet lumineux avant
FN + F7 = Effet lumineux arrière
FN + F8 = Faire défiler les niveaux de luminosité LED (0-4)

FN + F9 = Régistra rétroillumination LED
FN + F10 = Accélérer les effets d'éclairage LED
FN + F11 = Ralentir les effets d'éclairage LED
FN + F12 = Changement de direction de l'effet d'éclairage

FN + PrtSc = Verrouillage Windows / Verrouillage du clavier complet
FN + ScrLk = Mon ordinateur
FN + Pause = Calculatrice

FN + Ins = Lecture/Pause
FN + Home = Page précédente
FN + PgUp = Page suivante
FN + Del = Muet
FN + End = Diminution du volume
FN + PgDn = Augmentation du volume

FN + 1 = Basculer vers le Profil 1
FN + 2 = Basculer vers le Profil 2
FN + 3 = Basculer vers le Profil 3
FN + 4 = Basculer vers le Profil 4

IT

FN + ESC = Ripristina tutto al default
(Tenere premuto per 5 secondi per ripristinare le impostazioni
predefinite)

FN + F1 = Presa rapida/Ciclo a 9 Colori e modalità
FN + F2 = Livelli colore Rosso (0-10)
FN + F3 = Livelli colore Verde (0-10)
FN + F4 = Livelli colore blue (0-10)

FN + F5 = Modalità illuminazione a LED
FN + F6 = Effetto anteriore illuminazione
FN + F7 = Effetto posteriore illuminazione
FN + F8 = Cycle luminosità di illuminazione a LED (0-4)

FN + F9 = Registra retroilluminazione LED
FN + F10 = Accelerare gli effetti di illuminazione a LED
FN + F11 = Rallentare gli effetti di illuminazione a LED
FN + F12 = Cambiare effetto d'illuminazione

FN + PrtSc = Blocco finestra / Blocco tastiera completa
FN + ScrLk = Risorse del computer
FN + Pause = Calcolatrice

FN + Ins = Play/Pausa
FN + Home = Traccia Precedente
FN + PgUp = Traccia Successiva
FN + Del = Mute
FN + End = Volume Giù
FN + PgDn = Volume Su

FN + 1 = Passare al Profilo 1
FN + 2 = Passare al Profilo 2
FN + 3 = Passare al Profilo 3
FN + 4 = Passare al Profilo 4

ID

FN + ESC = Reset Semua ke Awal
(Tekan lalu Tahan selama 5 detik untuk Mengatur Ulang
ke Default)

FN + F1 = Pilihan Cepat / Perputaran 9 warna dan mode
FN + F2 = Tingkat Warna Merah (0-10)
FN + F3 = Tingkat Warna Hijau (0-10)
FN + F4 = Tingkat Warna Biru (0-10)

FN + F5 = Mode Perputaran Cahaya LED
FN + F6 = Efek Cahaya Latar Depan
FN + F7 = Efek Cahaya Latar Belakang
FN + F8 = Kecerahan Lampu LED Sirkus (0-4)

FN + F9 = Rekam LED Latar Belakang
FN + F10 = Percepat Efek Cahaya LED
FN + F11 = Perlambat Efek Cahaya LED
FN + F12 = Mengganti Arah Cahaya LED

FN + PrtSc = Kunci Windows / Kunci Keyboard penuh
FN + ScrLk = Komputer Saya
FN + Pause = Kalkulator

FN + Ins = Mode/Pause
FN + Home = Lagu Sebelumnya
FN + PgUp = Lagu Berikutnya
FN + Del = Bisu
FN + End = Volume Turun
FN + PgDn = Volume Naik

FN + 1 = Profil 1
FN + 2 = Profil 2
FN + 3 = Profil 3
FN + 4 = Profil 4

PT

F1 + ESC = Restabelecer tudo para o defeito
(Mostra a opção de restauração de fábrica e regulador para repara-
r as preferências de fábrica)

F1 + F5 = Nova Página (Ctrl + F) - Correr e mudar
F1 + F2 = Novos da Cor Vermelha (Ctrl)
F1 + F3 = Novos da Cor Verde (Ctrl)
F1 + F4 = Novos da Cor Azul (Ctrl)

F1 + F5 = Modo de iluminação LED
F1 + F6 = Efeito de iluminação frontal
F1 + F7 = Efeito de iluminação traseira
F1 + F8 = Cor de fundo da iluminação LED (2-4)

F1 + F9 = Grava e reset iluminação LED
F1 + F10 = Ativar ou desativar efeito de iluminação LED
F1 + F11 = Desativar ou ativar efeito de iluminação LED
F1 + F12 = Mudar a direção dos efeitos luminosos

F1 + F12C = Windows / Windows (Ctrl + Shift)
F1 + Shift = Copiar/colar
F1 + Mouse = Calcular/ler

F1 + Inv = Play/Pause
F1 + Mouse = Play
F1 + PgUp = Previous Page
F1 + Del = Save Item
F1 + End = Select a Volume
F1 + PgDn = Auto on / off Volume

F1 + 1 = Muda para o perfil 1
F1 + 2 = Muda para o perfil 2
F1 + 3 = Muda para o perfil 3
F1 + 4 = Muda para o perfil 4

RU

F1 + ESC = сбросить все
Показать опцию восстановления и регулятор для
возвращения параметров по умолчанию

F1 + F1 = быстрый выбор цвета и в. цвета и режимов
F1 + F2 = уровень красного цвета (2-10)
F1 + F3 = уровень зеленого цвета (2-10)
F1 + F4 = уровень синего цвета (2-10)

F1 + F5 = Режим светодиодной подсветки
F1 + F6 = Эффект передней подсветки
F1 + F7 = Эффект задней подсветки
F1 + F8 = Переключение яркости светодиодной подсветки (2-4)

F1 + F9 = запись LED подсветки
F1 + F10 = отключить световые эффекты LED
F1 + F11 = включить световые эффекты LED
F1 + F12 = переключение направления светового эффекта

F1 + F12C = Windows / Windows (Ctrl + Shift)
F1 + Shift = Copy/Paste
F1 + Mouse = Calculate/Read

F1 + Inv = Play/Pause/Play
F1 + Mouse = Play/Previous Page
F1 + PgUp = Previous Page
F1 + Del = Save Item
F1 + End = Select a Volume
F1 + PgDn = Auto on / off Volume

F1 + 1 = переключение на профиль 1
F1 + 2 = переключение на профиль 2
F1 + 3 = переключение на профиль 3
F1 + 4 = переключение на профиль 4

AR

F1 + ESC = إعادة ضبط الكل للتعرف على
المعلمة أو إعادة ضبط الكل للتعرف على المعلمة
الافتراضية

F1 + F1 = سريع اختيار اللون و. اللون و
الوضع = F1 + F2 = مستوى اللون الأحمر (2-10)
= F1 + F3 = مستوى اللون الأخضر (2-10)
= F1 + F4 = مستوى اللون الأزرق (2-10)

F1 + F5 = وضع نور / إعداد الخلفية
= F1 + F6 = تأثيرات الخلفية الأمامية
= F1 + F7 = تأثيرات الخلفية الخلفية
= F1 + F8 = التبديل بين سطوع LED (2-4)

F1 + F9 = تسجيل إعداد الخلفية
= F1 + F10 = إيقاف تأثيرات LED
= F1 + F11 = تشغيل تأثيرات LED
= F1 + F12 = تغيير اتجاه تأثيرات LED

F1 + F12C = Windows / Windows (Ctrl + Shift)
= F1 + Shift = نسخ/لصق
= F1 + Mouse = حساب/اقرأ

F1 + Inv = تشغيل / إيقاف
= F1 + Mouse = تشغيل / صفحة
الرجوع = F1 + PgUp = صفحة
الرجوع = F1 + Del = حفظ
العنصر = F1 + End = اختيار
الحجم = F1 + PgDn = تشغيل /
إيقاف الصوت

F1 + 1 = ملف الشخصي رقم 1
F1 + 2 = ملف الشخصي رقم 2
F1 + 3 = ملف الشخصي رقم 3
F1 + 4 = ملف الشخصي رقم 4

JP

FM + ESC = 半角英数字変換
 1/2 角数字にして表示 (半角数字の状態で表示)

FM + F1 = 半角表示モードの全角変換前/変換
 FM + F2 = 半角表示モードの全角
 FM + F3 = 全角表示モードの全角
 FM + F4 = 全角表示モードの全角

FM + F5 = 全角表示モードの全角
 FM + F6 = フロントパネルの全角
 FM + F7 = ソフトウェアの全角
 FM + F8 = 全角表示モードの全角 (半角英数字)

FM + F9 = 全角表示モードの全角
 FM + F10 = 全角表示モードの全角
 FM + F11 = 全角表示モードの全角
 FM + F12 = 全角表示モードの全角

FM + F13 = Windows 9x/NT/2000/XP/2003
 FM + Scroll = 全角表示モード
 FM + Pause = 全角表示

FM + Esc = 全角表示モード
 FM + Home = 全角表示モード
 FM + PgUp = 全角表示モード
 FM + Del = 全角
 FM + End = 全角表示モード
 FM + PgDn = 全角表示モード

FM + 1 = 全角表示 1
 FM + 2 = 全角表示 2
 FM + 3 = 全角表示 3
 FM + 4 = 全角表示 4

CHS

FM + ESC = 全角英数字変換
 (半角 1/2 角数字にして表示)

FM + F1 = 全角表示モードの全角変換前/変換
 FM + F2 = 全角表示モードの全角
 FM + F3 = 全角表示モードの全角
 FM + F4 = 全角表示モードの全角

FM + F5 = 全角表示モードの全角
 FM + F6 = フロントパネルの全角
 FM + F7 = ソフトウェアの全角
 FM + F8 = 全角表示モードの全角 (半角英数字)

FM + F9 = 全角表示モードの全角
 FM + F10 = 全角表示モードの全角
 FM + F11 = 全角表示モードの全角
 FM + F12 = 全角表示モードの全角

FM + F13 = Windows 9x/NT/2000/XP/2003
 FM + Scroll = 全角表示モード
 FM + Pause = 全角表示

FM + Esc = 全角表示モード
 FM + Home = 全角表示モード
 FM + PgUp = 全角表示モード
 FM + Del = 全角
 FM + End = 全角表示モード
 FM + PgDn = 全角表示モード

FM + 1 = 全角表示 1
 FM + 2 = 全角表示 2
 FM + 3 = 全角表示 3
 FM + 4 = 全角表示 4

CHT

FM + ESC = 全角英数字変換
 (半角 1/2 角数字にして表示)

FM + F1 = 全角表示モードの全角変換前/変換
 FM + F2 = 全角表示モードの全角
 FM + F3 = 全角表示モードの全角
 FM + F4 = 全角表示モードの全角

FM + F5 = 全角表示モードの全角
 FM + F6 = フロントパネルの全角
 FM + F7 = ソフトウェアの全角
 FM + F8 = 全角表示モードの全角 (半角英数字)

FM + F9 = 全角表示モードの全角
 FM + F10 = 全角表示モードの全角
 FM + F11 = 全角表示モードの全角
 FM + F12 = 全角表示モードの全角

FM + F13 = Windows 9x/NT/2000/XP/2003
 FM + Scroll = 全角表示モード
 FM + Pause = 全角表示

FM + Esc = 全角表示モード
 FM + Home = 全角表示モード
 FM + PgUp = 全角表示モード
 FM + Del = 全角
 FM + End = 全角表示モード
 FM + PgDn = 全角表示モード

FM + 1 = 全角表示 1
 FM + 2 = 全角表示 2
 FM + 3 = 全角表示 3
 FM + 4 = 全角表示 4



Package Contents

- CE01 Gaming Keyboard
- Soft User Guide
- Quick Start Guide

附件名稱	有毒有害物質成分表					
	鉛 (Pb)	鎘 (Cd)	汞 (Hg)	六價鉻 (Cr(VI))	多環芳烴 (PAHs)	多溴二苯醚 (PBDEs)
結構壳体	○	○	○	○	○	○
滾珠組件 PCB 底座	○	○	○	○	○	○
線材	○	○	○	○	○	○
膠墊	○	○	○	○	○	○

○: 0.01% (w/w) or less
 ○: 0.001% (w/w) or less
 ○: 0.01% (w/w) or less

功能名稱	RoHS 指令 (EU) 限制物質						
	鉛 (Pb)	鎘 (Cd)	汞 (Hg)	六價鉻 (Cr(VI))	多環芳烴 (PAHs)	多溴二苯醚 (PBDEs)	多氯二苯醚 (PCB)
線材	○	○	○	○	○	○	○
功能	○	○	○	○	○	○	○
電線類	○	○	○	○	○	○	○
電線類	○	○	○	○	○	○	○

○: 0.01% (w/w) or less
 ○: 0.001% (w/w) or less
 ○: 0.01% (w/w) or less

King Pacific - Cyber Master Technology Inc.
 25, No. 1067, Zhongxing Rd., Chungli, Taichung, Taiwan
 Tel: +886-3-2221-2017

China - Cyber Master (Shenzhen) Co., Ltd.
 10/Floor, Building 3, Zhongguo Rd, Luohu,
 518116, Shenzhen, Guangdong, P.R. China
 Tel: +86-755-23275500

South America - Cyber Master South America
 250, Av. Argentina Highway, Curitiba
 Brazil, 81250-000
 Tel: +55-41-3361-2000

Europe - Cyber Master Europe B.V.
 Industrieweg 15, 5103, Dordrecht,
 The Netherlands
 Tel: +31-78-6246 720-0000

USA - Cyber Master Technology Inc.
 25, No. 1067, Zhongxing Rd., Chungli, Taiwan
 Tel: +886-3-2221-2017

© 2022 Cyber Master Technology Inc. All Rights Reserved.
 All trademarks and registered are the property of their respective owners.
 Tel: +886-3-2221-2017



Cooker Master Products

LIMITED WARRANTY

This document describes the warranty we offer for all Cooker Master peripheral products.

WHY THE WARRANTY EXISTS:

This warranty is valid only for the original purchaser only.

WHAT THE WARRANTY PROTECTS:

This warranty is valid only for the Cooker Master Products distributed by authorised dealers.
Please contact Cooker Master for the address information, locations and website.

<http://www.cookermaster.com>

WHAT IS AND IS NOT COVERED:

It is important to read this document to not be disappointed or surprised for the absence of the Program, any technical parts, because the program of Cooker Master. The Program does not apply to the software development of a product to a product which has been designed, built or modified, altered, changed, upgraded, improved, changed, replaced, repaired, modified, and accessories, natural or personal accidents, or environmental conditions, misuse or modifications.

The Program does not cover any events such as below:

- Any software, accessories or non-authorized parts.
- Any physical environment or use of the product in Cooker Master Program.
- Any product which has been modified without official permission from Cooker Master, or if it is the original product which has been modified without official permission from Cooker Master, or if it is the original product which has been modified, modified, or changed.
- Hardware, whose product, design, fit, work, shipping, or other acts of labor, commercial or industrial use, modification or modification or failure to follow instructions included with the product.
- Third party products using Cooker Master Technology will not be covered by warranty. See your vendor or the manufacturer for the product's own warranty.

- Warranty is void and repair is outside our authorized by Cooker Master, Inc.
- Any damaged electrical systems must be used with this program.
- Cooker Master is not a Cooker Master product and will not be repaired, if used by the Program.
- Cooker Master reserves the right to refuse to service any product which has been altered, modified or repaired by a third party.
- Cooker Master does not warrant that the program will meet your requirements, it is your responsibility to determine the suitability of the product for your purpose.

- Warranty is limited to repair.
- You are responsible for the cost of shipping the product to Cooker Master. Cooker Master pays the cost of returning a product to you (within one (1) month) if it is found to be defective from Cooker Master.
- Cooker Master reserves the right to replace the product with a service product at their sole discretion at any time.
- Product malfunction or damage resulting from theft or misuse.
- Accessories that malfunction due to physical damage such as USB cables, extension cables, adapter cables, antenna, power cords, cables, antennas, brackets, etc. tags, and all other items, accessories.

EXTENSION OF IMPLIED WARRANTIES:

These are not implied warranties, EXPRESS OR IMPLIED, WHICH IS THE EXTENSION OF IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

For the most updated information please visit our official website www.cookermaster.com
Cooker Master Support: Support@CookerMaster.com

EXCLUSION OF DAMAGES:

- COOKER MASTER LIABILITY IS LIMITED TO THE COST OF REPAIR OR REPLACEMENT OF THE PRODUCT. COOKER MASTER SHALL NOT BE LIABLE FOR:
 - DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECT IN THE PRODUCT, DAMAGES BASED UPON NEGLIGENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF DATA, OR LOSS OF CONTRACT WITH A THIRD PARTY, MULTIPLE LOSS OF CONTRACTS OR LOSS OF CONTRACTS, LOSS OF PROFITS OR LOSS OF BUSINESS OPPORTUNITY OR LOSS OF DATA.
 - ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE.
 - ANY CLAIM AGAINST THE CUSTOMER OR ANY OTHER PARTY.

WARRANTY INFORMATION:

- If the product is found with a significant defect within the period of either in Table A, starting on the first day of purchase with proof of purchase, this is what you must do to claim warranty.

PROCEDURES:

- Consumers should return to the shop where they have bought the goods, after confirming with the shop with a salesperson, they may approach the distributor for the claim.
- If the distributor is not the shop, then the goods will be returned to the distributor, replacement and repair will be done by the distributor including travel fees or other related costs.
- If finally goods have failed to the distributor, customers for returning the faulty goods will be covered by the consumer, and distributor will cover the cost involved in the transporting of parts or required goods to the consumer.

Regardless of the expenses incurred in making the claim, and this is how you would claim:

- When the claim is made, you should bring the first receipt, bearing number, final receipt and proof of purchase and documents to be required for the claim.
- If the damage was caused by the consumer, then the consumer should cover the expense of fixing the product. If the product will not be fixed, we would suggest consumer to buy a brand new product.
- Product items covered under this warranty will be covered by the distributor.
- Faulty products with expired warranty labels, we would suggest consumer to purchase a new product, without undertaking for repair.

Table A:

Cooker Master Products

These check your own manual for the exact warranty period terms for products that are not shown below. We have our warranty information pages on our official website.

<http://www.cookermaster.com/technicalsupport.html>

Cooker Master: Saving Peripherals products warranty

Product Name	Warranty Term
CK221	1 years

FOR AUSTRALIA ONLY:

The goods listed will not be sold that cannot be protected under the Australian Consumer Law. You are encouraged to make claims or return for a claim. Labels and the compensation for any other reasonably foreseeable loss or damage. This one also includes to take the goods (repair) or replacement. The goods will be of acceptable quality and the factory does not provide a 2-year defect. Cooker Master Technology Inc, # 10, 108 1, Zhongshan Rd, Shanghai, China, New Taipei City 22306, Taiwan R.O.C., Telephone: +886 2 2221 0277 (Monday to International (24 Hours, 24/7)