

**linsar**

**EDELSTAHL WASSERKOCHER DIGITAL  
STAINLESS STEEL KETTLE DIGITAL**



**Bedienungsanleitung  
Instruction Manual**

TEG18784

**CE**

## General information

### Reading and storing the operating manual



This user manual belongs to this stainless steel kettle digital (referred to as the "product" below). It contains important information on how to set up and handle the product.

Read the user manual carefully, in particular the safety instructions, before using the product. Failure to follow this user manual may lead to severe injuries or product damage.

This user manual is based on the standards and regulations that are valid within the European Union. Outside the EU, please also note the country-specific directives and laws.

Keep this user manual for future reference. If you pass this product on to a third party, you must also supply this user manual.

#### Intended use

The product is intended for private use only and is not suitable for commercial use. Use the product only as described in this operating manual. Any other use is improper and may lead to product damage or even personal injury. This product is not a toy. The manufacturer or retailer assumes no liability for damage caused by improper or incorrect use. Do not use the product anything other than water.

## Explanation of symbols

The following symbols are used in this operating manual, on the product or on the packaging.



This symbol provides you with useful additional information on handling and use.



Declaration of conformity (see chapter "Declaration of conformity"): Products marked with this symbol meet all the applicable Community regulations of the European Economic Area.



This symbol denotes food-safe products. Taste and odour are not impaired.



Products marked with this symbol correspond to protection class I.



Warning of hot parts. The surfaces may heat up during operation.

## Safety

 
The following signal words are used in this user manual.



This signal symbol/word denotes a hazard with an average risk level that could lead to death or severe injury if it is not avoided.



This signal symbol/word denotes a hazard with a low risk level that could lead to mild or moderate injury if it is not avoided.



This signal word provides a warning about potential material damage.



**Risk of electric shock!**

### Electrical safety and cord handling

 
**Faulty electrical installation or excess mains voltage may result in electric shocks.**

- Make sure your outlet voltage and circuit frequency correspond to the voltage stated on the appliance rating label. If this is not the case, contact the after sales support line and do not use the Kettle.
- To protect against fire and electric shock, do not immerse the cord, plug, power base or the Retro Kettle body itself in water or other liquid. Do not expose the electrical connections to water.
- The cord should be run in such a way that there will be no risk of anyone pulling it inadvertently or tripping over it.
- Do not kink, bend, squash, strain or damage the power cord and protect it from sharp edges and heat.
- Grip the plug when disconnecting, do not pull the cord.
- Do not let the cord hang over the edge of a table or bench top.
- Do not let it touch hot surfaces.
- Do not pick up or operate the appliance if the power supply cord or plug is damaged, or after it malfunctions or has been dropped or damaged in any way.
- In case of damage, contact the after sales support line for advice.
- A damaged cord or plug must be replaced by the manufacturer or a qualified person in order to avoid a hazard.
- Make sure all electrical connections are clean and dry before switching on.
- Do not use this appliance in conjunction with an extension cord.

- Unplug the appliance from the power outlet when not in use and before cleaning, servicing, maintenance or moving the appliance.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.

### **Usage Conditions and Restrictions**

- This appliance is intended for domestic use only.
- Only use this kettle with the supplied power base.
- Do not use the power base to power any appliance other than this kettle.
- Do not use the kettle to boil anything other than water.
- This product is not intended for commercial use. Do not use it outdoors.
- Only use this Retro Kettle as described in this manual. Any other use is not recommended and may cause fire, electric shock or injury.
- Improper installation and the use of accessories not recommended by the appliance manufacturer may result in fire, electric shock or personal injury and will invalidate your warranty.
- We assume no responsibility for any eventual damages caused by improper or faulty use.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Keep the appliance and its cord out of reach of children aged less than 8 years.
- Children should be supervised to ensure they do not play with the appliance.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use chemical, steel wool or abrasive cleaners to clean the outside of the unit, as these will scratch the metal surface.
- Do not operate the unit near liquids (kitchen sink, water basins, taps etc.).
- Ensure that all the parts are correctly assembled before operation.
- Maintain the appliance in accordance with the instructions to ensure that it functions properly.
- If there is a product malfunction, or if it has been damaged in any way, call the after sales support for assistance.
- Immediately unplug the appliance if fire or smoke is emitted.
- Place the product on a straight, rigid and stable surface, away from sources of direct sunlight or excessive heat.
- Do not place the product near heat sources such as radiators, heat registers, stoves or other appliances that produce heat.
- Do not place the product near other items that may damage it, such as naked flame sources (lit candles) or objects containing water (a vase or fishbowl).
- Take care that no objects fall and no liquids are spilled into any openings.




**WARNING!**

**Electric shock hazard!**

**Lift the Kettle off the power base to fill it. Never fill the kettle while it sits on its base. If the base unit becomes wet, unplug it before wiping it dry.**

 - To avoid splashing of boiling water, do not overfill the kettle. Make sure the water level is above the minimum mark but below the maximum level.
- Make sure the lid is securely closed before switching on the kettle.
- Never leave the filter loose in the kettle, it must sit securely in the grooves in front of the spout.
- Do not leave the kettle unattended when it is switched on.



**WARNING!**

 
**Injury hazard! Do not remove the lid while the water is boiling.**



**Hot surface!** Parts of this appliance become very hot during operation.

Improper handling may lead to serious injuries.

- Never remove the filter when the kettle contains hot water.
- Do not put any part of your hand or body near the kettle when it is switched on.
- Do not touch any part of the kettle when it is boiling. The surfaces get hot. Use the handle 9 only.
- This appliance features a short power cord to reduce the risk of being entangled, and to reduce the risk of tripping. An extension cord or longer detachable cord is not recommended for use with this product.
- There are no user-serviceable parts inside. Do not attempt to service this product. Please call our after sales support for instructions.




**CAUTION!**

**Do not operate the product without water/ liquid.**

- Only use the product with the power base provided. Do not use the power base with anything else other than the product.
- Always use the product on a stable, level and heat resistant surface.
 
## Package contents/device components

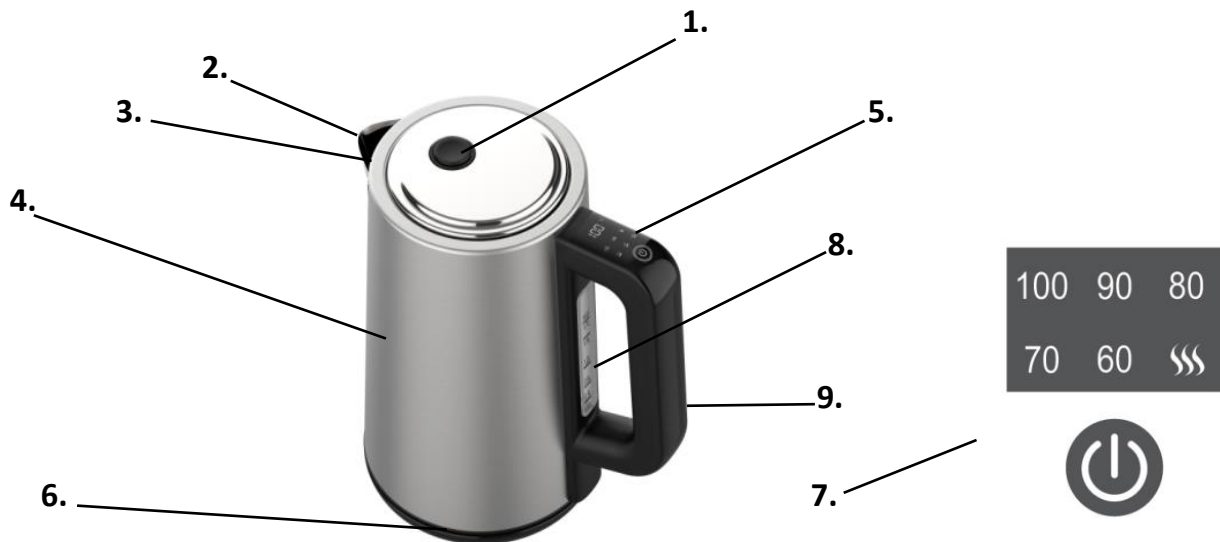

1. Automatic press Lid
2. Spout with filter
3. Removeable and washable lime scale filter
4. Body
5. Digital display
6. Power base with cord reel bottom side and anti-slip feet
7. On/off touch button
8. Water level
9. Handle

### Before first use

#### Check the device and scope of delivery

#### **NOTE!**

#### **Risk of damage!**

If opening the packaging with a sharp knife or other pointed objects, be careful to avoid damaging the product's surface.

- Proceed carefully with opening the packaging.

1. Take the product out of the packaging.
2. Check that the delivery is complete (see chapter "Package contents/device components").
3. Inspect the device and individual parts for damage. Do not operate a damaged

device; instead, contact the manufacturer via the service center listed on the warranty card.

4. Remove the packaging and all protective film, if present.

### Setting up the product




- Make sure the product is disconnected from the power supply.
- Lift the kettle vertically off the power base, open the lid and fill the kettle with cold water and boil it, then discard the water. This is ensure all oils, dust or other residues left from the manufacturing process and transport are removed. Repeat this procedure a second time before using the kettle for boiling to drink.
- The product is now ready for use.

### Boil-dry protection






The product has an automatic shut-off feature that shuts down power to the product if it is empty, preventing accidental operation without water. Once this safety feature has been activated, unplug the product and let it cool down for a few minutes before filling it with cold water. The Boil-dry protection will the reset and the product is ready for use again.

### Instructions for use

- To fill the kettle, remove it from the power base and open the lid, fill the desired amount of cold tap water, then close the lid.
- Make sure to fill the kettle at least to the minimum (0.5 L) but not beyond the maximum level (1.7 L) (see water level). Too little water will result in the kettle switching off before the water has boiled; too much water will result in boiling water spilling out of the spout when boiling. Take care that no water spills onto the power base.
- Ensure that the lid is firmly in place before positioning the kettle on the power base. With dry hands, plug the power base into the appropriate wall outlet and switch on power at the outlet. The display of the kettle shows "OFF".
- Touch the ON/OFF button  to select the desired water temperature. There are 6 modes on this kettle: "100°C-90°C-80°C-70°C-60°C-keep warm mode ".
- While touching the on/off button , each touch of the modes will be with a "beep" sound to remind you that you are selecting different modes.
- When you selected the mode you need, just wait for 3 seconds, it will set the mode with a "beep" and the selected mode lights up while it is under the program.
- When you select 100°C mode, it will shut off automatically after reaching 100 degrees. Wait until the water inside the kettle has completely stopped bubbling before pouring. Remove the kettle from the power base by gripping the handle and lifting off the power base.



**Take care when pouring the water to avoid scalding from boiling water or hot steam. Do not open the lid while the water in the kettle is hot.**

- When you select 90°C-80°C-70°C-60°C modes the display will be light up together with the keep warm mode , it will come into keep water mode for two hours after reaching the selected temperature.
- When you select the keep warm mode , the display shows 65°C and it is under keep warm mode for two hours. While the water temperature is under 50°C, the kettle will heat it up automatically to reach the keep warm temperature of 65°C. After two hours, the kettle will “beep” three times and come into standby mode (display shows OFF).
- If you need water with a certain temperature, you can stop the heating process at any time during operation - simple touch the ON/OFF button  and select another desired temperature. Wait for 3 seconds and it will set the mode with a “beep”.
- To re-boil the water, allow the kettle to cool for 15-20 seconds before switching again to boil the water.
- The kettle may be stored on the power base but make sure the power supply is turned off when the kettle is not in use.
- Malfunction
  1. When NTC is short circuited, the digital tube will display "E1", and the buzzer will sound ten times at the same time.
  2. When the NTC is open, the digital tube displays "E2", and the buzzer rings ten times at the same time.
  3. During dry burning protection, the digital tube will display "E3", and the buzzer will sound ten times at the same time.

## Cleaning and maintenance



**Unplug the product from the power outlet before cleaning. Wait for the product to completely cool down. Never immerse the kettle, cord or power base in water. All connections and sockets must be kept dry.**

- The outside of the product only requires occasional wiping with a damp cloth and mild, non-abrasive household detergent, if necessary, then wipe dry.
- To prevent damage to the product, do not use scouring pads, steel wool, solvents or harsh chemical or alkaline cleaning agents.
- Ethereal oils and organic solvents can attack plastic parts, e.g. lemon juice or the juice from orange peel, or cleansers that contain acetic acid. Do not allow such substances to come into contact with the product parts.



## Removal of mineral deposits



From time to time, you may need to clean off any mineral deposits (limescale) left by water inside your kettle to keep it operating efficiently.

How often you have to do this depends on the water hardness in your area and on how often you use the product. If scaling is a problem in your area, it is important that you clean the inside of the kettle regularly as scale build-up will damage the heating element and impair the boil-dry safety feature.

You can use a commercially available descaling agent for household products (according to the instructions on the packet) to descale the kettle, or a simple water and vinegar solution and follow the steps below.

1. Fill the kettle with 3 cups of white vinegar and the remainder with water.
2. Let this mixture stand in the kettle overnight. Do not boil.
3. Empty the solution from the kettle. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.
4. Fill the kettle with fresh, clean water, let it boil and then discard the water. Repeat with clean, fresh water until all traces of vinegar are removed.



It is possible that spots of what looks like rust may appear on the base. This is caused by impurities in the water, it is not a fault.

## Cleaning the filter

- Clean the filter regularly to ensure an easy flow of water. Take out the filter from in front of the spout and under running water, rub the filter gently with your fingers. Be careful not to use anything that could tear or damage the filter when cleaning.
- Descale the filter at regular intervals. Soak it in a descaling solution, rub off any residues gently with your fingers and then rinse the filter thoroughly.

## Storage

- When in storage or not in use, the power cord may be wound around the cord storage under the bottom of kettle.
- Ensure the product is clean and completely dry.
- Store the product in its original box or in a clean, dry place out of the reach of children.

## Technical data

Model:	DK-A
Supply voltage:	220–240 V~, 50-60 Hz
Power:	1850-2200 W
Protection class:	I

## Declaration of conformity



You can request the EU declaration of conformity from the address provided at the end of this manual.

## Disposal

### Disposing of the packaging



Sort the packaging before you dispose of it. Dispose of paperboard and cardboard with the recycled paper service and wrappings with the appropriate collection service.

### Dispose of old electrical device



**Old electrical devices must not be disposed of as household waste!**

If the device cannot be used any more, each consumer **is obligated by law to dispose of old devices separately from household waste**, e.g. at a municipal/city district collection point. It is thereby ensured that old devices are professionally recycled and negative effects on the environment are avoided. Therefore, electrical devices are marked with the above symbol.

## WARRANTY

### Stainless steel kettle digital (DK-A)

For a period of 2 years from the date of purchase, we guarantee the remedy of defects that are due to material and production faults free of charge by means of exchange.

Warranty claims must be submitted immediately once the defect arises. Warranty claims after expiration of the warranty period are excluded.

In case of a warranty, return the defective device to the service centre together with the completed warranty slip, stating the reason for the complaint.

The warranty will be void in the case of improper or incorrect use, non-observance of the information provided in the user manual for the device, brute force, force majeure or any work on the device that was not carried out by our authorised specialist shops.

# WARRANTY

## Stainless steel kettle digital (DK-A)

In case of a warranty claim, fill out the card carefully and send it to us together with the device and the sales receipt. Valid for 2 years as of the selling date/postmark.

**Customer name:** \_\_\_\_\_

**Reason for complaint:** \_\_\_\_\_

**purchased at** (please include sales receipt): \_\_\_\_\_

### Customer service:

teknihall Elektronik GmbH Assar-Gabrielsson-Str. 11-13 63128 Dietzenbach GERMANY  Hotline: 00800 33300666	Mail: Tempo-service-de@teknihall.de Tempo-service-fr@teknihall.com Tempo-service-it@teknihall.com Tempo-service-es@teknihall.com
--	--

### Purchaser

**Name:** \_\_\_\_\_

**Street:** \_\_\_\_\_

**Town, post code:** \_\_\_\_\_

**Telephone:** \_\_\_\_\_

**Signature:** \_\_\_\_\_

**Vertrieben durch** (keine Serviceadresse):  
**Commercializzato da** (nessun indirizzo assistenza):  
**Comercializado por** (no obedece a la dirección de atención al cliente):  
**Distribué par** (pas d'adresse de service):  
**Sold by** (no service address):

Tempo International GmbH  
Friesenweg 7  
22763 Hamburg  
Germany