INSTRUCTION MANUAL






















Rox WL Stainless 38958

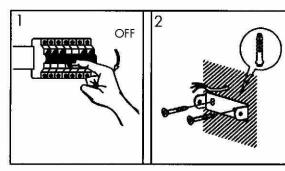


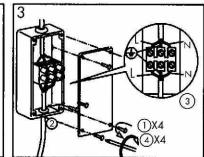





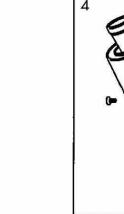



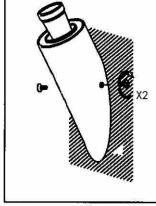

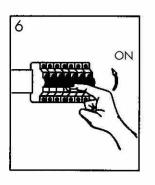

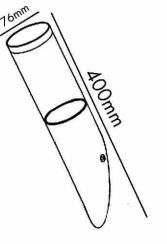

FittinQ B.V. Smaragdweg 52, 5527 LB Hapert, The Netherlands www.qazqa.nl Q A Z Q A

SAFETY INSTRUCTION

Please study the instruction manual and below information carefully before installing or using this product. Please keep this user manual for further reference

- 1. The luminaires may only be installed by authorized and qualified technicians according the valid regulations for electrical installation.
- 2. Maintenance of the luminaires is limited to their surfaces. During maintenance no moisture can come into contact with any areas of the terminal connections or voltage control parts.
- 3. The electrical supply must be switched off at the outset, preferably by means of a switch in the distribution box, before any installation, maintenance or repair work is undertaken.
- 4. Exterior lighting must not be installed during rain.
- 5. Take account of the minimal separation distance from other objects and the room required around the fitting.
- 6. If in any doubt, consult a professional, taking local installation requirements into account. Some countries stipulate that lighting may be installed only by registered installers.
- 7. Clamping screws in electrical connections must be adequately tightened. This is particularly the case with 12V low voltage conductors.
- 8. Clean with a clean, dry cloth or brush, use no solvents or abrasives. Avoid dampness on all electrical components
- 9. Take account of all available technical information.
- 10.Meaning of symbols:





Protection Class I: the fitting must be earthed

Protection Class II: the fitting is doubled insulated and does not require earthing

Protection Class III: the fitting is low voltage

(| 0.5m | Minimum distance from lighted objects (meters)

The type of lamp and maximum size and wattage indicated in each lighting unit must not be exceed; different items require different kind of light sources with different bulb icons

 
The armature is designed to work only with the indicated voltage. Different items require different working voltage.

The luminaire can be used in combination with a dimmer

The reference light angle and light space of the luminaire

This luminaire cannot be disposed together with normal domestic waste in standard rubbish can, but you have to bring it to a staging area for electrical waste

11. Take note of the symbols when connecting wires:



| s, made mid commonly made | | | | | | | | |
|---------------------------|---|--------------------------|--------------------|--|-----------------------------|------------------------|-----------------------|-----------------------|
| | | (DE) | (GB) | (FR) | (NL) | (PL) | (NO) | (DK) |
| | L | Stromführender Leiter | Live conductor | Conducteur | Spanning- voerende draad | Przewód prądowy | Strømførende leder | Strømførende leder |
| | 1 | Schutzleiter | Earth conductor | Conducteur de protection (terre) | Aardkabel | Przewód uziemiający | Jordledningen | Jordledningen |
| | N | Neutralleiter | Neutral | Conducteur | Nulleider | Przewód | Nøytralleder | Neutralleder |

| | | (SE) | (FI) | (IT) | (ES) | (CZ) | (PT) | (GR) |
|--|---|------------------------|-------------|---------------------------|---------------------------|----------------------|----------------------|------------------------|
| | L | Strömförande ledare | Virtajohdin | Conduttore sotto tensione | Conductor de corriente | Vodič pod napětím | Condutor vivo | Ρευματοφόρος αγωγός |
| | 1 | Skyddsledare | Suojajohdin | Conduttore di terra | Conductor de protección | Ochranný vodič | Condutor de terra | Αγωγός γείωσης |
| | N | Neutralledare | Nollajohdin | Conduttore neutro | Conductor neutro | Neutrální vodič | Condutor neutro | Ουδέτερος αγωγός |

FittinQ B.V.

Smaragdweg 52, 5527 LB Hapert, The Netherlands www.qazqa.nl



