

# Voltage Alert


## IAC-D

### 1: Self testing Before use:

Close the tester probe to any hot line, bestest ll will light up together with buzzer sound. If the light and sound are weak, please replace the batteries inside.


### 2: Test voltage present:

Close the test pin to live parts, the tester will light up together with sound.

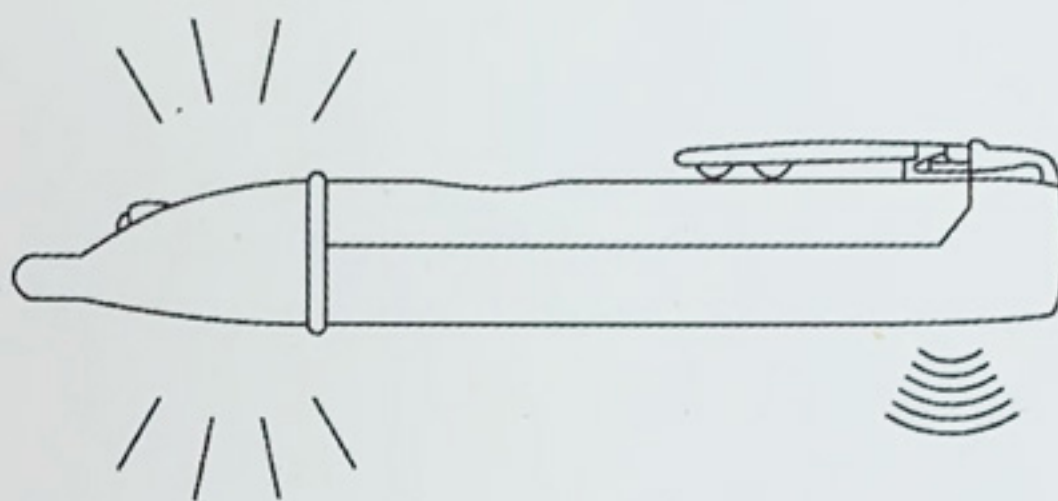

### 3: replace batteries:

Please refer to the following picture to replace batteries

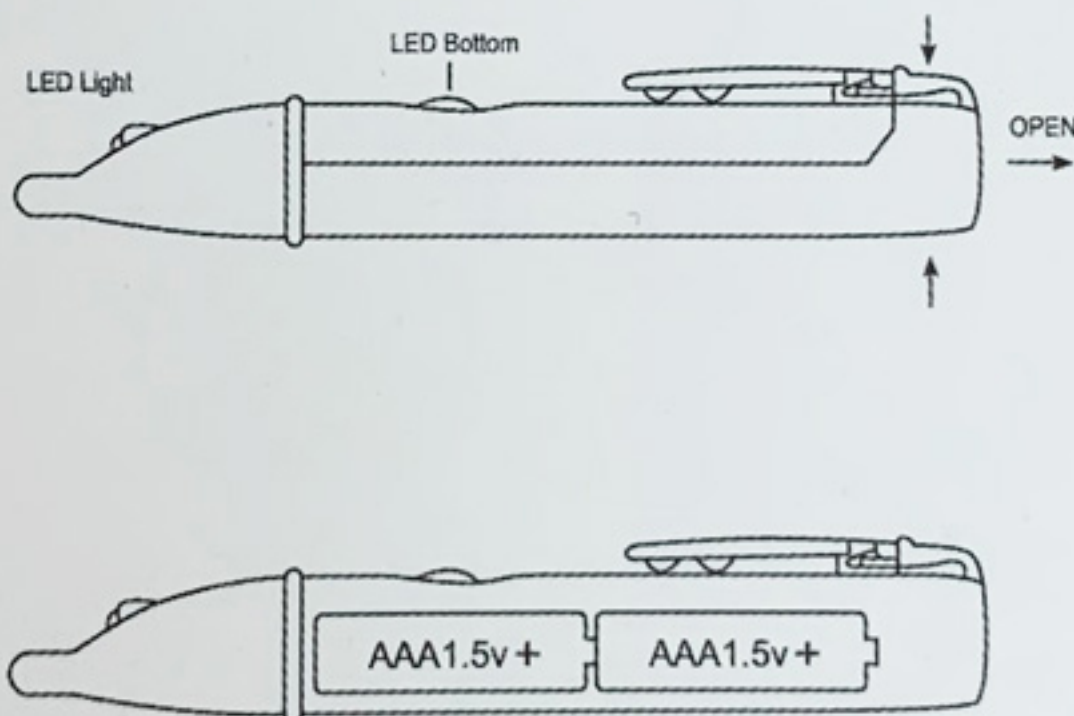

### 4: Don't place the tester near high voltage:

#### Warning:

- Check before use.
- Never test the voltage which than 1000V AC
- Test voltage range:90V-1000V AC
- IP54,IEC 1010
- AAA1.5 X 2
- Battery life: 6 hours for continious using

Standby for 1.5 years.